



Ignition Systems for Russian Motorcycles (Part III: PM-11 and PM-302 Breaker)




*Ernie Franke
eafranke@tampabay.rr.com
(01/2011)*

PM-11 and PM-302A Breaker Systems

The PM-302 ignition system is not dependent on the supply voltage (6-V or 12-V). They differ only in ignition coils B-201 (6-Volt) and B-204 (12-Volt). The higher current in a 6-volt ignition system leads to increased contact breaker pitting, compared with a 12-Volt system.

1. Spark Plug (0.6-0.7mm gap)
2. Breaker Gap (0.4-0.6mm)
3. Breaker Contacts
4. 12-Volt Battery
5. Ignition Switch
6. Ignition Coil (B-201 or B-204)

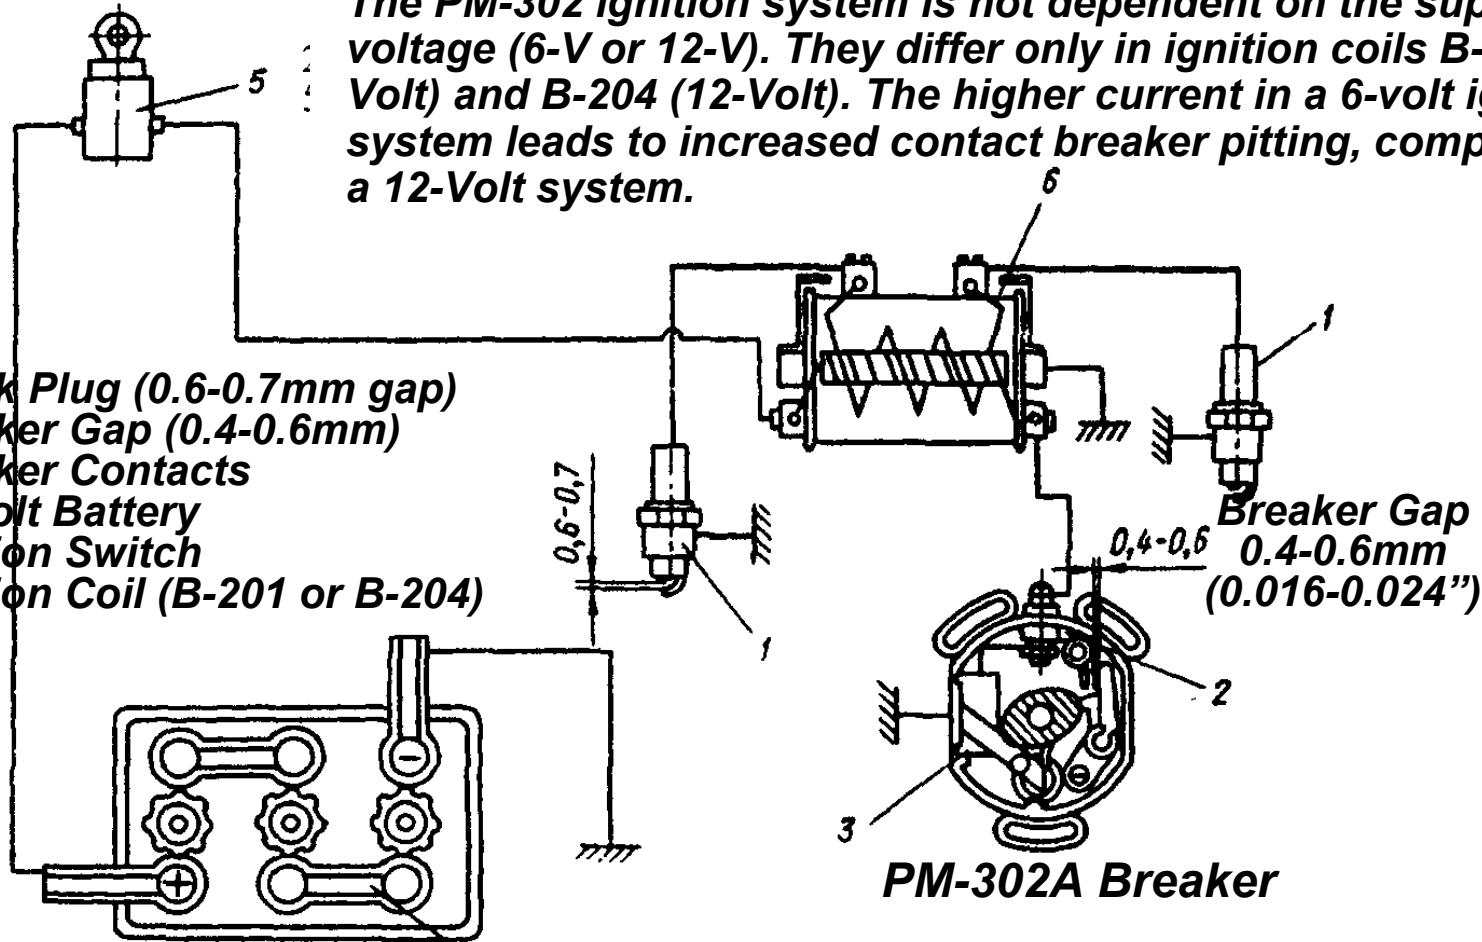


The basic ignition system is simple. The breaker points are normally closed, allowing the magnetic field to build in the ignition coil. When the cam shaft rises, opening the breaker points, the collapsing magnetic field induces a high-voltage in the secondary winding of the coil.

Breaker PM-302 and Ignition Coil B204


- Dnepr MT-10.36 / MT-11 / MT-16 and Ural M-62 / M-63 / M-66 / M-67

**High-Tension
Output to
Spark Plug**

**Front
Ignition
Cover**

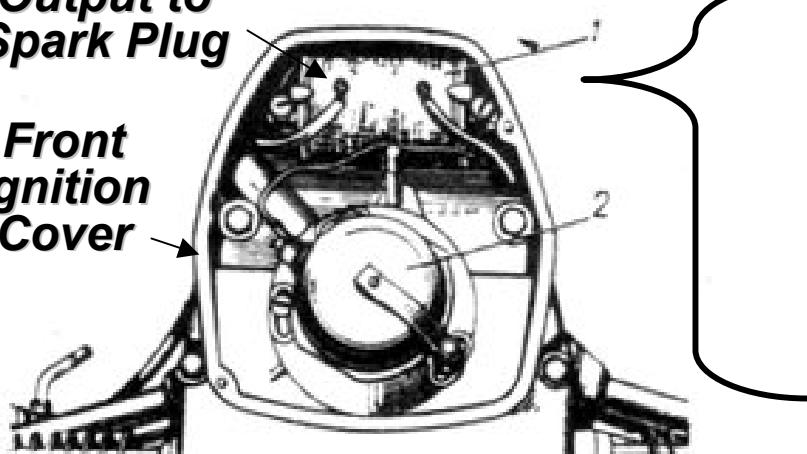

1. **B204 Ignition Coil**
2. **PM-302A (IIIM-302A) Breaker Unit**

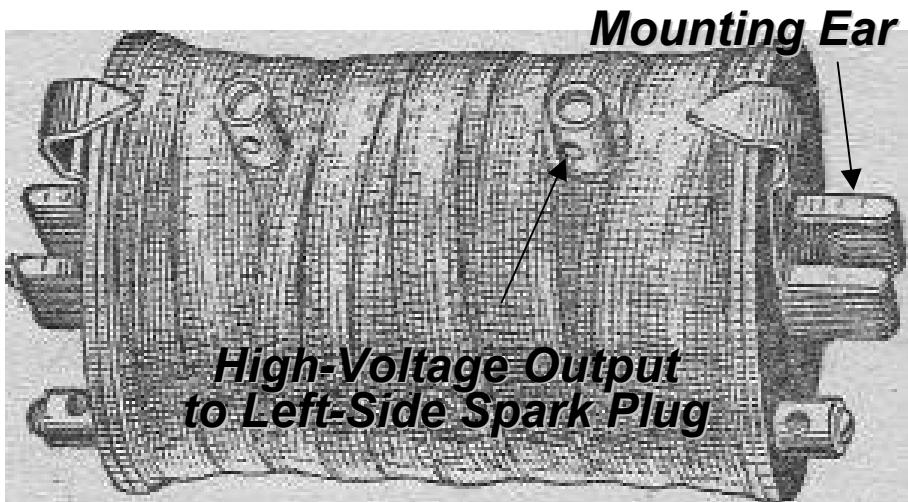


**Low-Voltage
Primary Terminal**



The introduction of the PM-301/PM-302 breaker system eliminated any need for a distributor and provided automatic spark advance/retard. The centrifugal breaker points automatically adjusted to engine rpm's. The output of the ignition coil was connected directly to each of the spark plugs.

PM-302 Allowed Elimination of the Distributor

Four-Stroke Cycle

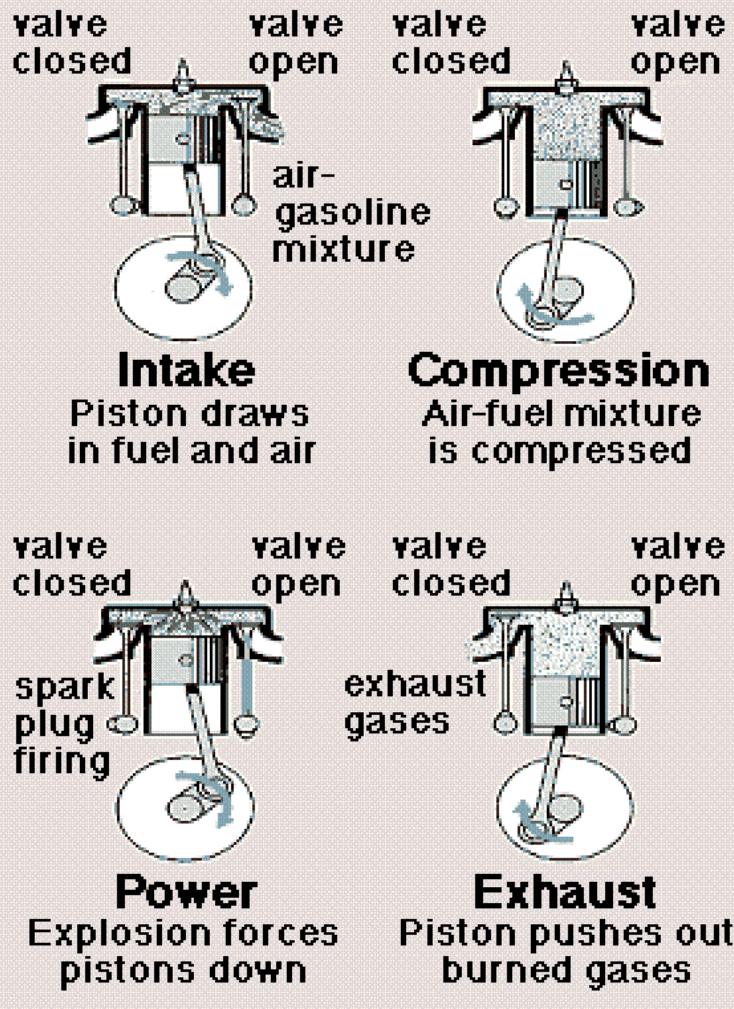

Four-stroke engines take two revolutions to reach the firing point.

Both plugs fire simultaneously on the left and right cylinders, one spark being formed when the compression stroke finishes in one cylinder and the other (needlessly) during the exhaust stroke.

PM-302A (Центробежен регулатор за ПМ302) 12-Volt Breaker for Dnepr (MT-10.36/ MT-11/ MT-12/ MT-16) and Ural (M-62/ M-63/ M-66/ M-67/ M-67.36/ Tourist)



*Used with Ignition coil
B201A 6-Volt) or B204 (12-Volt)*

Breaker Points



Carrier



Centrifugal Advance

Weight Pins




Cover



The PM-302 ushered in the era of automatic spark advance with the introduction of the centrifugal advance/retard, consisting of breaker points, condenser, advance weights and springs, and earned the nick-name “the mixing bowl of doom.”

PM-302A Breaker with Automatic Spark Advance

To Adjust Gap: Undo screw fastening the automatic park timer. Slacken stop screw (1) and turn eccentric screw (6) in either direction. Set breaker gap to 0.4-0.6mm (0.016-0.024"). Tighten stop screw. Recheck gap.

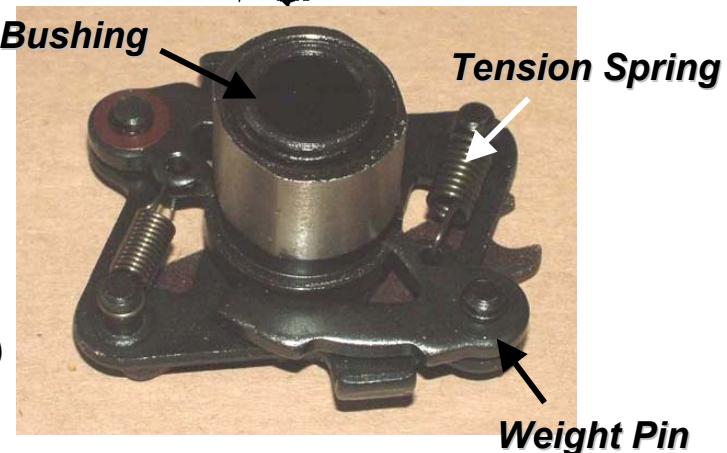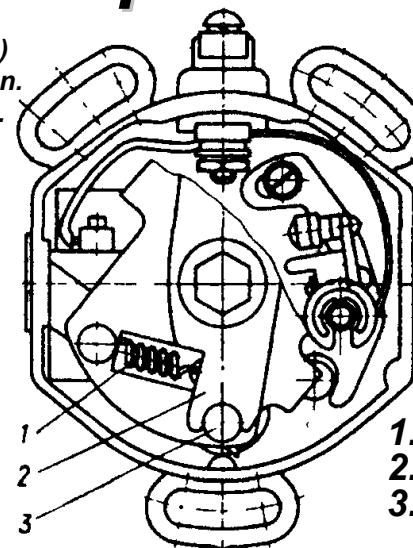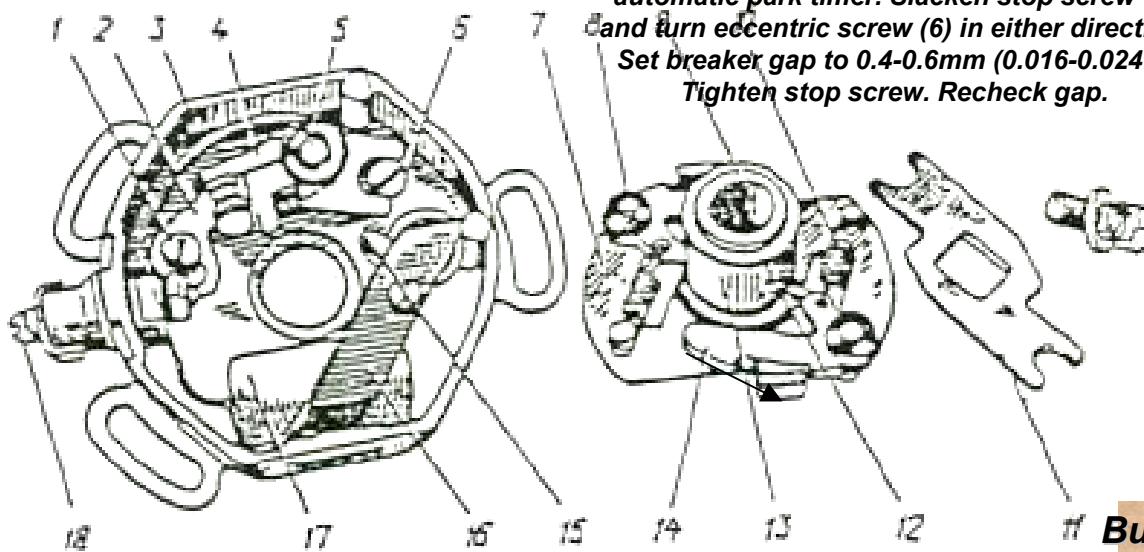

Spark-advance is determined by the relationship between rotary speed (centrifugal force) and the tension spring. The correct placement of the two-piece advance unit's top plate is a rectangular opening at each side of the mounting bolt.


PM-302-01 12-Volt Breaker



Centrifugal Advance




12-Volt Breaker Points

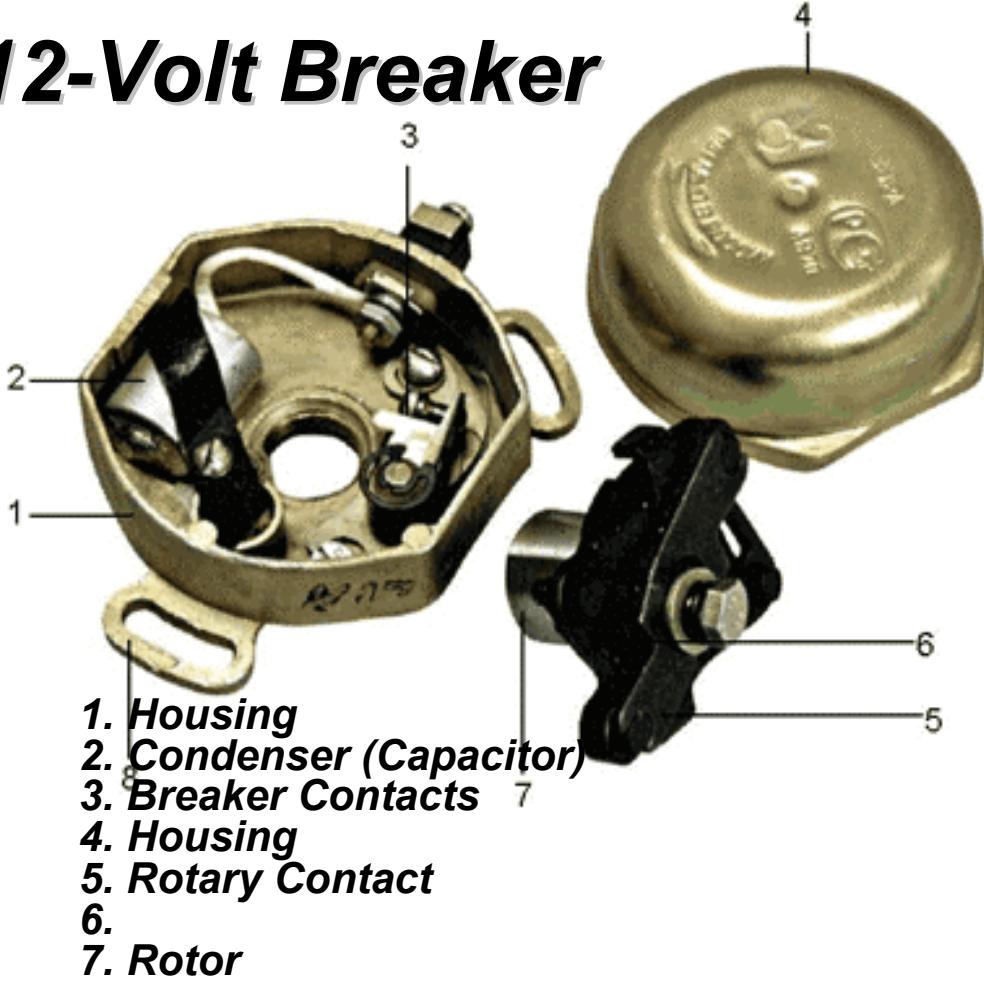


Automatic ignition advance PM-302 Breaker consists of a body with a lid, cam with a centrifugal regulator, breaker contacts, capacitor and a felt pad to lubricate the cam. The breaker is attached to the crankcase with three screws and can be rotated at an angle, through which you can set the desired time of ignition timing. The breaker gap is set using the eccentric adjusting screw.

PM-11 and PM-302A Breakers

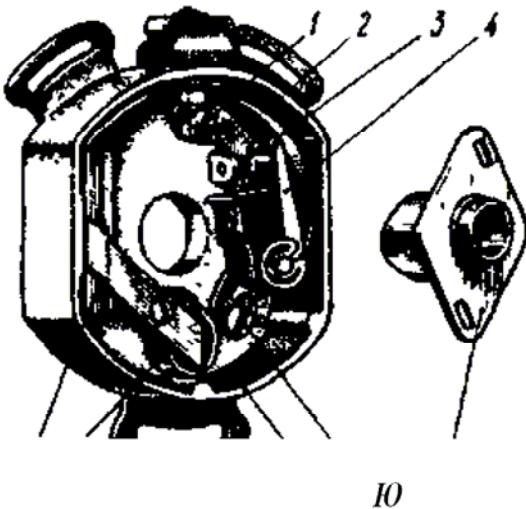

PM-11

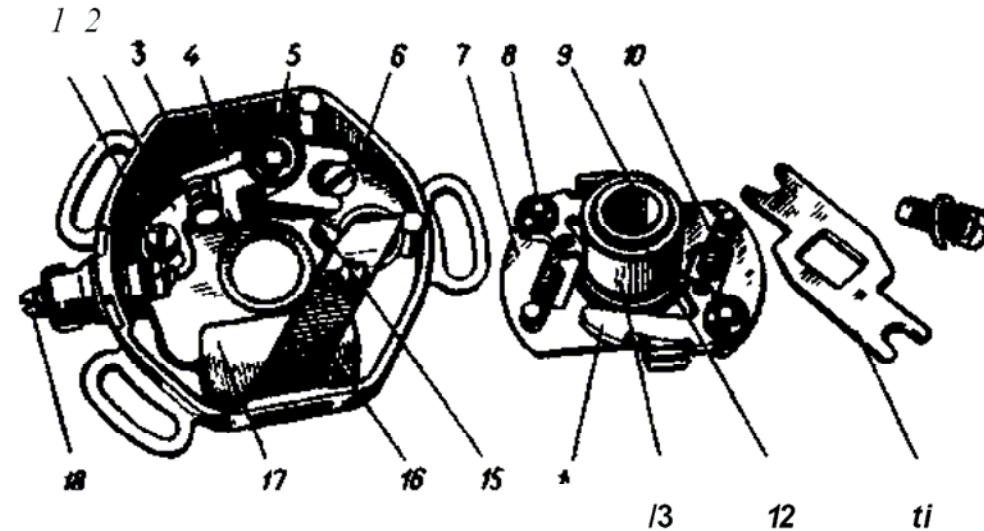

PM-302A

There are two styles of cam and flyweights. The one piece unit, less desirable due to soft pins that tend to wear out. The two piece unit better quality, but tricky as the top plate has to be put on correctly. When done correctly there are two square opens created, if done wrong the opens created are angular and the flyweights will not fling out and advance the timing.

The PM-11 was the predecessor to the more-popular PM-302/PM-302A. The weights and springs are attached to the points cam. As the cam spins on its shaft, centrifugal force causes weights to move and turn the cam on its shaft, advancing the timing of the spark, thus giving the combustion process more time to occur as the rpm increase. Full advance is usually reached around 3,000 rpm.

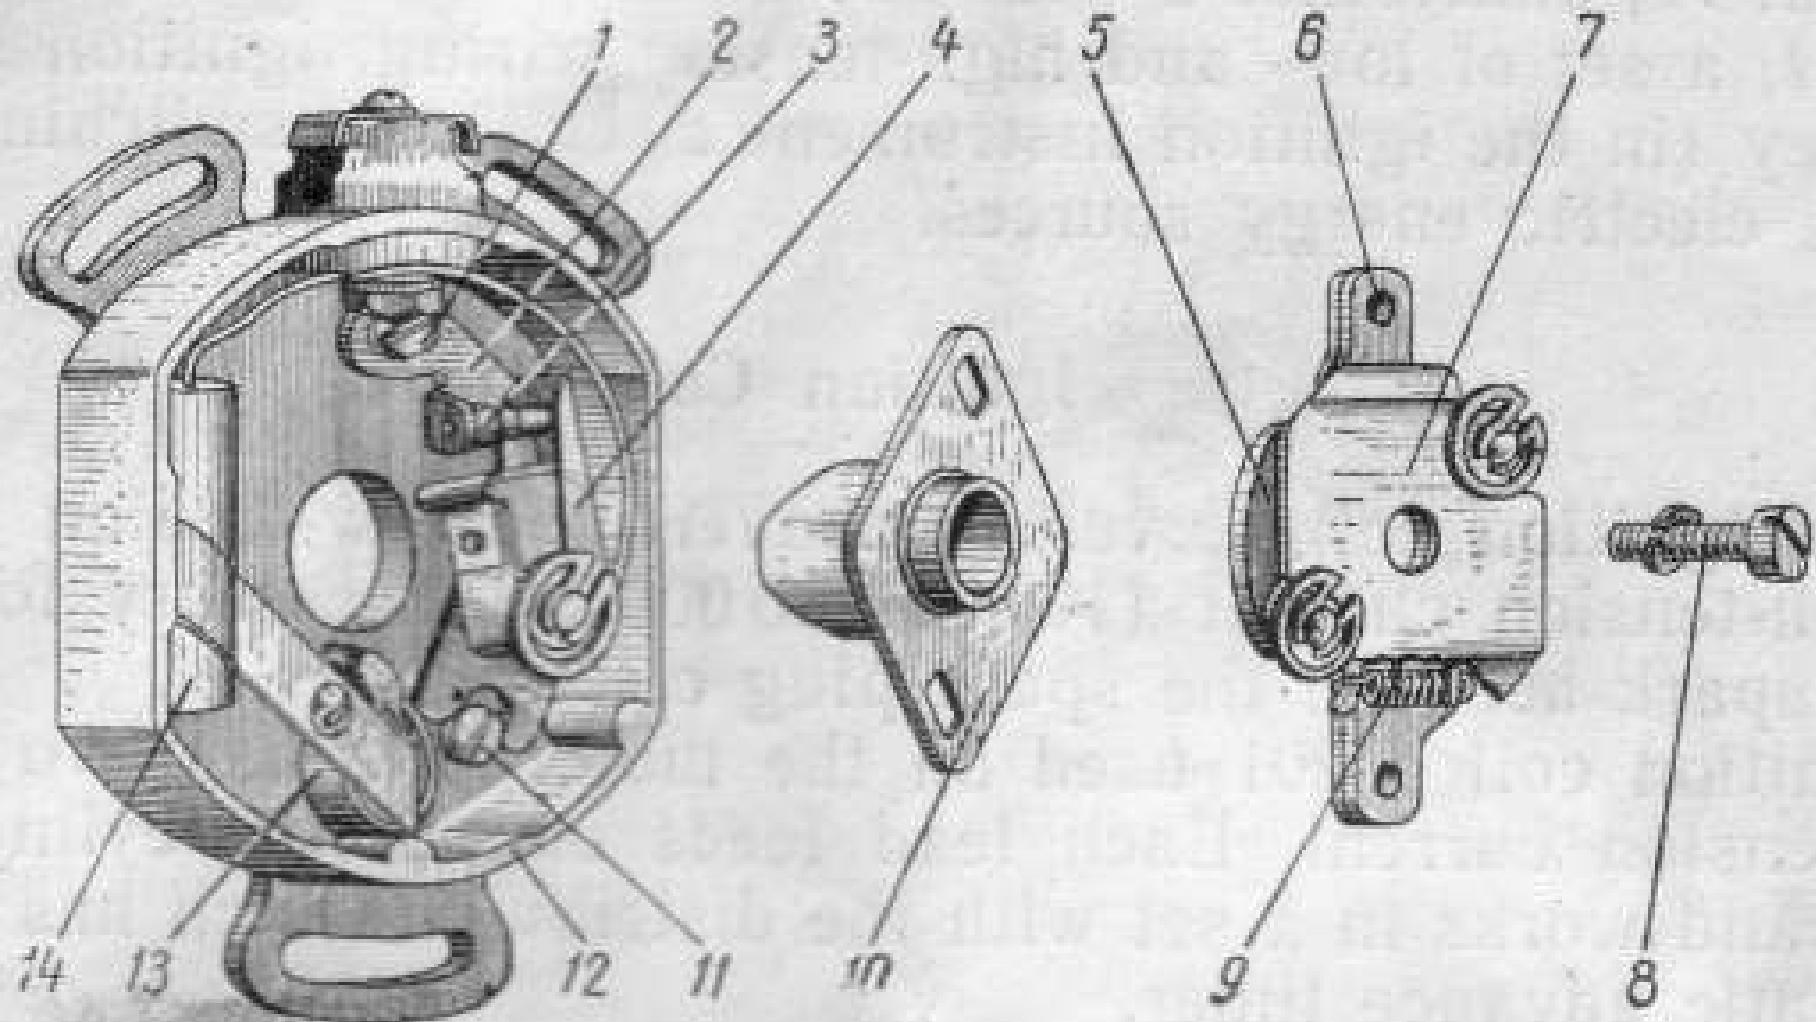



Fig. 13. Distributor with Automatic Advance Timer:

1 — contacts support fastening screw; 2 — contacts support; 3 — fixed contact; 4 — moving contact; 5 — timer weight; 6 — weight pin; 7 — fixed plate; 8 — fastening screw; 9 — spring; 10 — cam; 11 — adjusting screw; 12 — distributor body; 13 — stay with felt; 14 — condenser

Centrifugal Regulator for PM-302




Application of PM-302A Breaker (Ural (Урал) M-67 and M-67.36)

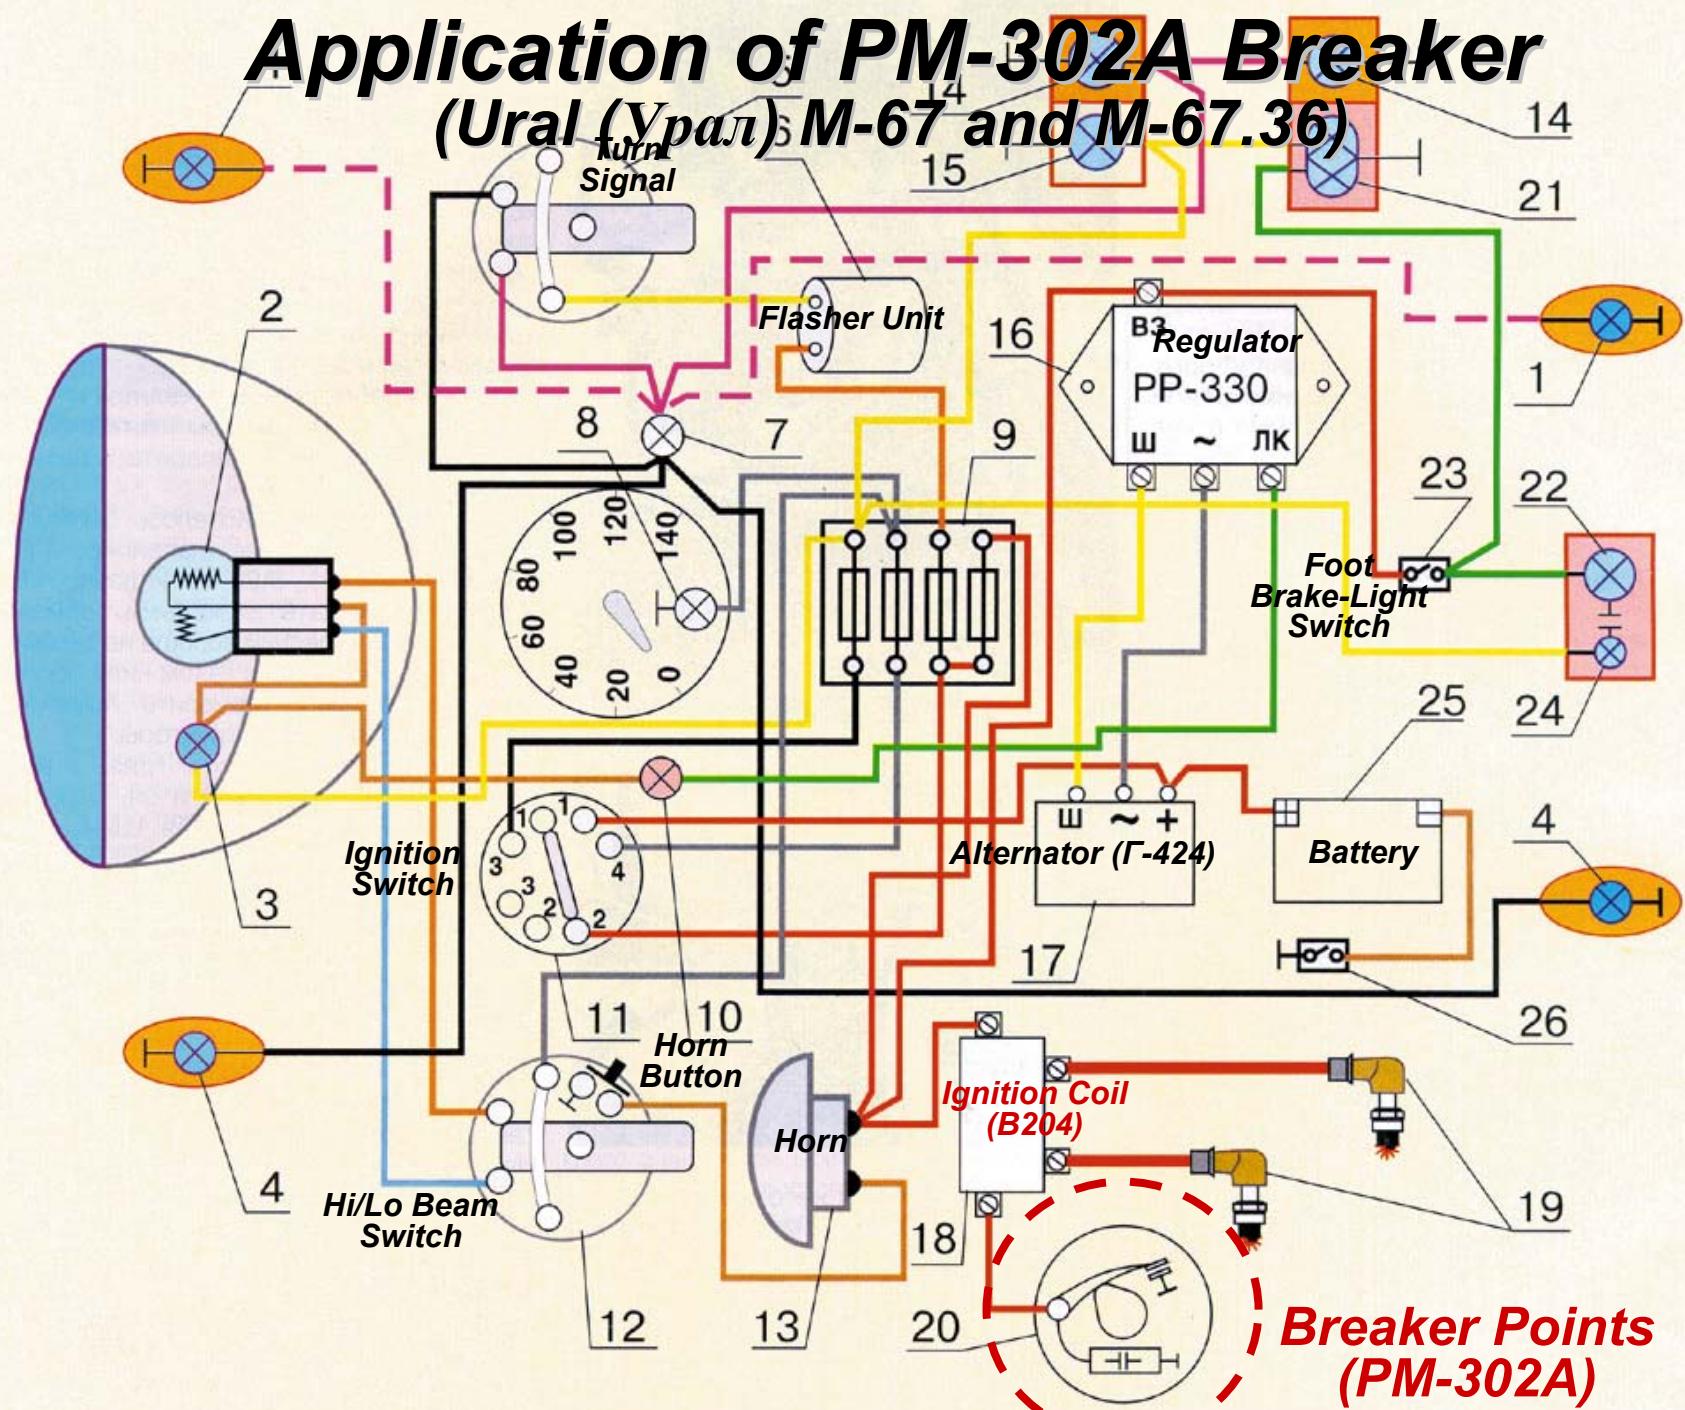

Application of PM-302A Breaker


(Днепр (Днепр) МТ-10 and МТ-10.36)

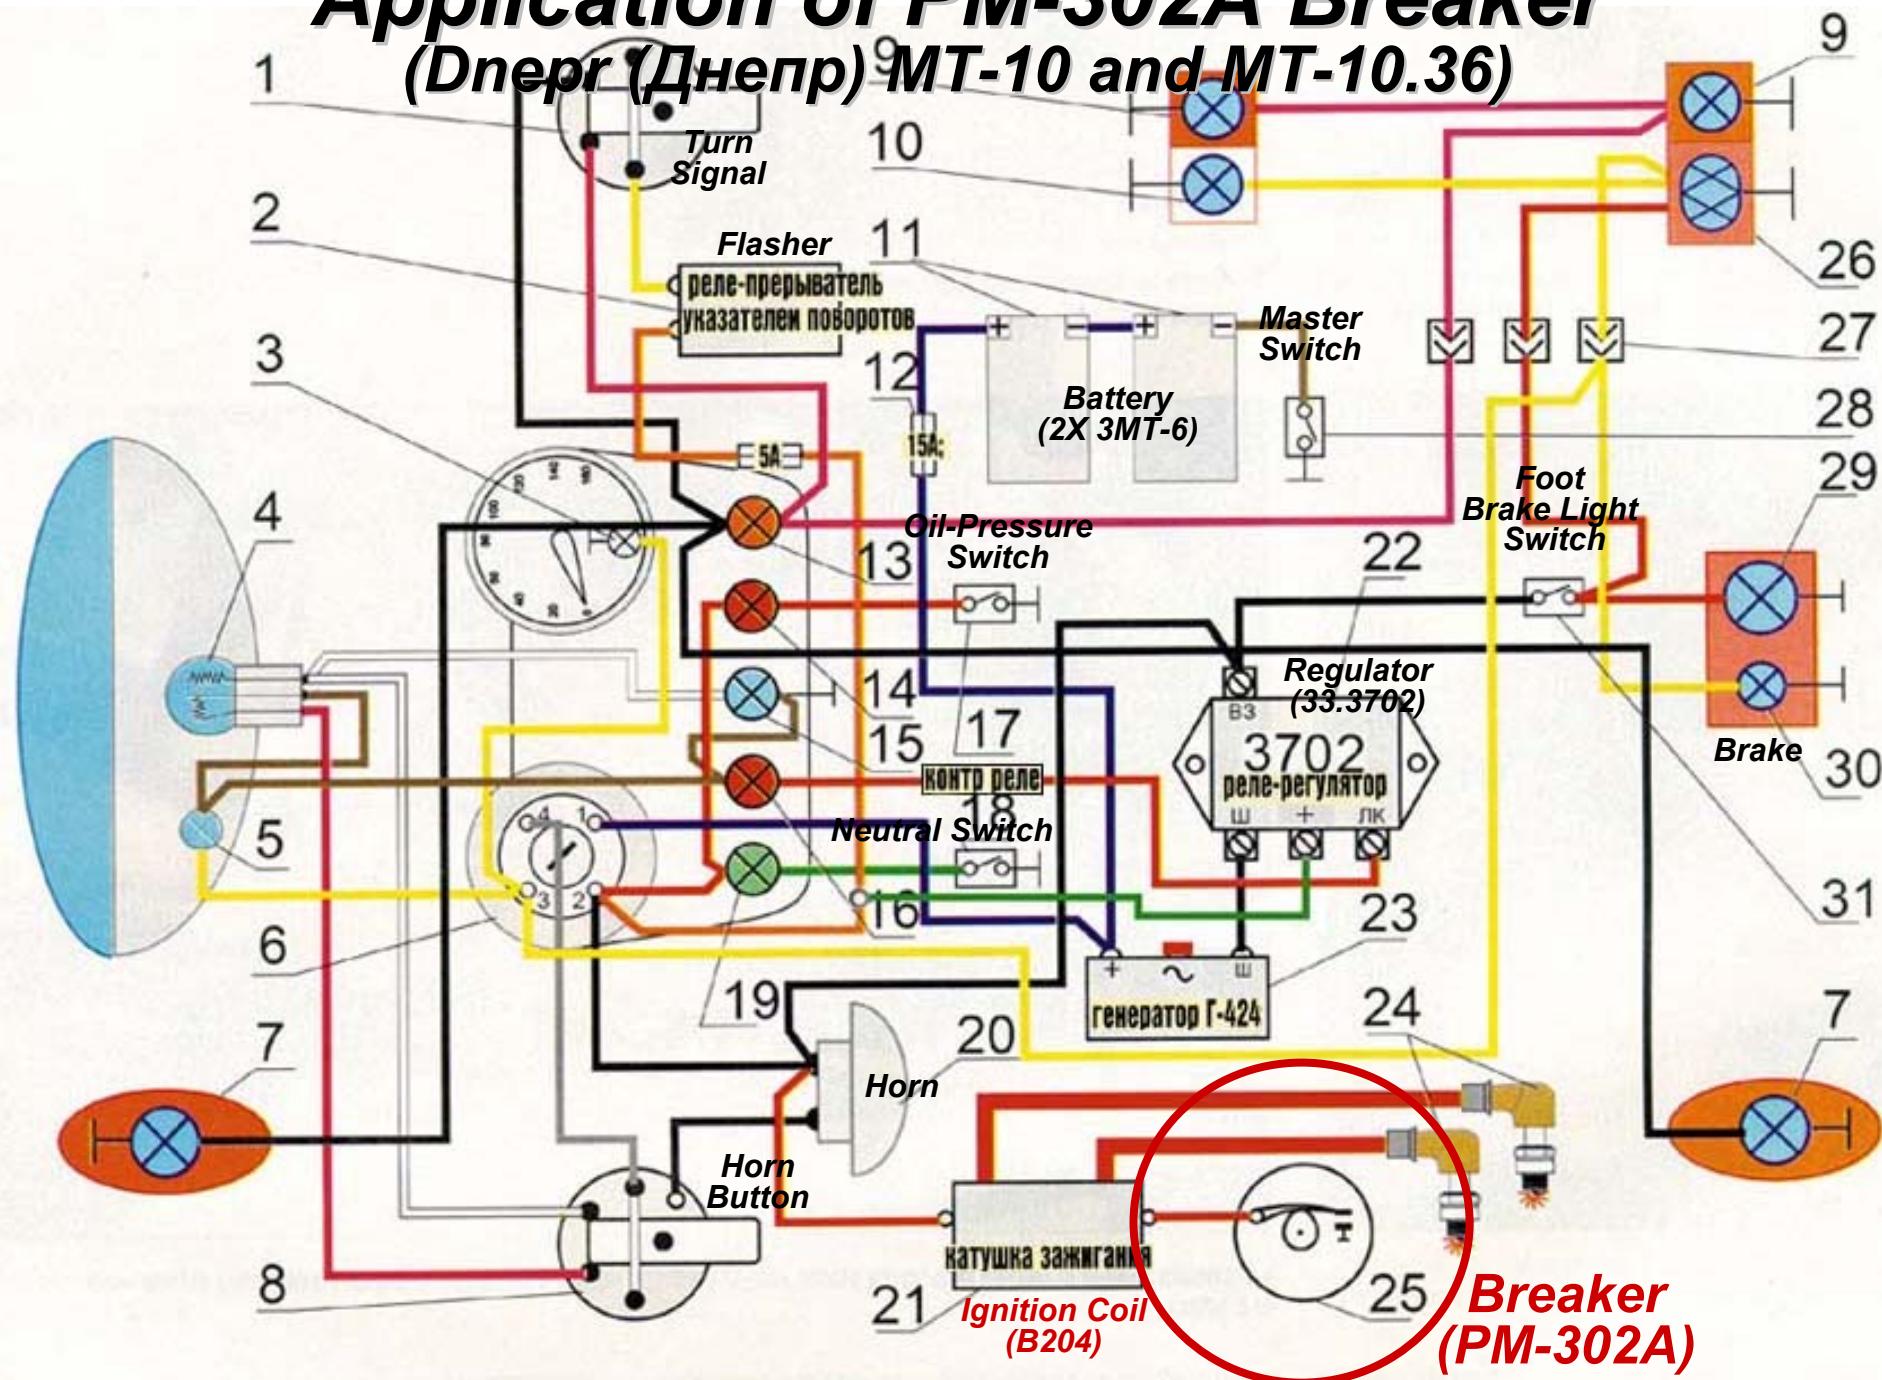


Dnepr (Днепр) Later K-750

(with Breaker PM-11A, PP-302 and B201 for Automatic Control of Firing Angle)

Breaker Points (PM-302)

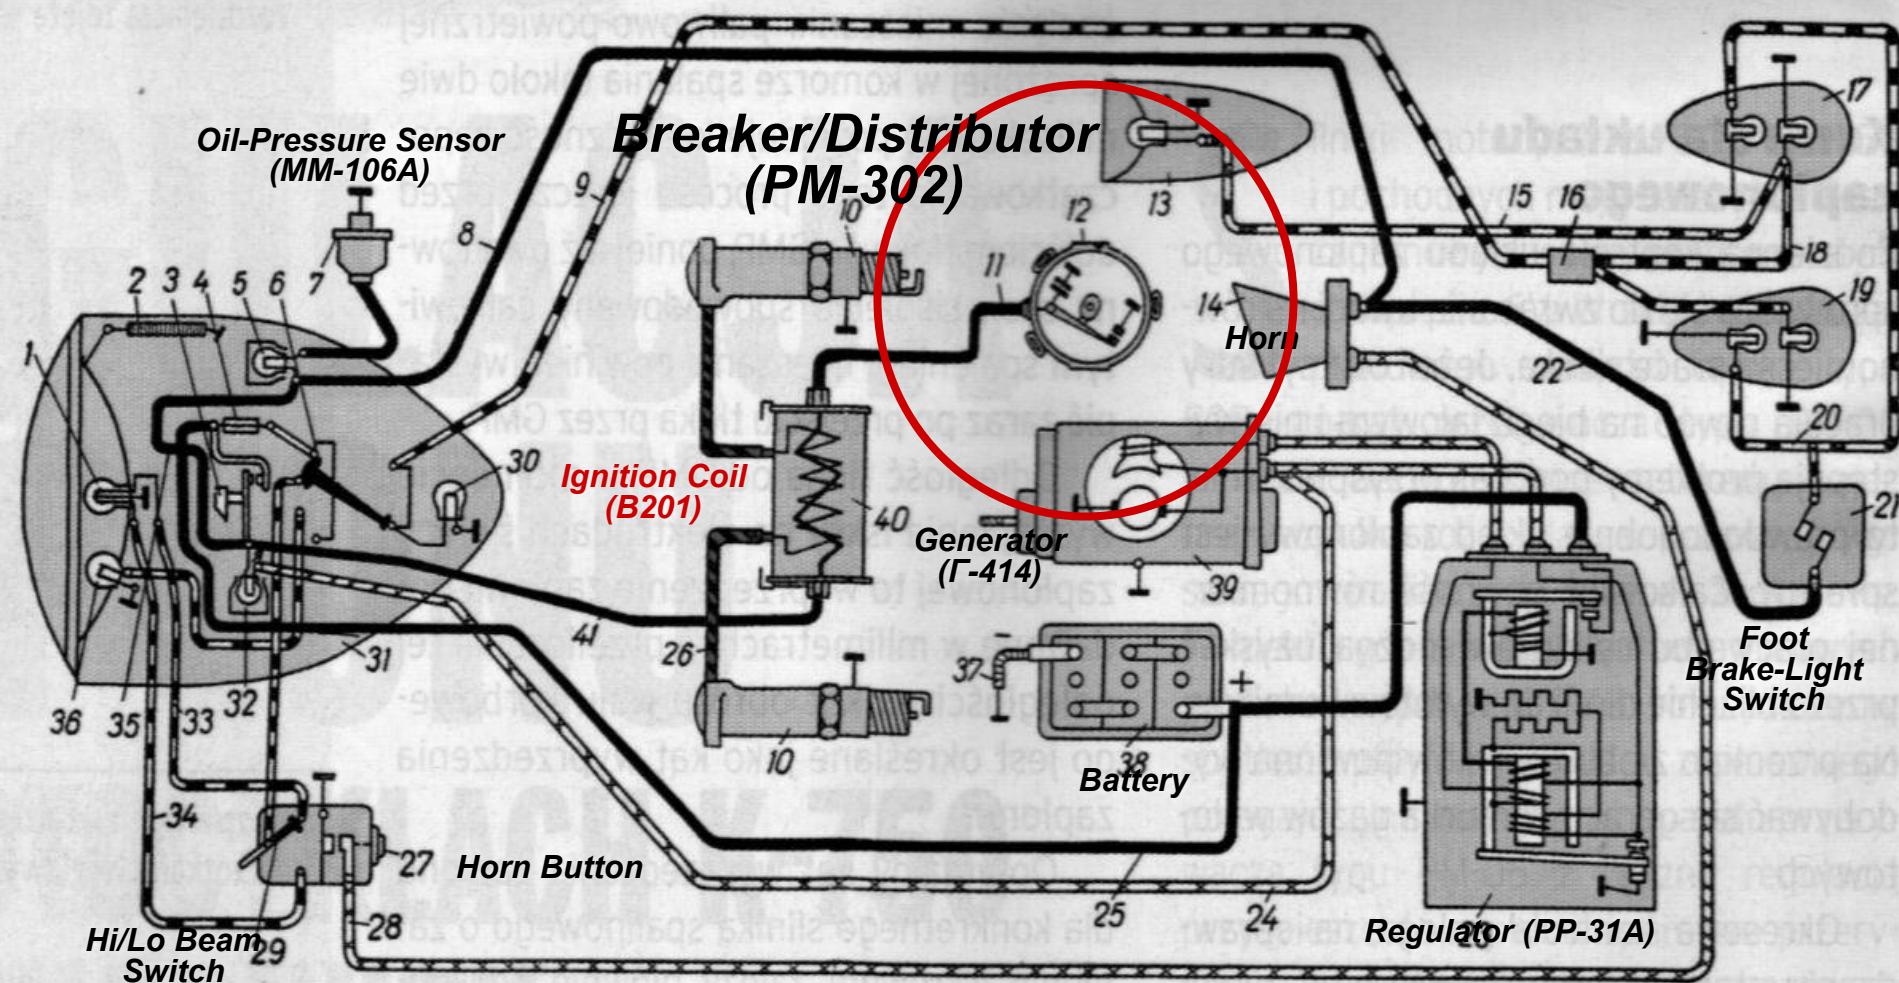


K-750M with Automatic Spark Advance

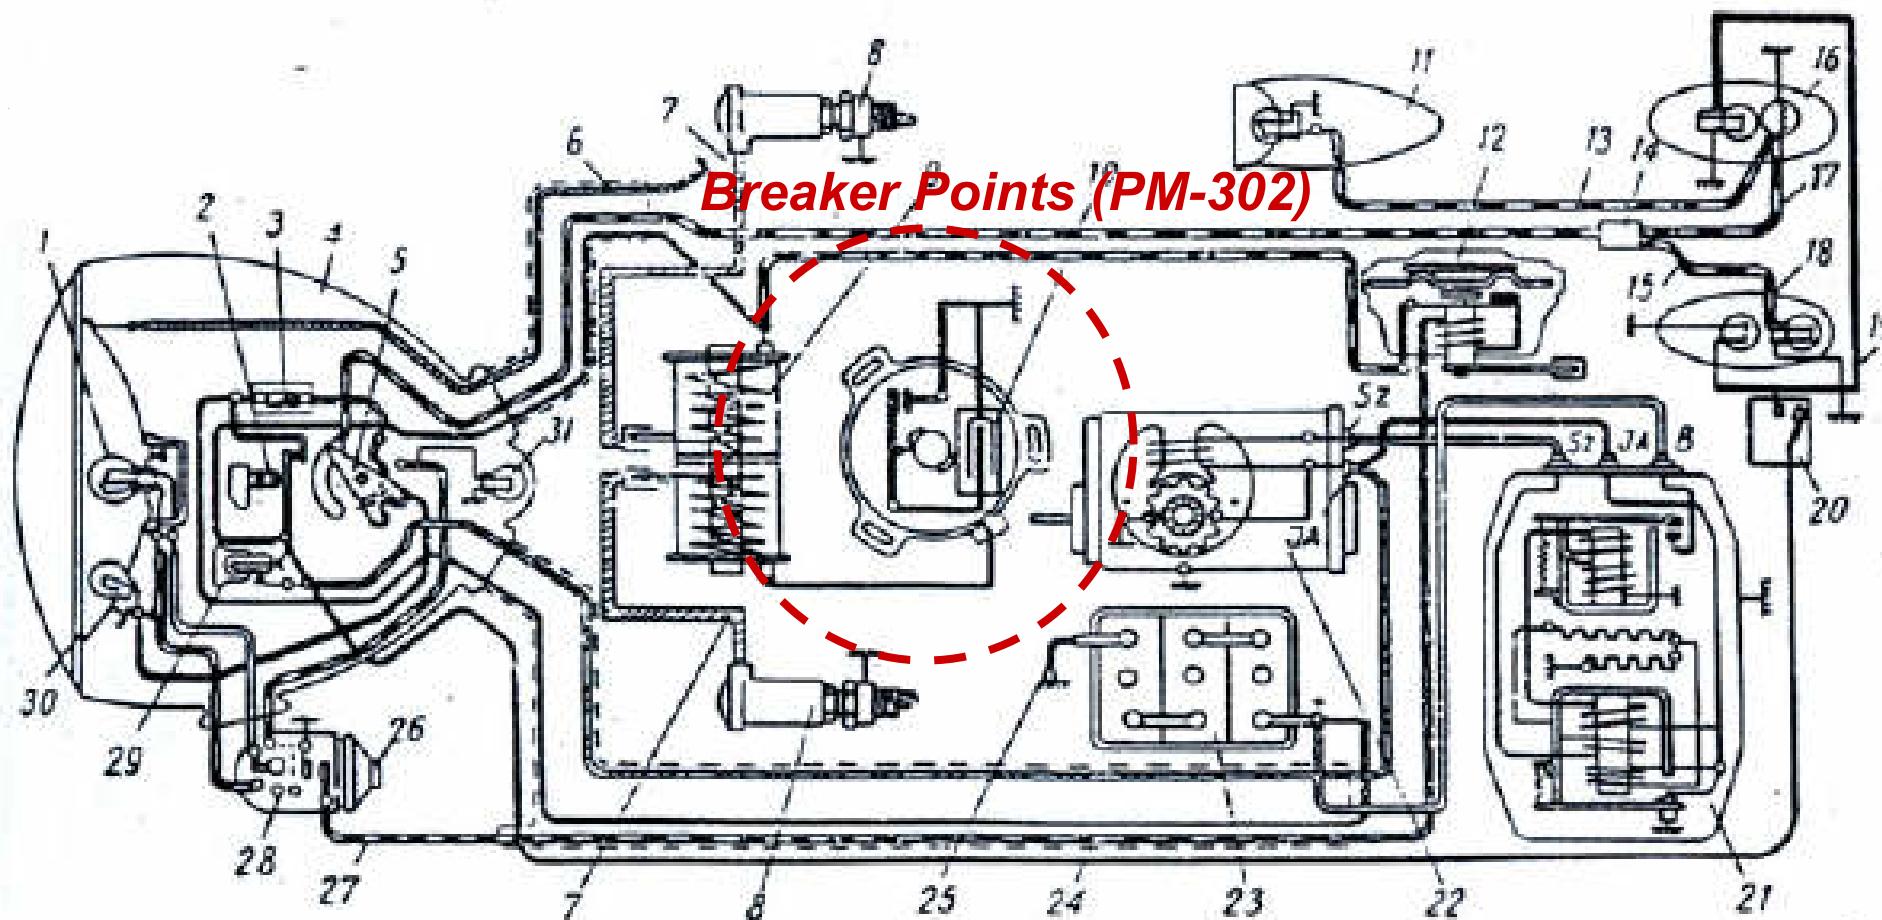

Rys. 70. Schemat instalacji elektrycznej motocykla K-750 W z zastosowaniem urządzenia przyspieszania zaplonu PM16 i pradnicy 65 W


I — żarówka światła szosowego i światła mijania, 2 — klinczyk, 3 — bezpiecznik, 4 — reflektor, 5 — główny przełącznik, 6 — przewód do „maszy”, 7 — przewód wysokiego napięcia, 8 — świeca zapłonowa, 9 — cewka zapłonowa, 10 — przerywacz, 11 — lampa przednia przyciągły, 12 — sygnał dźwiękowy, 13 — przewód przedniej lampy przyciągły, 14 — gniazdo przewodów, 15 — przewód tylnej lampy motocykla, 16 — lampa tylna przyciągły, 17 — przewód tylniej lampy przyciągły, 18 — lampa tylna motocykla, 19 — przewód światła hamulcowego („stop”), 20 — włącznik światła hamulcowego („stop”), 21 — regulator prądnicy, 22 — prądnic prądu stałego, 23 — bateria akumulatorów, 24 — przewody niskiego napięcia, 25 — przewód latający baterię akumulatorów z „maszą”, 26 — przycisk sygnału dźwiękowego, 27 — przewód sygnału dźwiękowego, 28 — przełącznik światel, 29 — lampa kontrolna, 30 — żarówka światła postojowego, 31 — żarówka nawietrzniaka skis zrywkowaniemierza

Dnepr (Днепр) Later K-650 with PM-302 Breaker

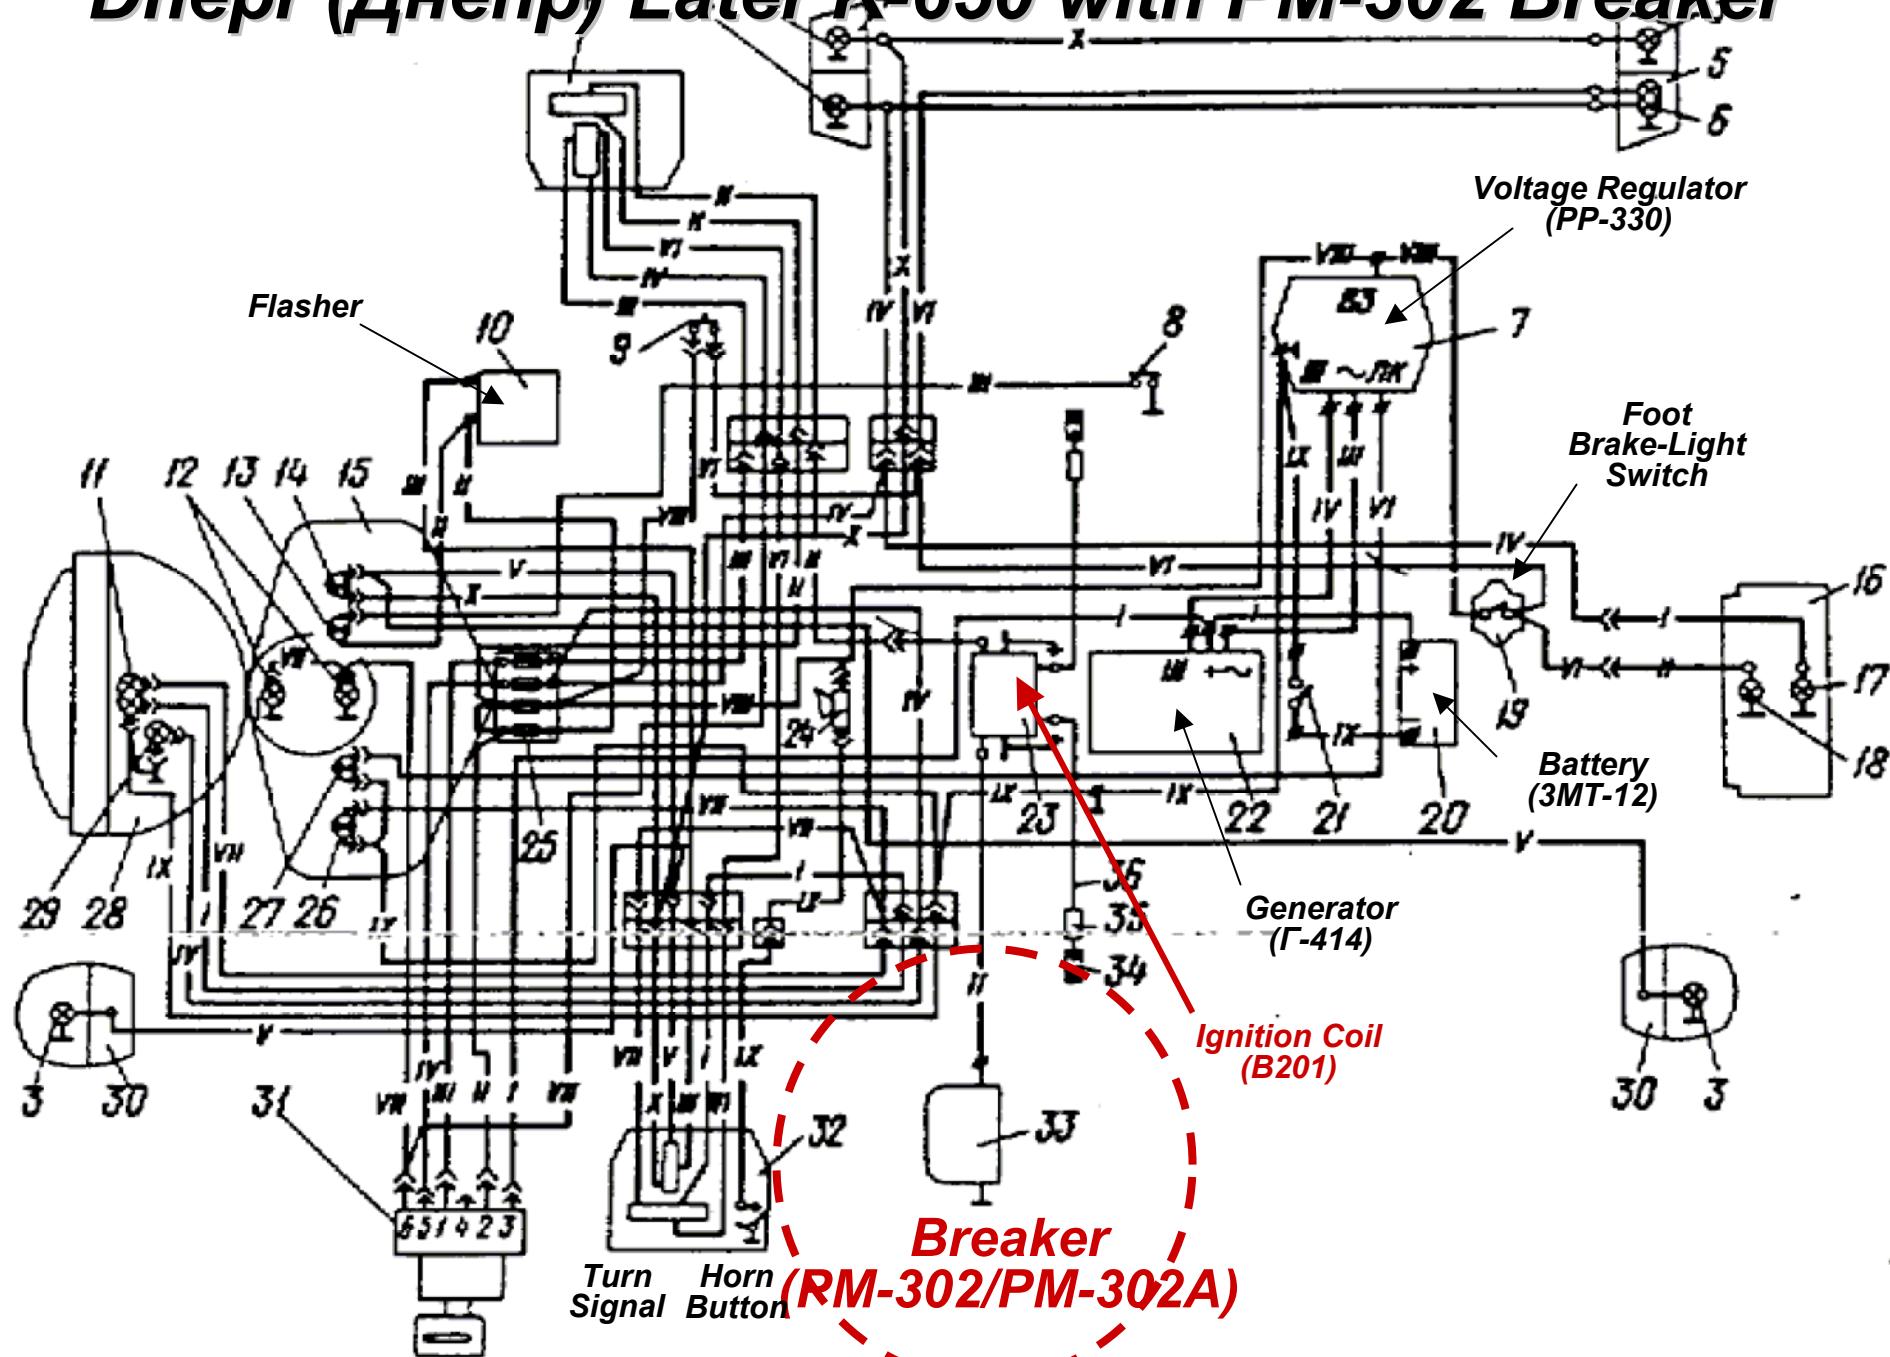


Dnepr (Днепр) Later K-650 and MT-9

with PP-302 Regulator PM-302 Breaker and B201 Ignition Coil

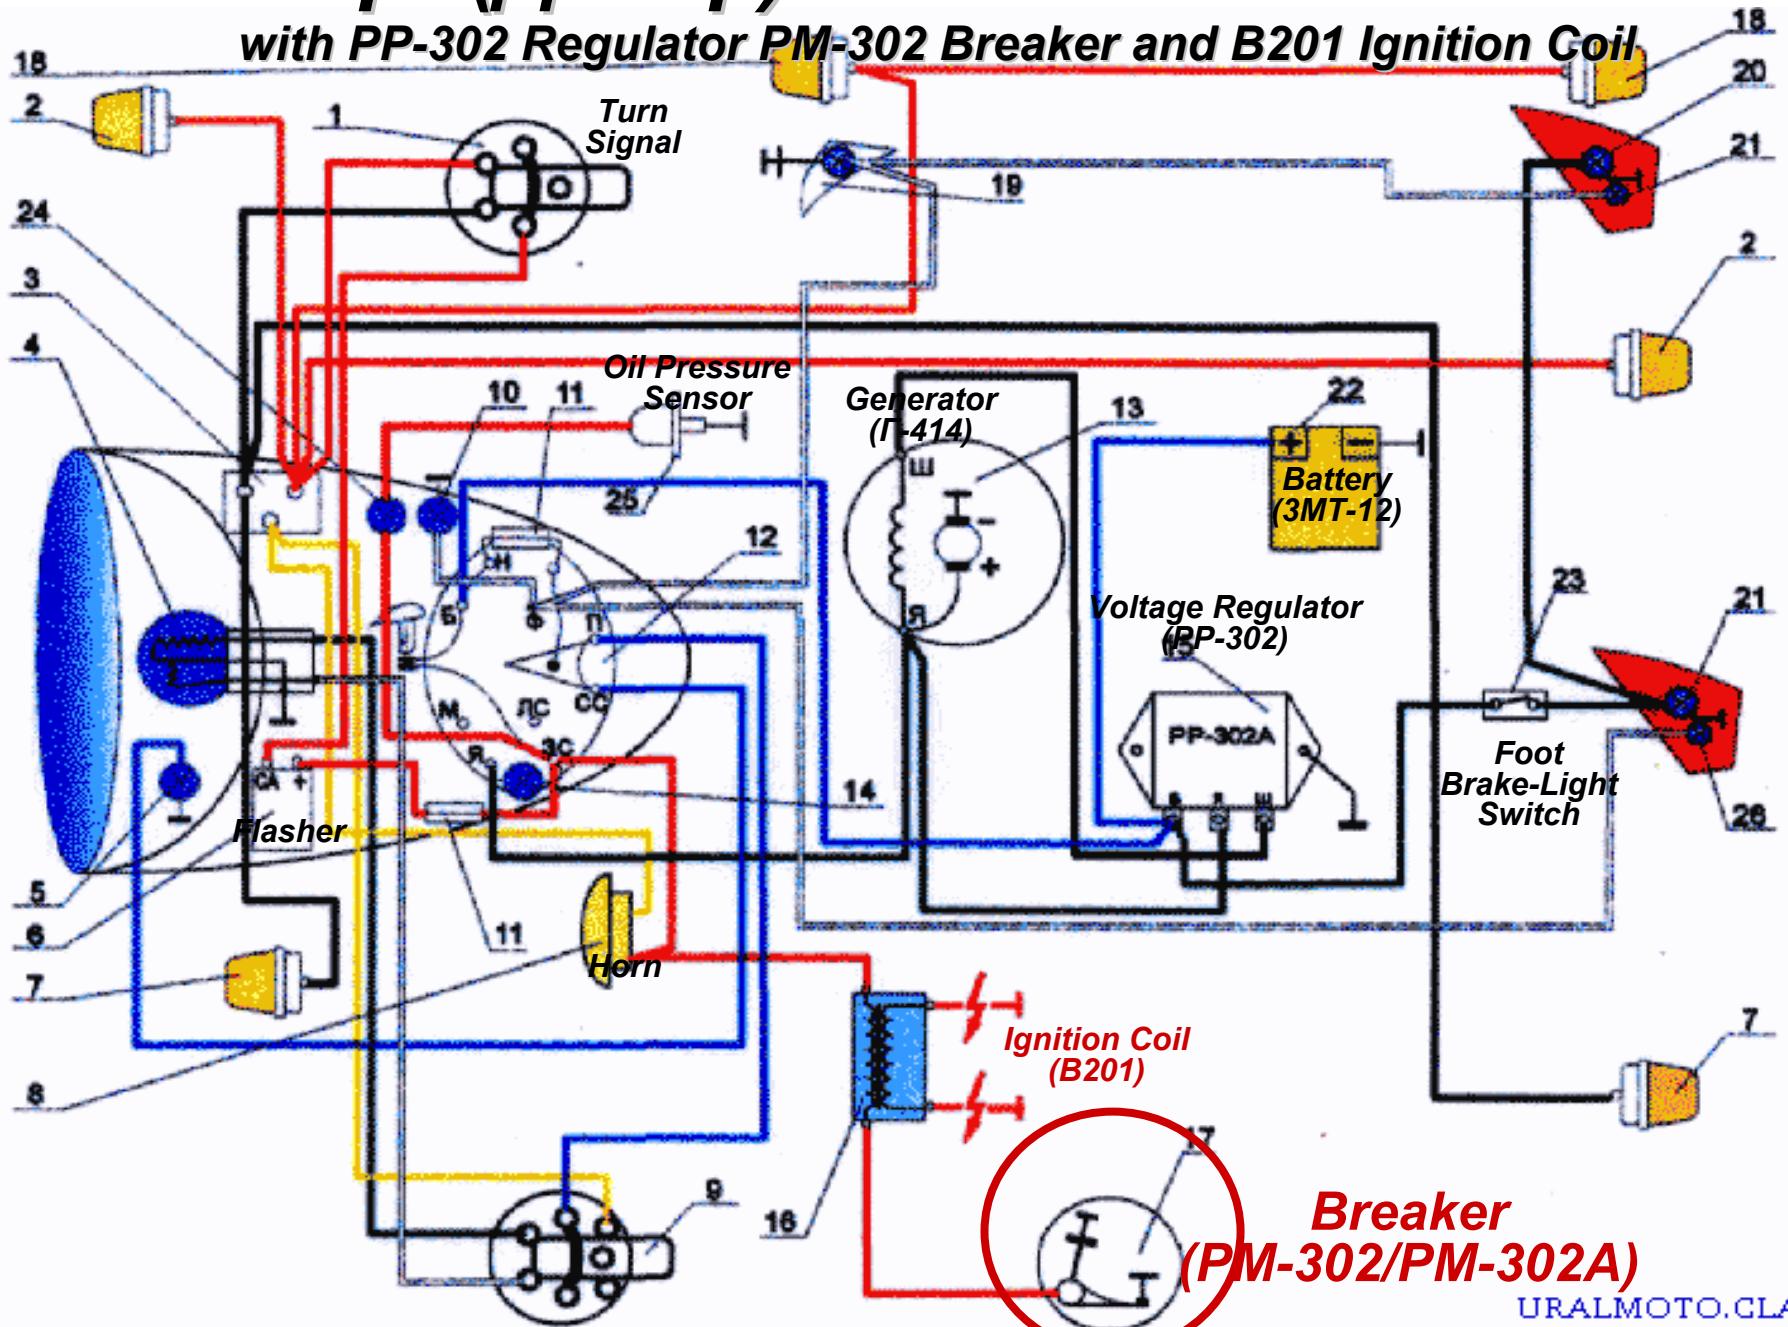


**Breaker
(PM-302/PM-302A)**

Днепр (Днепр) Later K-650

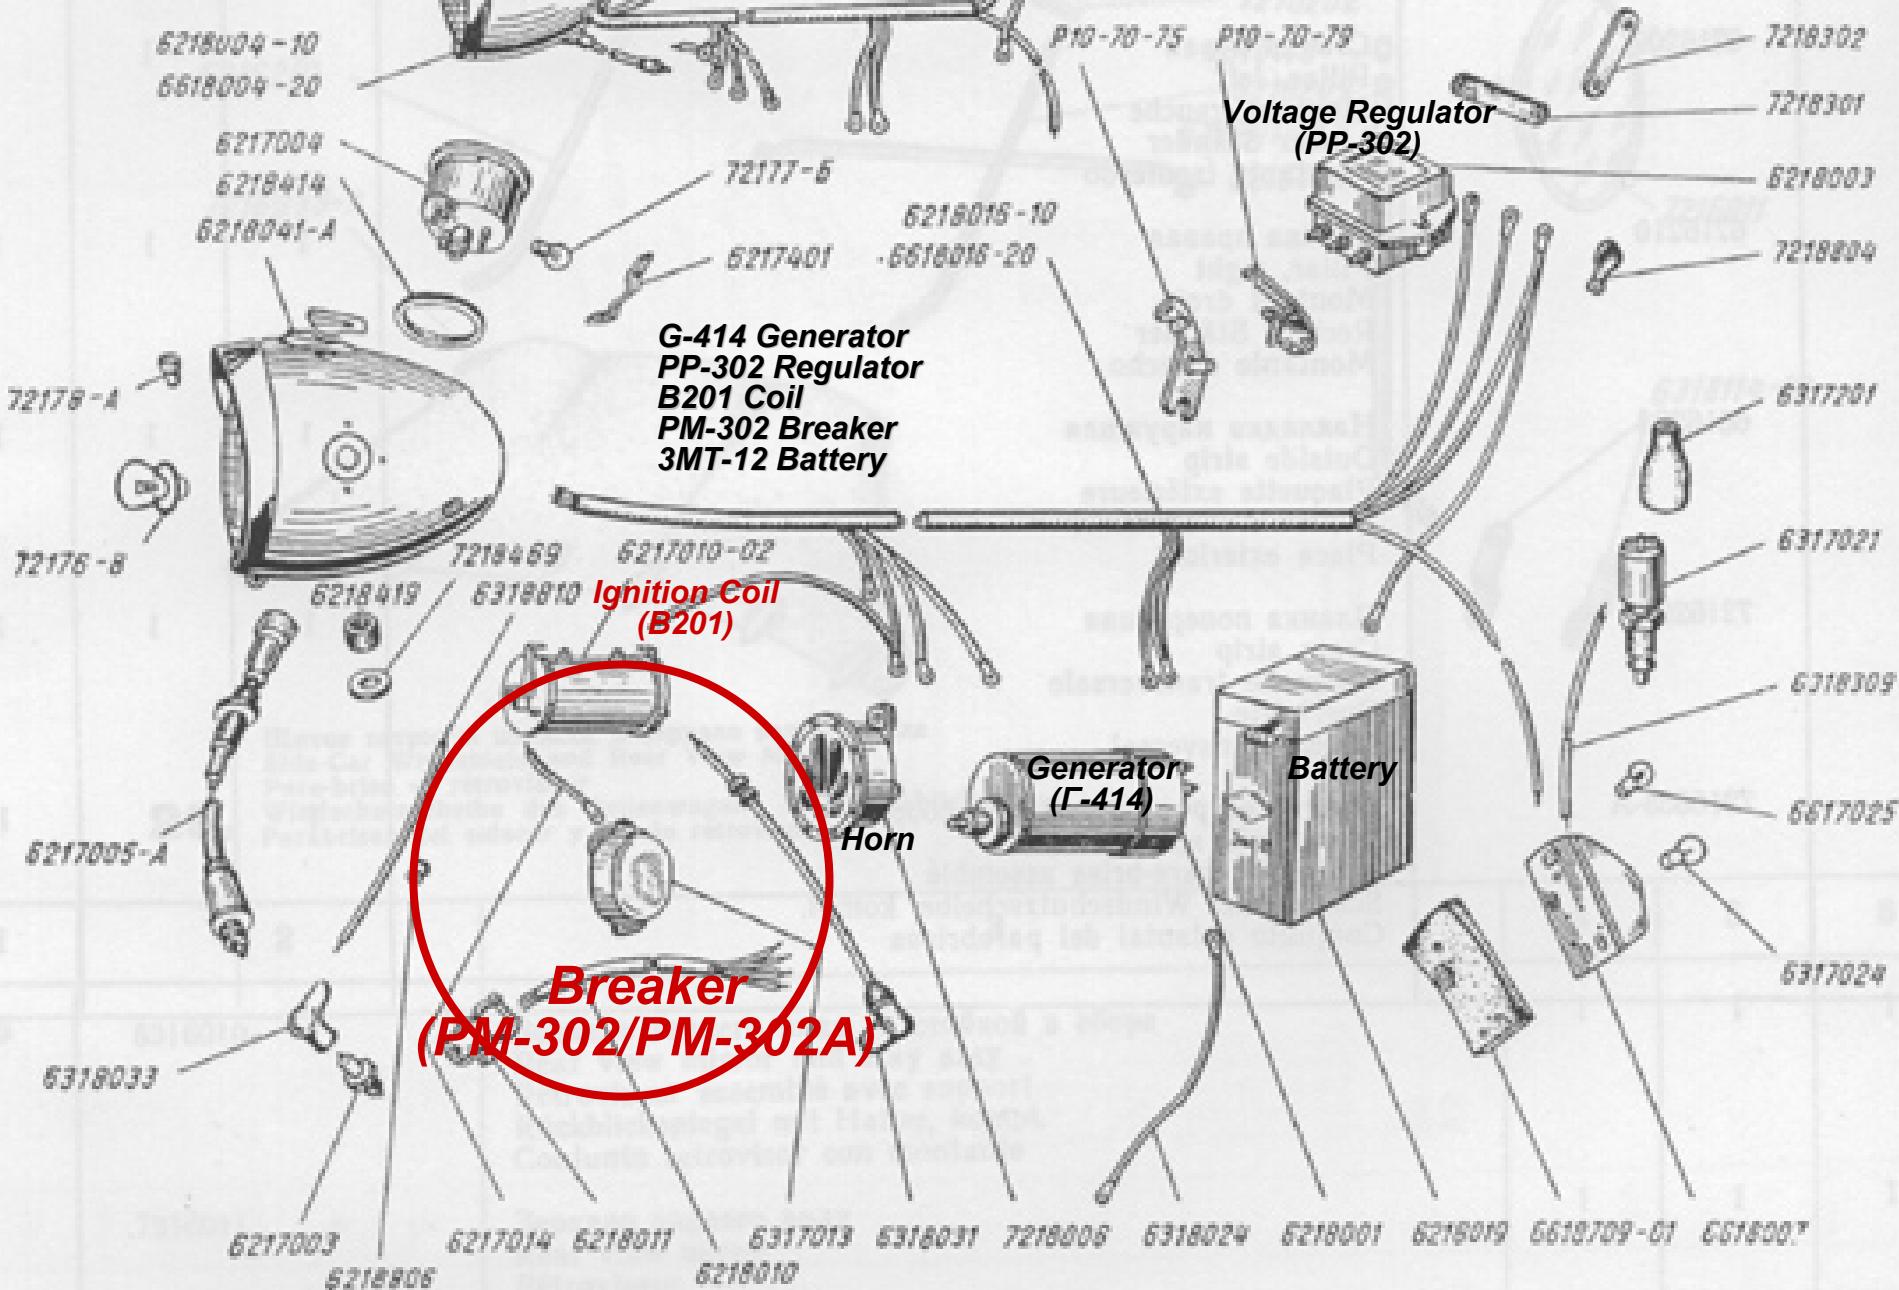


Dnepр (Днепр) МТ-9 with Automatic Control of Firing Angle (B201A Ignition Coil and PM-302 Breaker)

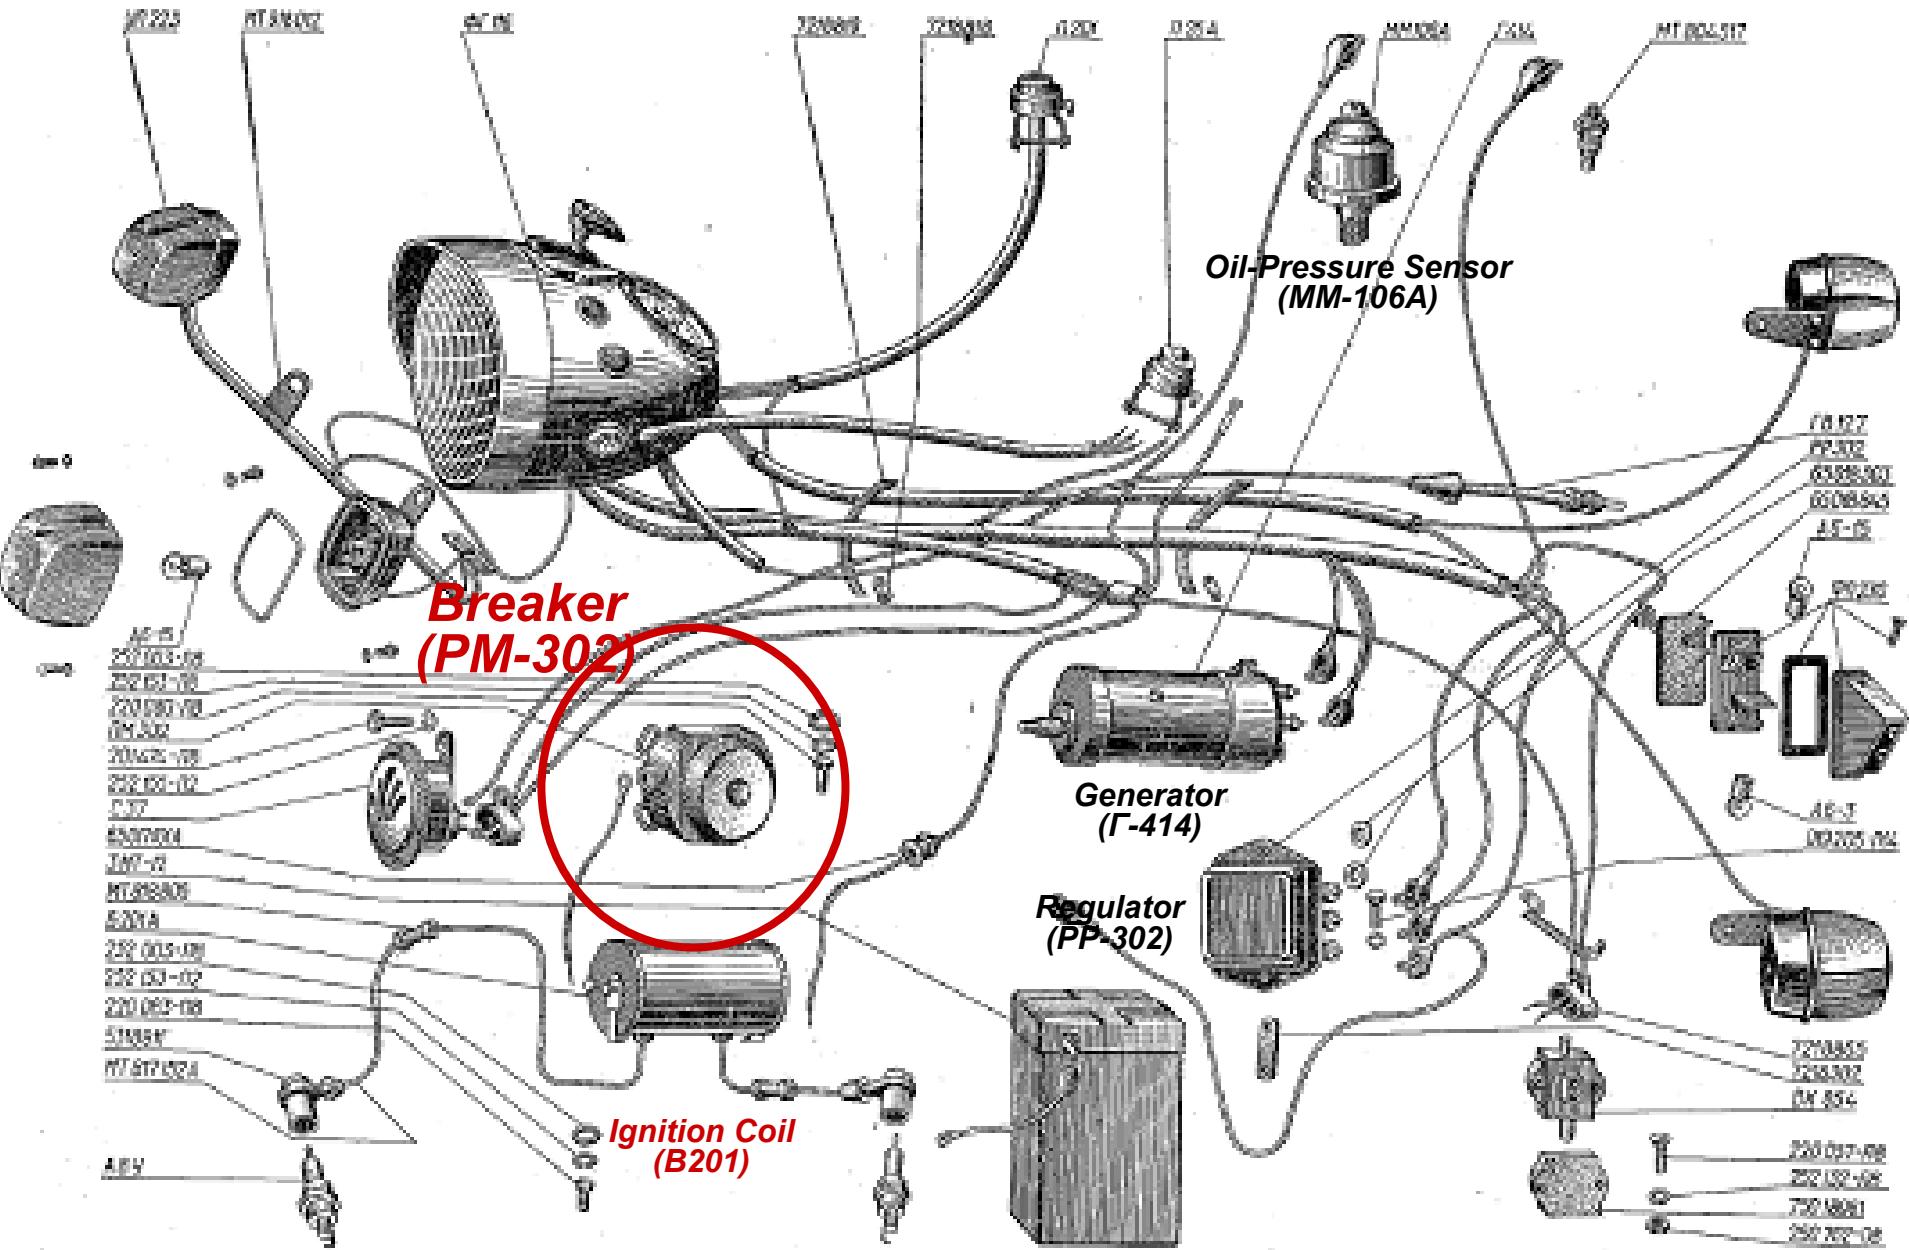


Dnepr (Днепр) MT-9: Automatic Control of Firing Angle

(B201A Ignition Coil and PM-302 Breaker)

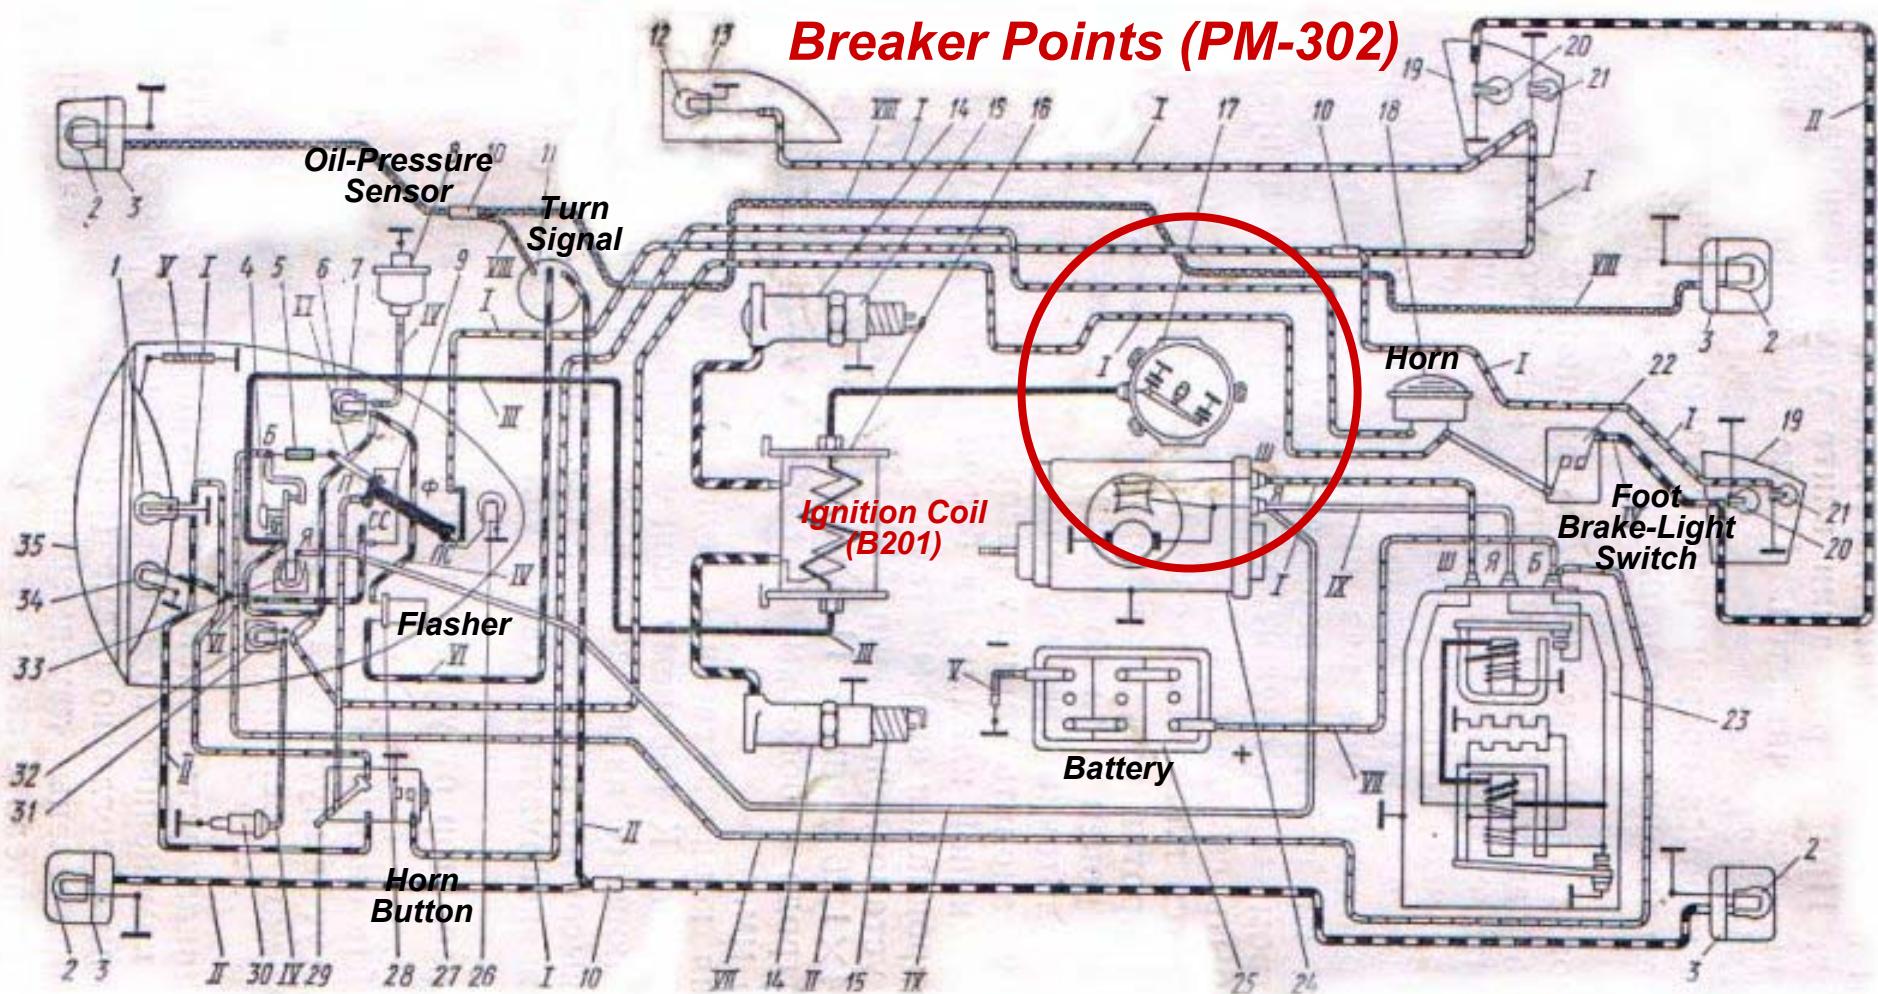


Dnepр (Днепр) МТ-10 (1974)

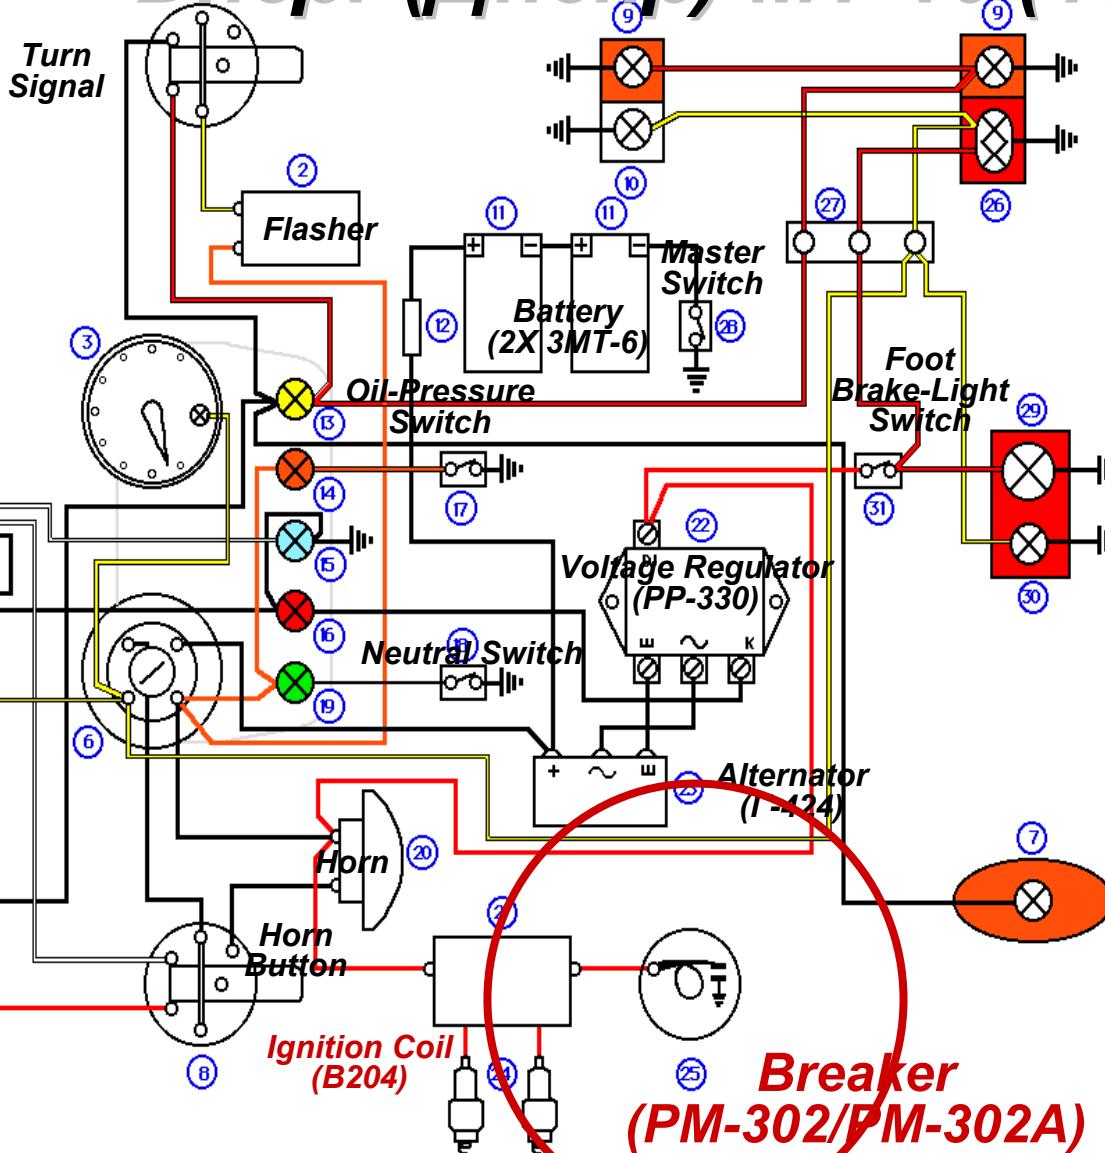


1974 Dniepr MT-10

1. Turn Signal Switch
2. Turn Signal Flasher
3. Instrument Illumination
4. Headlight
5. Parking light
6. Ignition Switch
7. Front Left Turn Signal - Bike
8. High Beam Switch
9. Right Turn Signal - Sidecar
10. Front Right Turn Signal - Bike
11. Battery
12. Fuse
13. Turn Signal Indicator
14. Oil Pressure Indicator
15. High Beam Indicator
16. Charge Indicator
17. Oil Pressure Switch
18. Neutral Switch
19. Neutral Indicator
20. Horn
21. Coil
22. Voltage Regulator
23. Generator
24. Sparkplugs
25. Points/Contac Breaker
26. Rear Right Turn Signal - Bike
27. Wire Connector
28. Ground
29. Brake Light
30. Tail Light

Dnepr (Днепр) MT-10

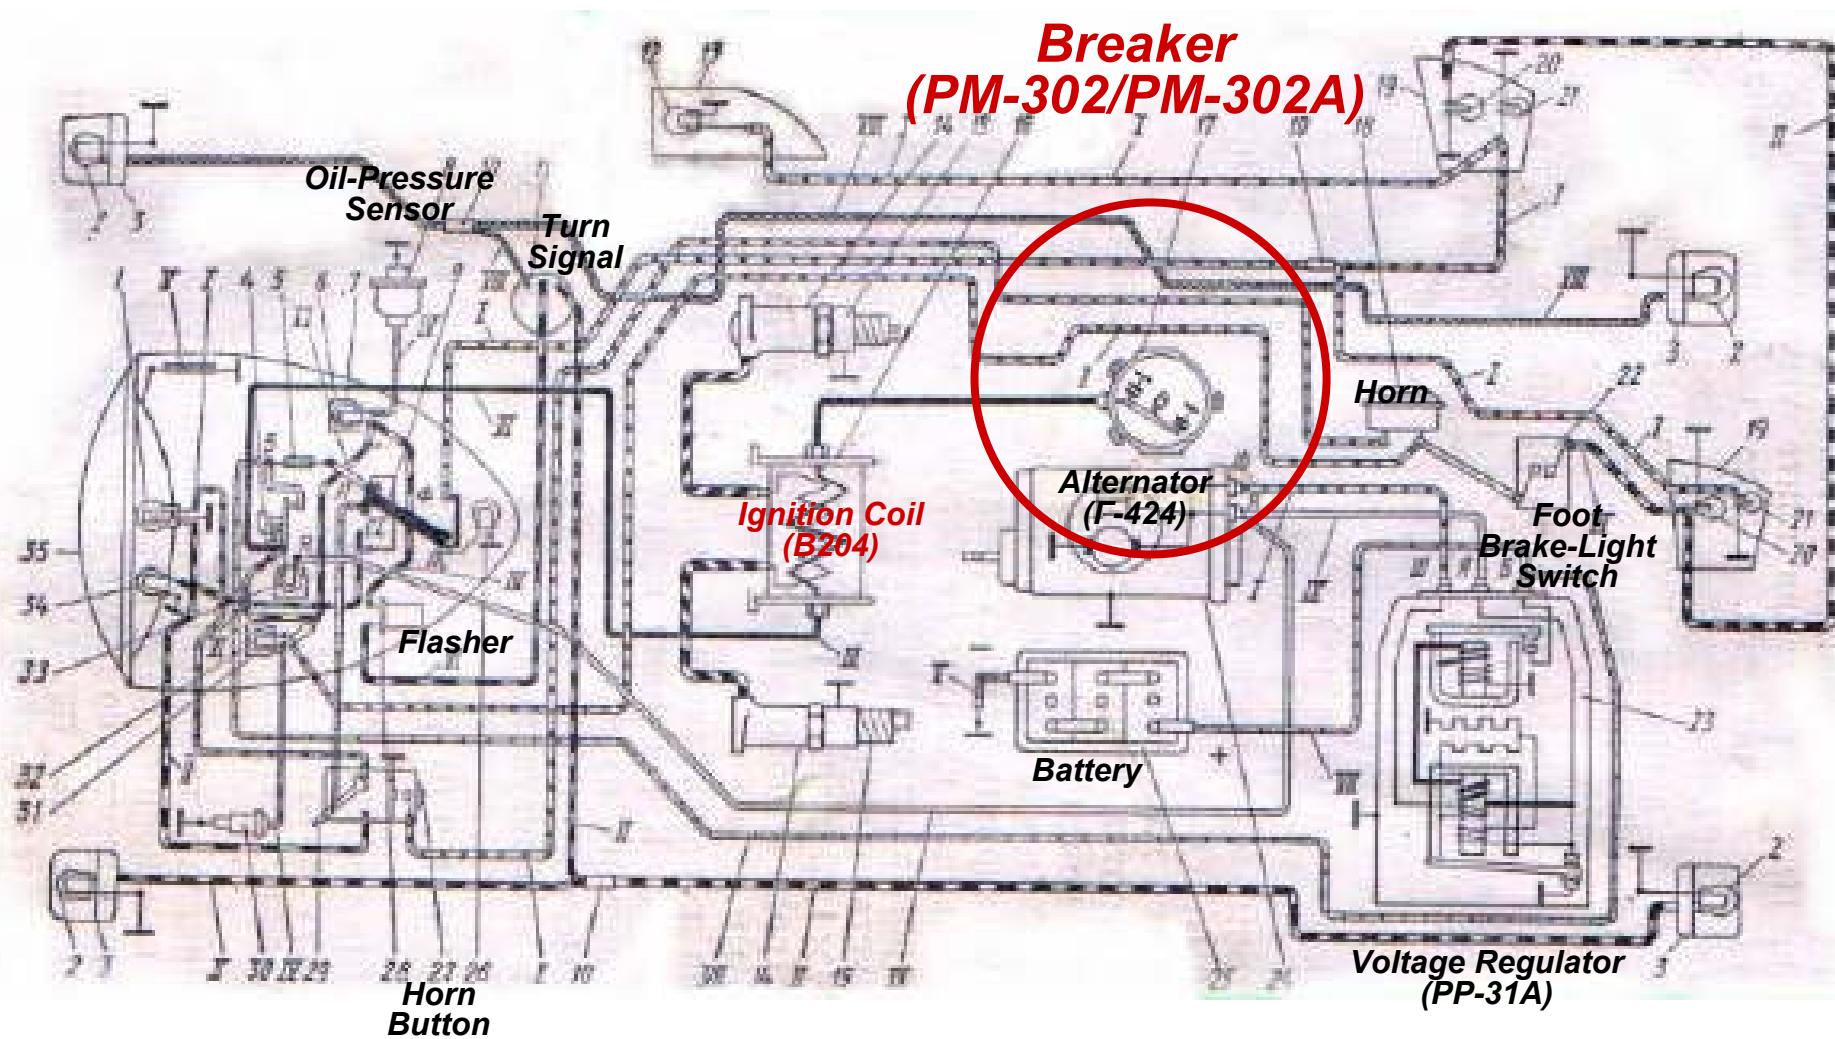


Dnepr (Днепр) МТ-10

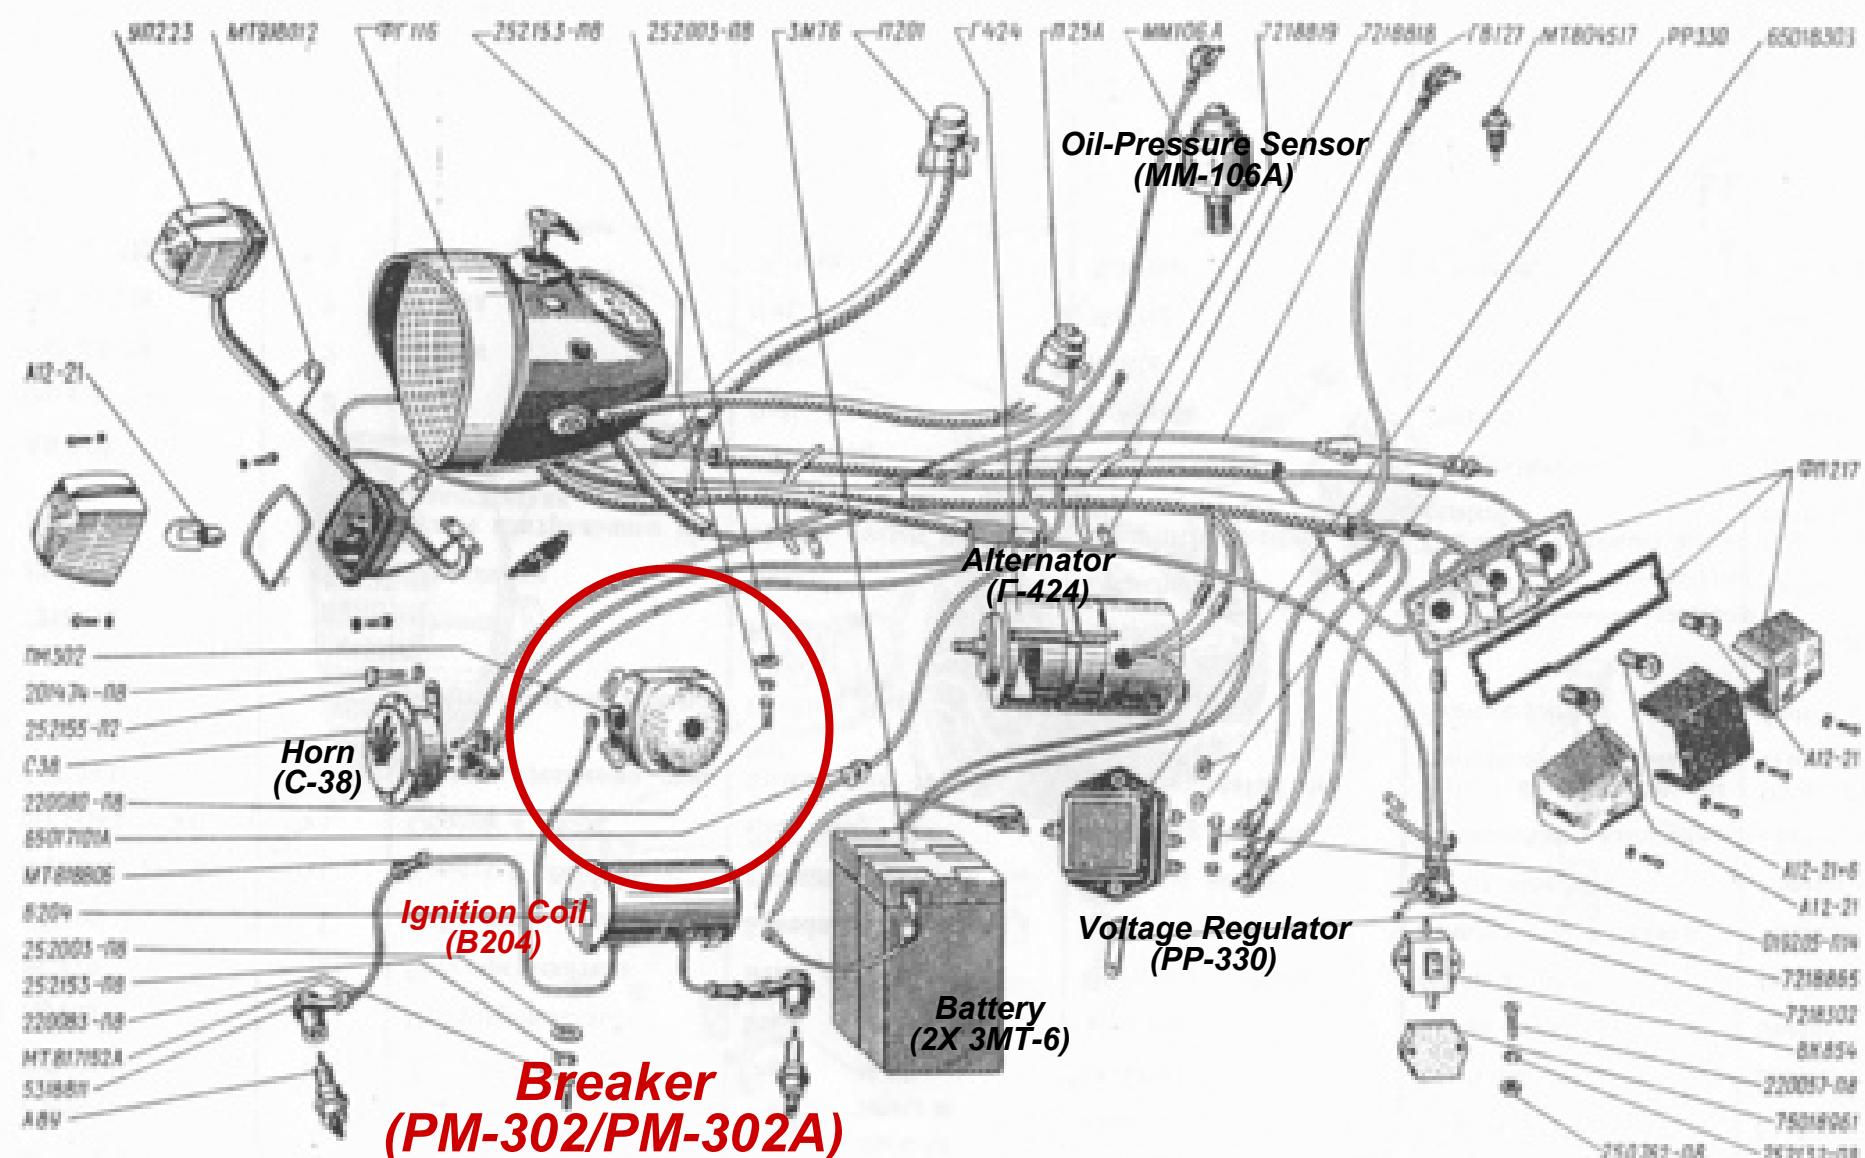


Dnepr (Днепр) MT-10 and MT-10.36

(www.shematic.net/images/pages/MOTO/MT10.jpg)

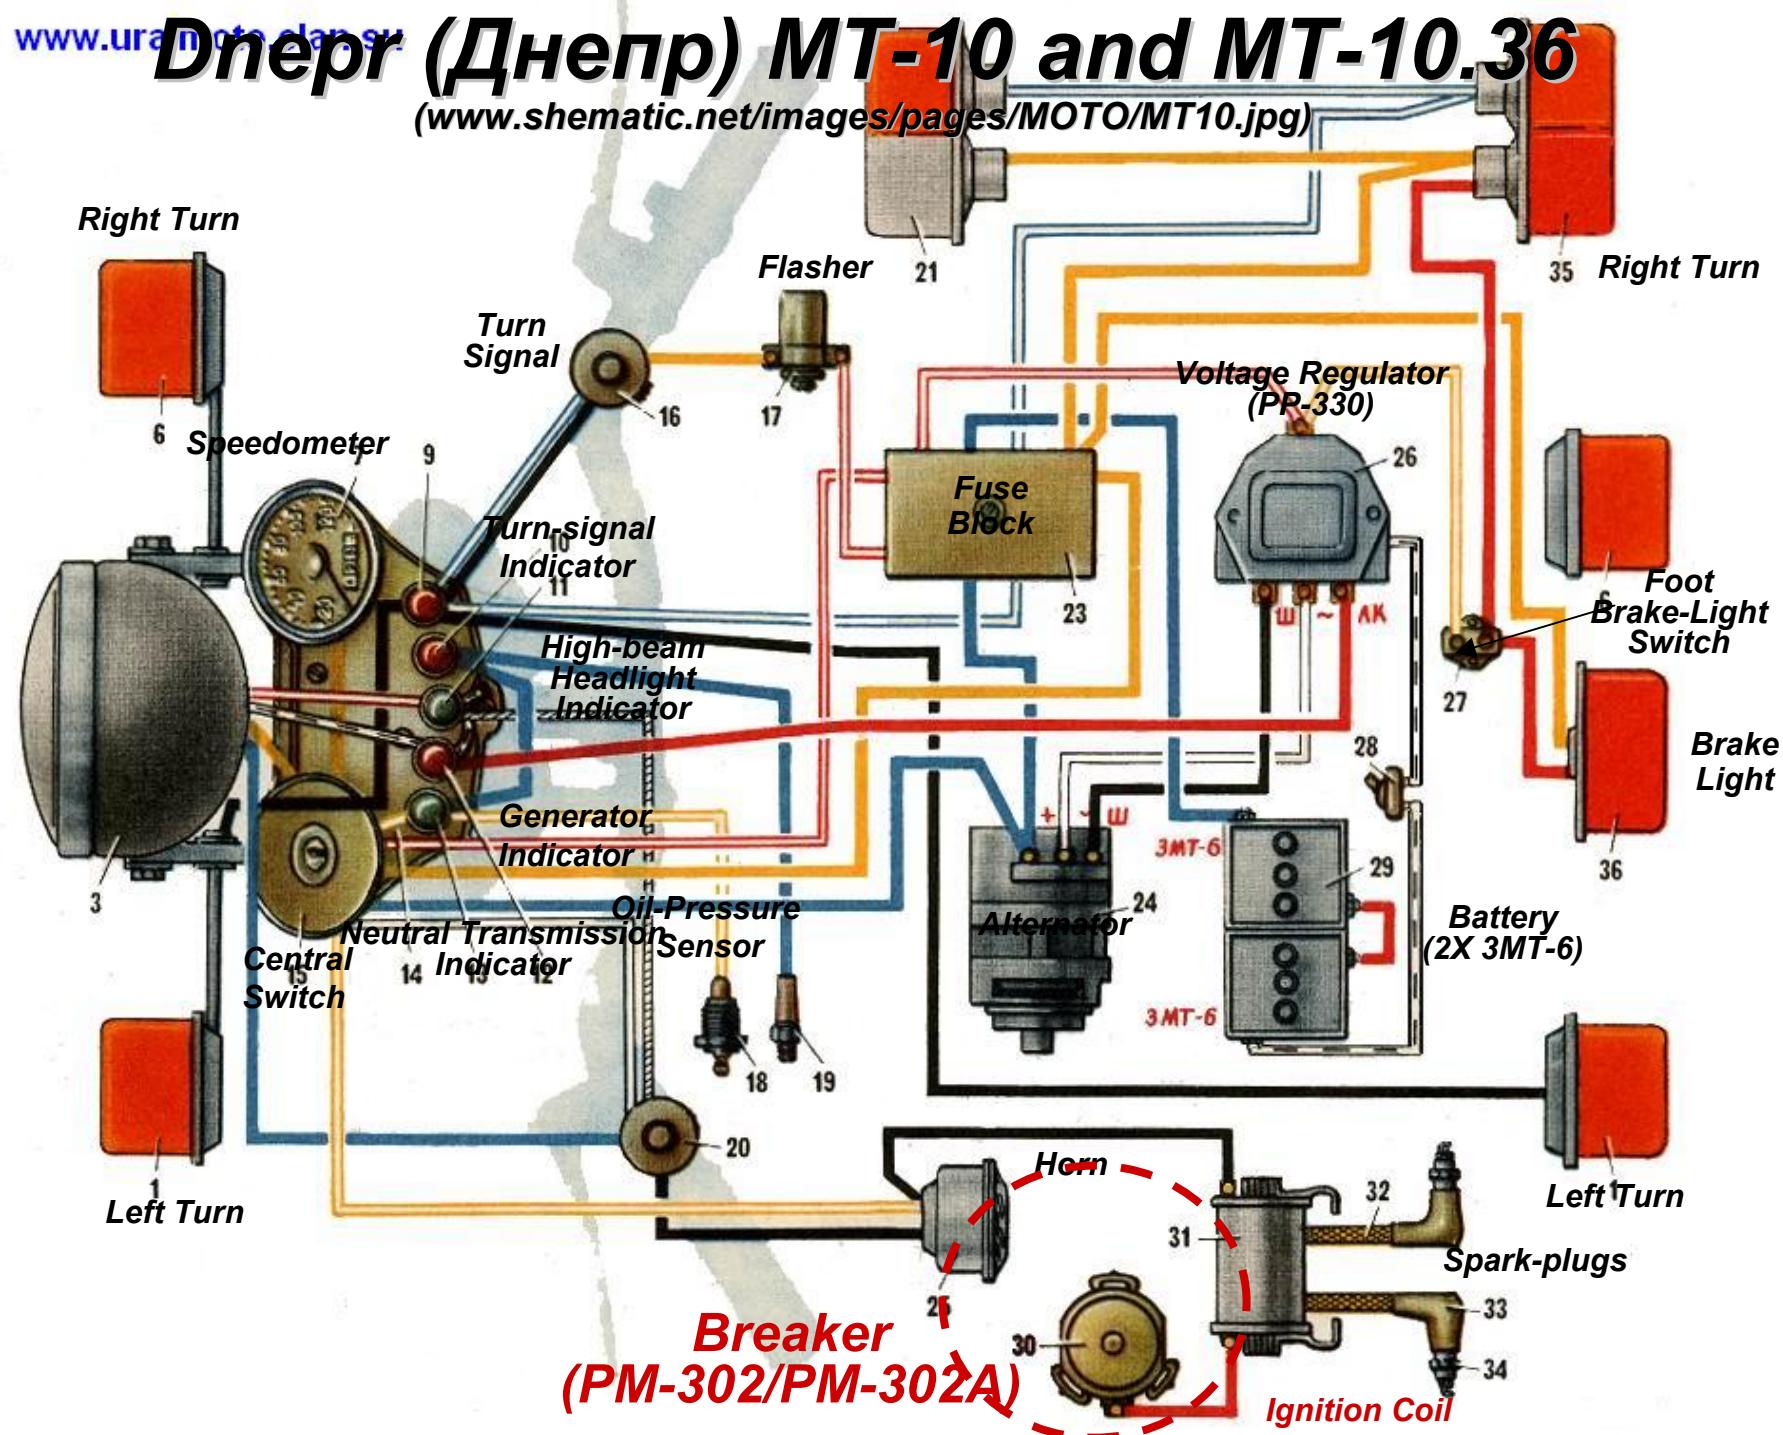


Dnepr (Днепр) MT-11 and MT-16 (1992)

- 7-Oil Pressure Sensor (MM126)
- 8-Foot Brake-Light Switch (BK854B)
- 14-Flasher Unit (PC427)
- 16-Voltage Regulator: 33.3702
- 19-Battery: 6MTS-9 (12V/9A-hr)
- 21-Alternator: Γ-424 (150W)
- 33-Horn (C205B)
- 35-Ignition Coil (B204)
- 36-Spark plug (A14B)
- 37-Breaker (PM-302A (with automatic))
- 42-Master Switch (46.3710)

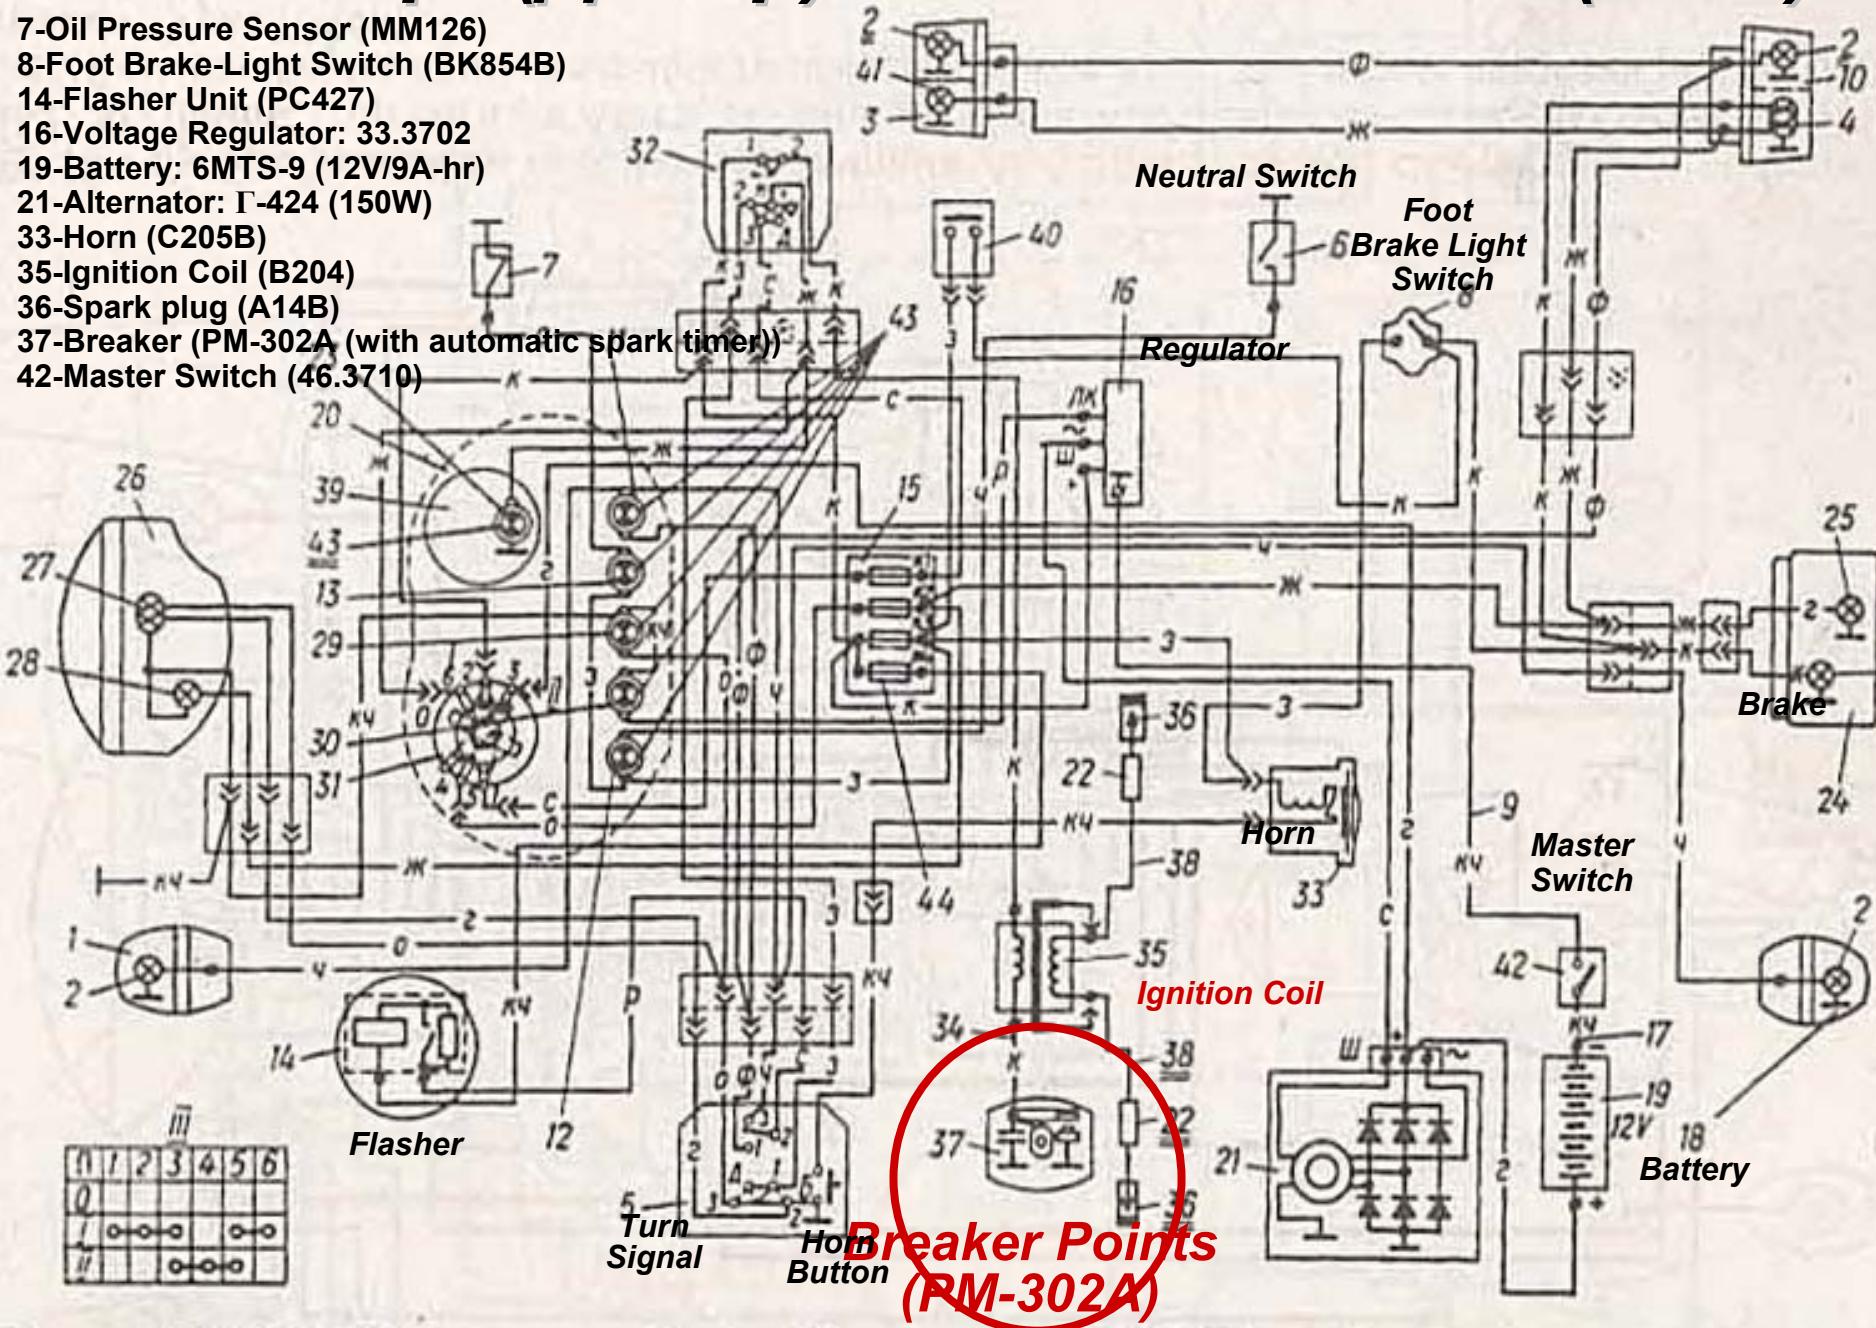

Dnepr (Днепр) Early MT-11 and MT-16

with PP-330 Regulator, later replaced with 33.3072 (solid-state)

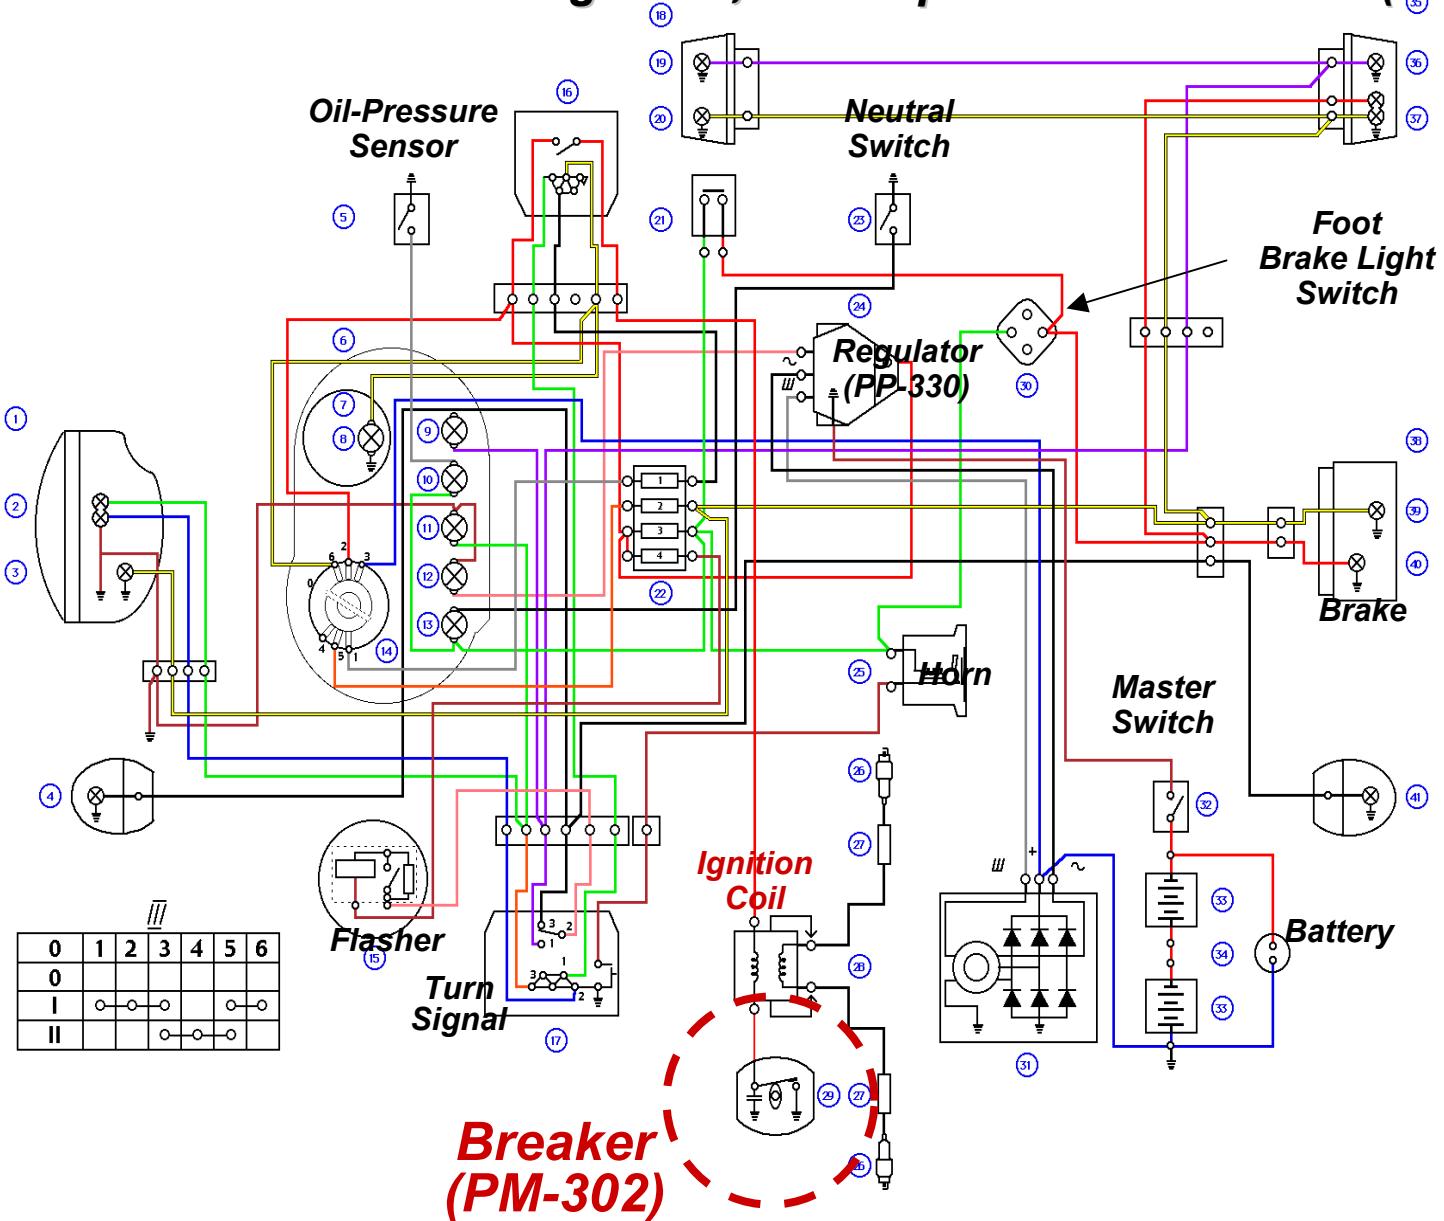


0	1	2	3	4	5	6
0						
I	o	o	o	o	o	o
II						


**Breaker
(PM-302)**

Dnepr (Днепр) MT-11, MT-14 and MT-16

(showing replacement of PP-330 Regulator with the Solid-State 33.3702)

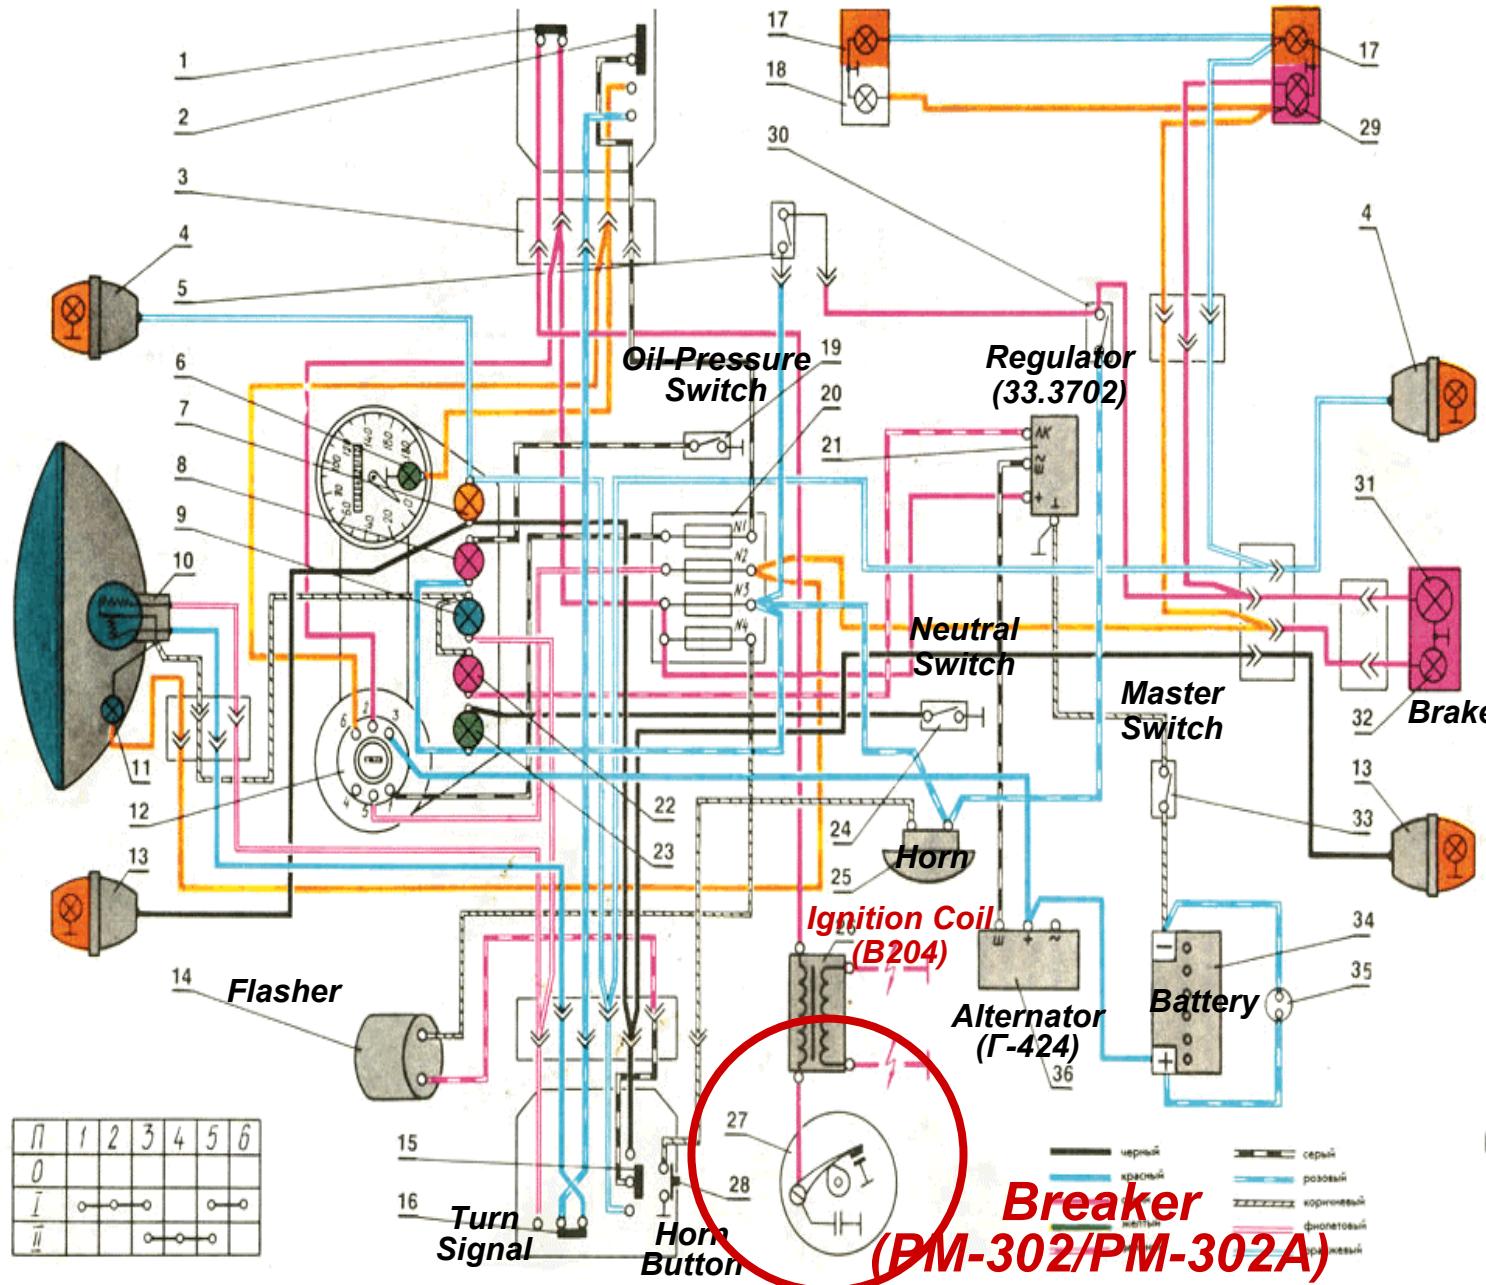



Older Models: PP-330

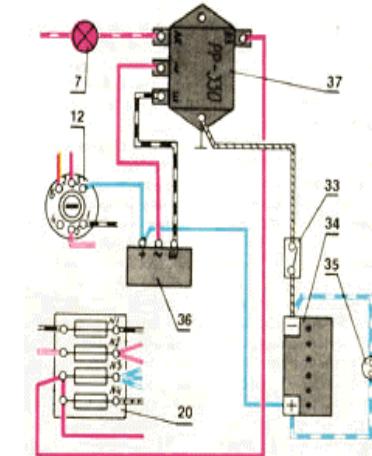

schemat instalacji do Dniepra MT-11, 14 i 16

Dnepr (Днепр) MB-650, MT-11 and MT-16

44

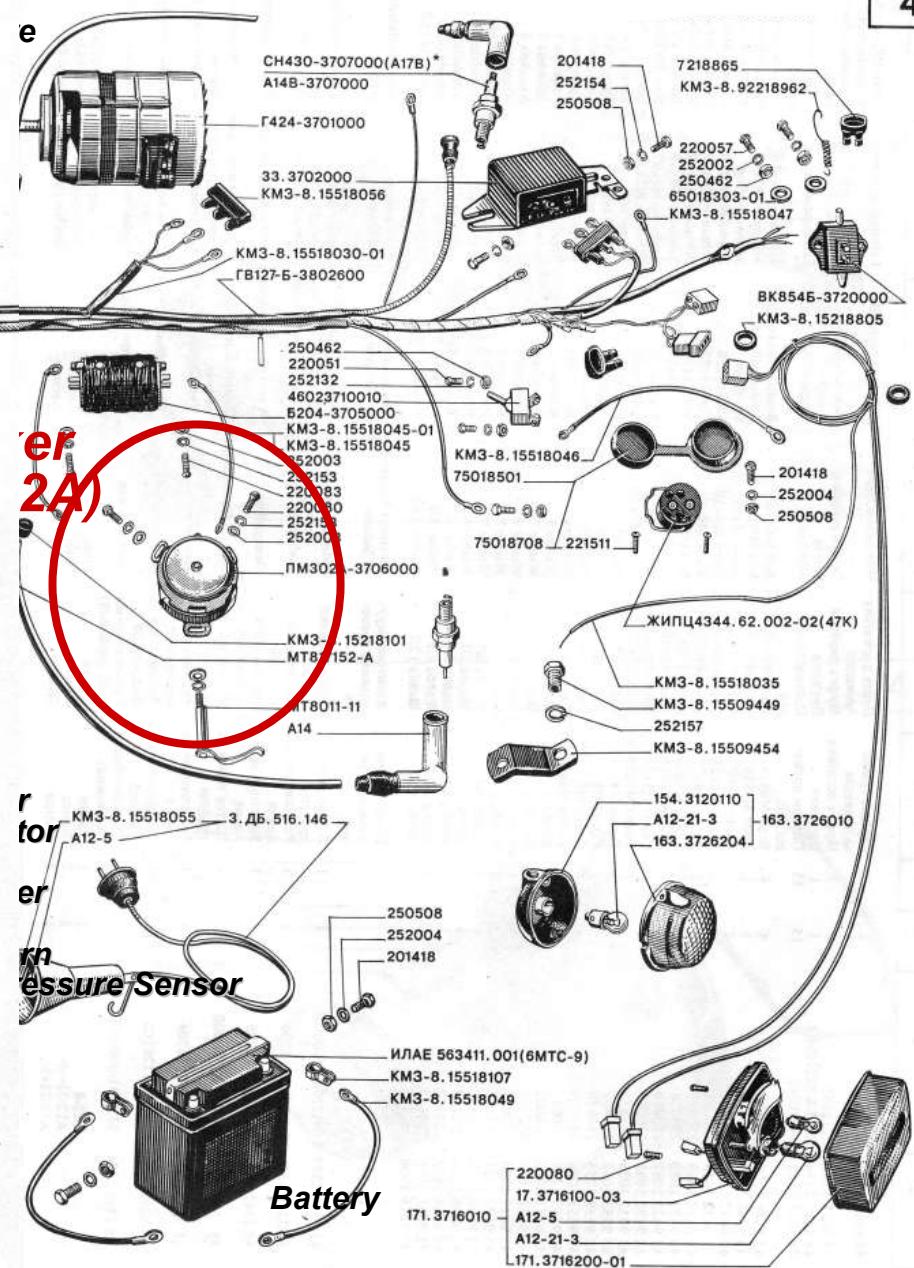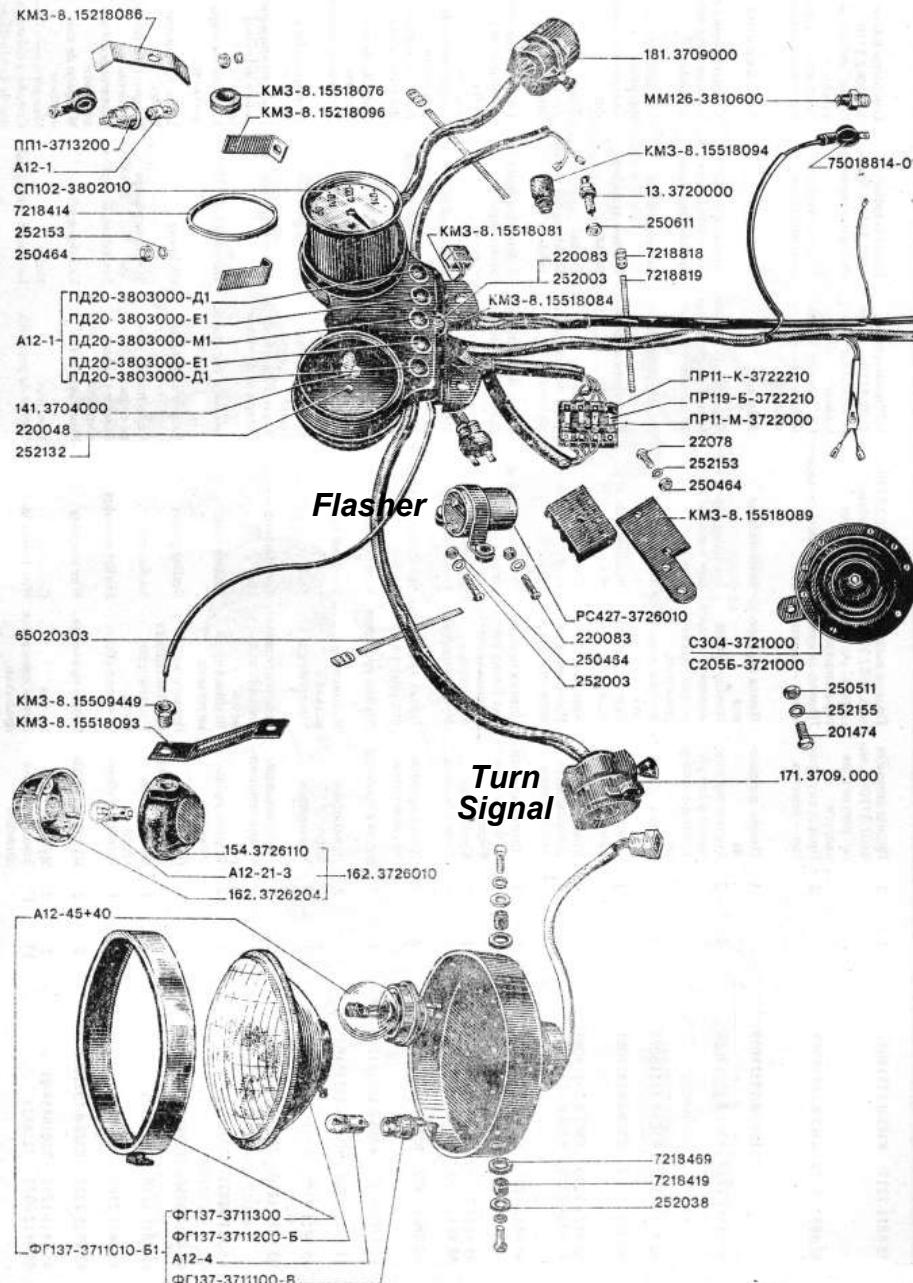

Later K-750, MB-750


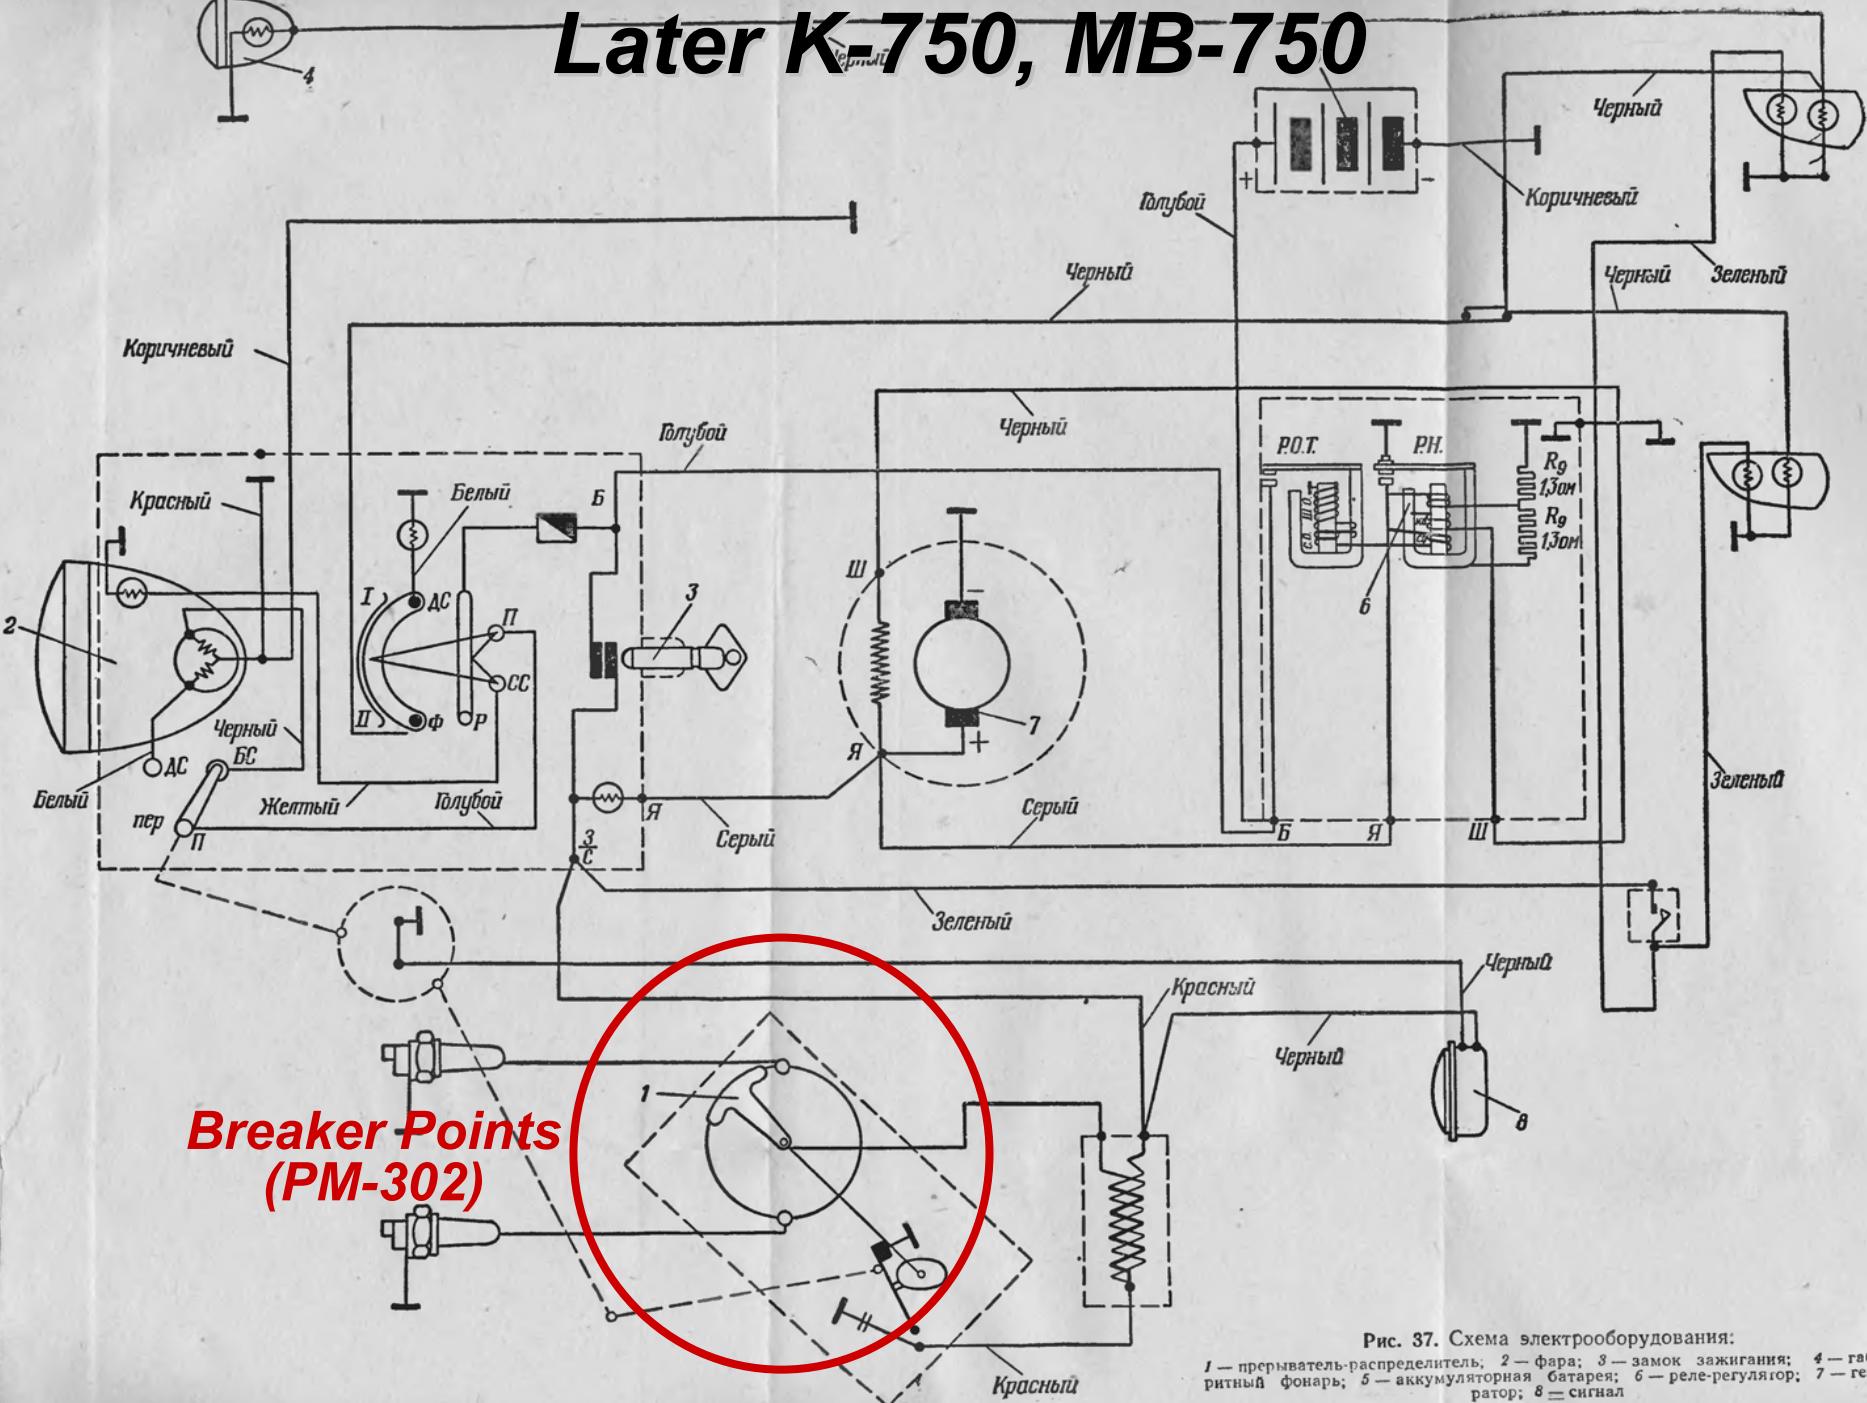


Рис. 37. Схема электрооборудования:
1 — прерыватель-распределитель; 2 — фара; 3 — замок зажигания; 4 — габаритный фонарь; 5 — аккумуляторная батарея; 6 — реле-регулятор; 7 — генератор; 8 — сигнал


Ural (Урал) M-63 (Ural-2)

~~Breaker Points (PM-302)~~

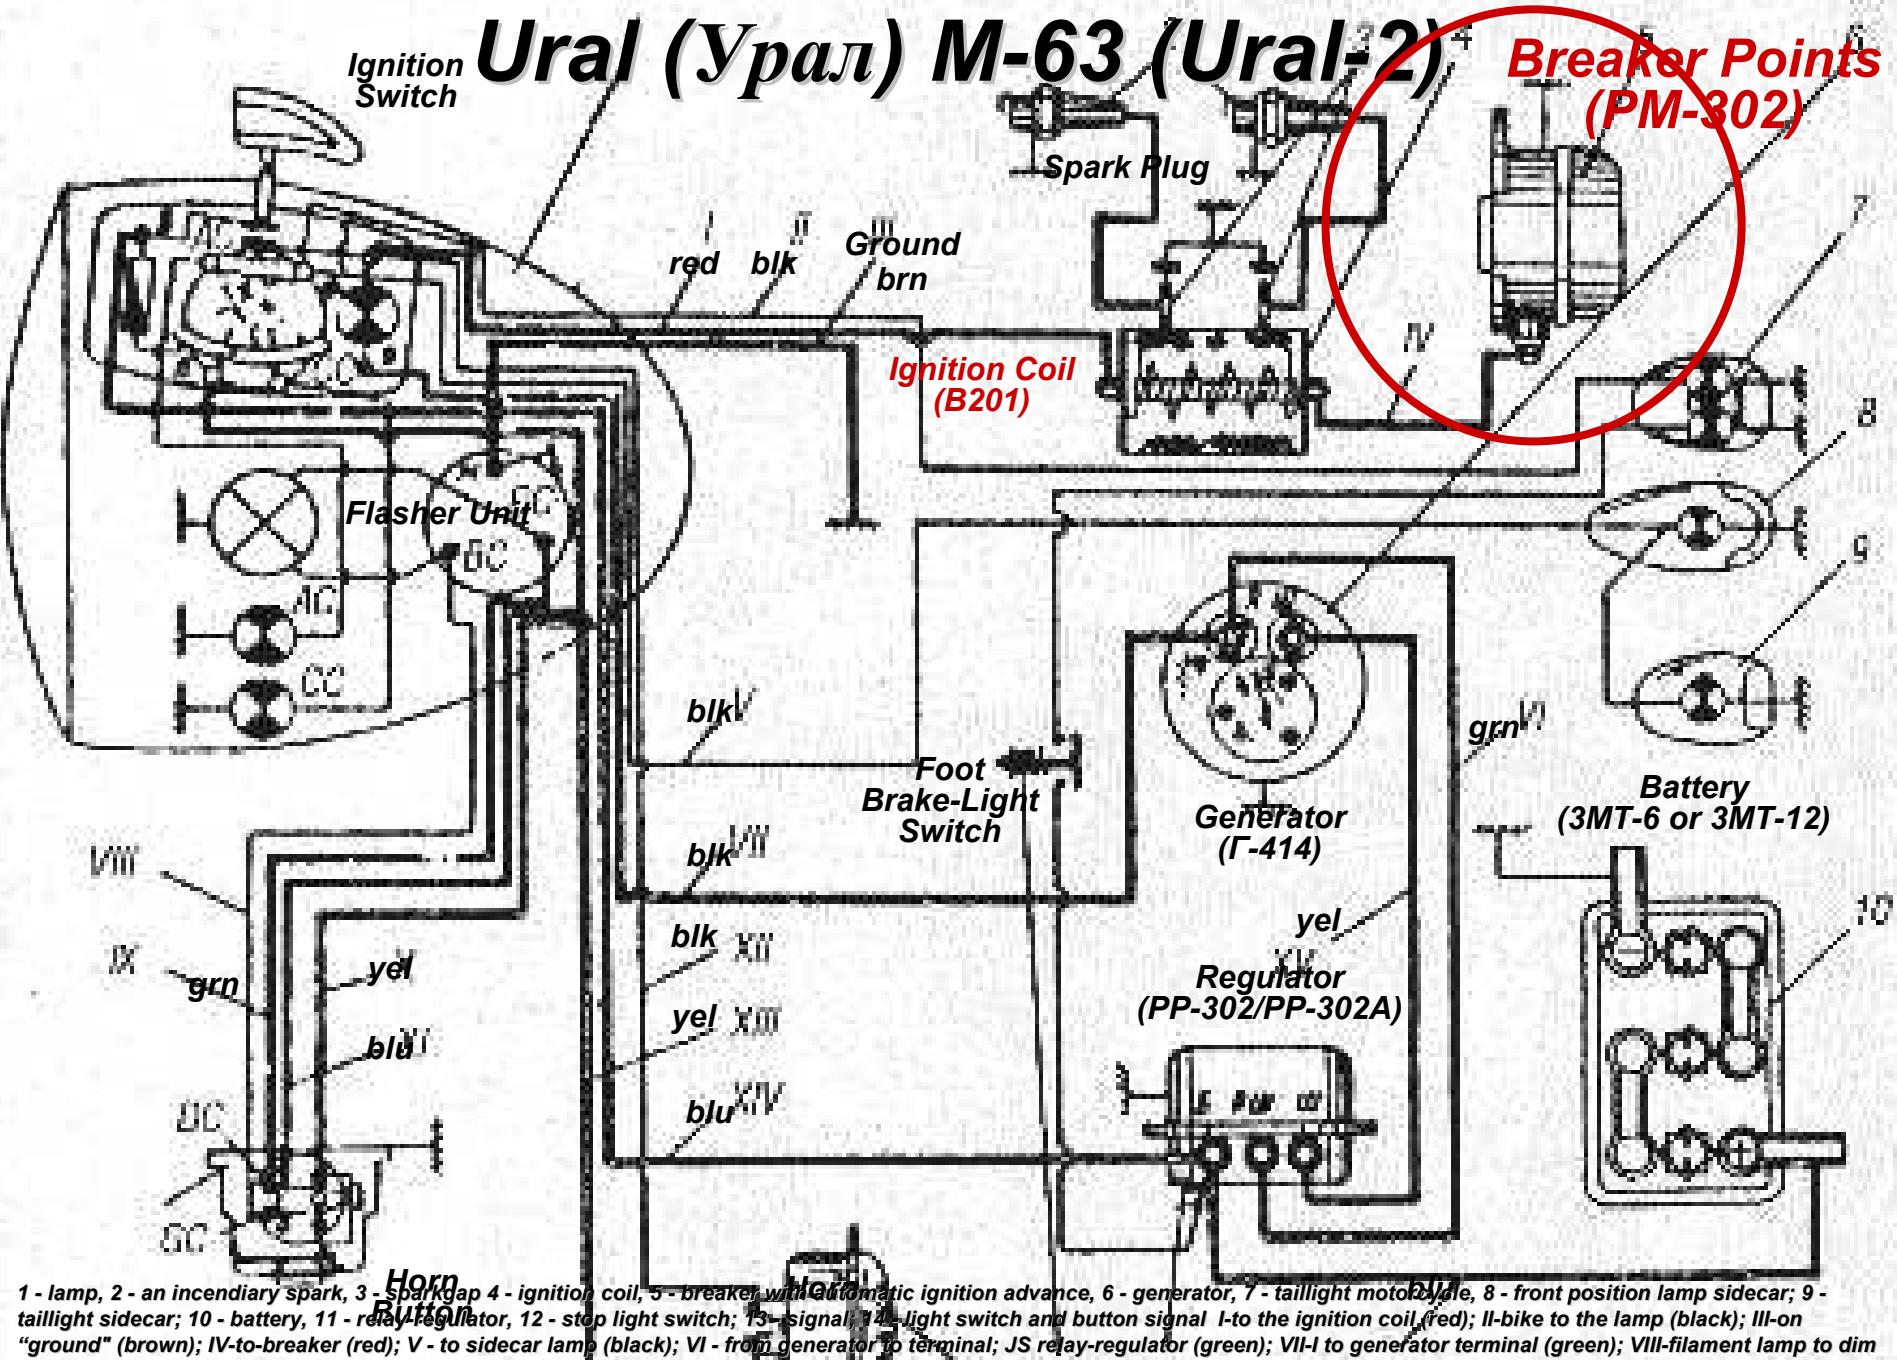


Horn - lamp, 2 - an incendiary spark, 3 - spark gap 4 - ignition coil, 5 - breaker with automatic ignition advance, 6 - generator, 7 - taillight motorcycle, 8 - front position lamp sidecar; 9 - taillight sidecar; 10 - battery, 11 - relay-regulator, 12 - stop light switch; 13 - signal; 14 - light switch and button signal I-to the ignition coil (red); II-bike to the lamp (black); III-on "ground" (brown); IV-to-breaker (red); V - to sidecar lamp (black); VI - from generator to terminal; JS relay-regulator (green); VII-I to generator terminal (green); VIII-filament lamp to dim light (black); IX-filament lamp to beam (green); X-button on signal to the lamp (yellow); XI - to light switch (blue); XII-to-signal ratio (black); XIII - the signal to lamp (yellow); XIV-B switch to time-control (blue); XV - from relay controller to terminal W generator (brown); XVI-in battery (blue)

Ural (Урал) M-63 (Ural-2)

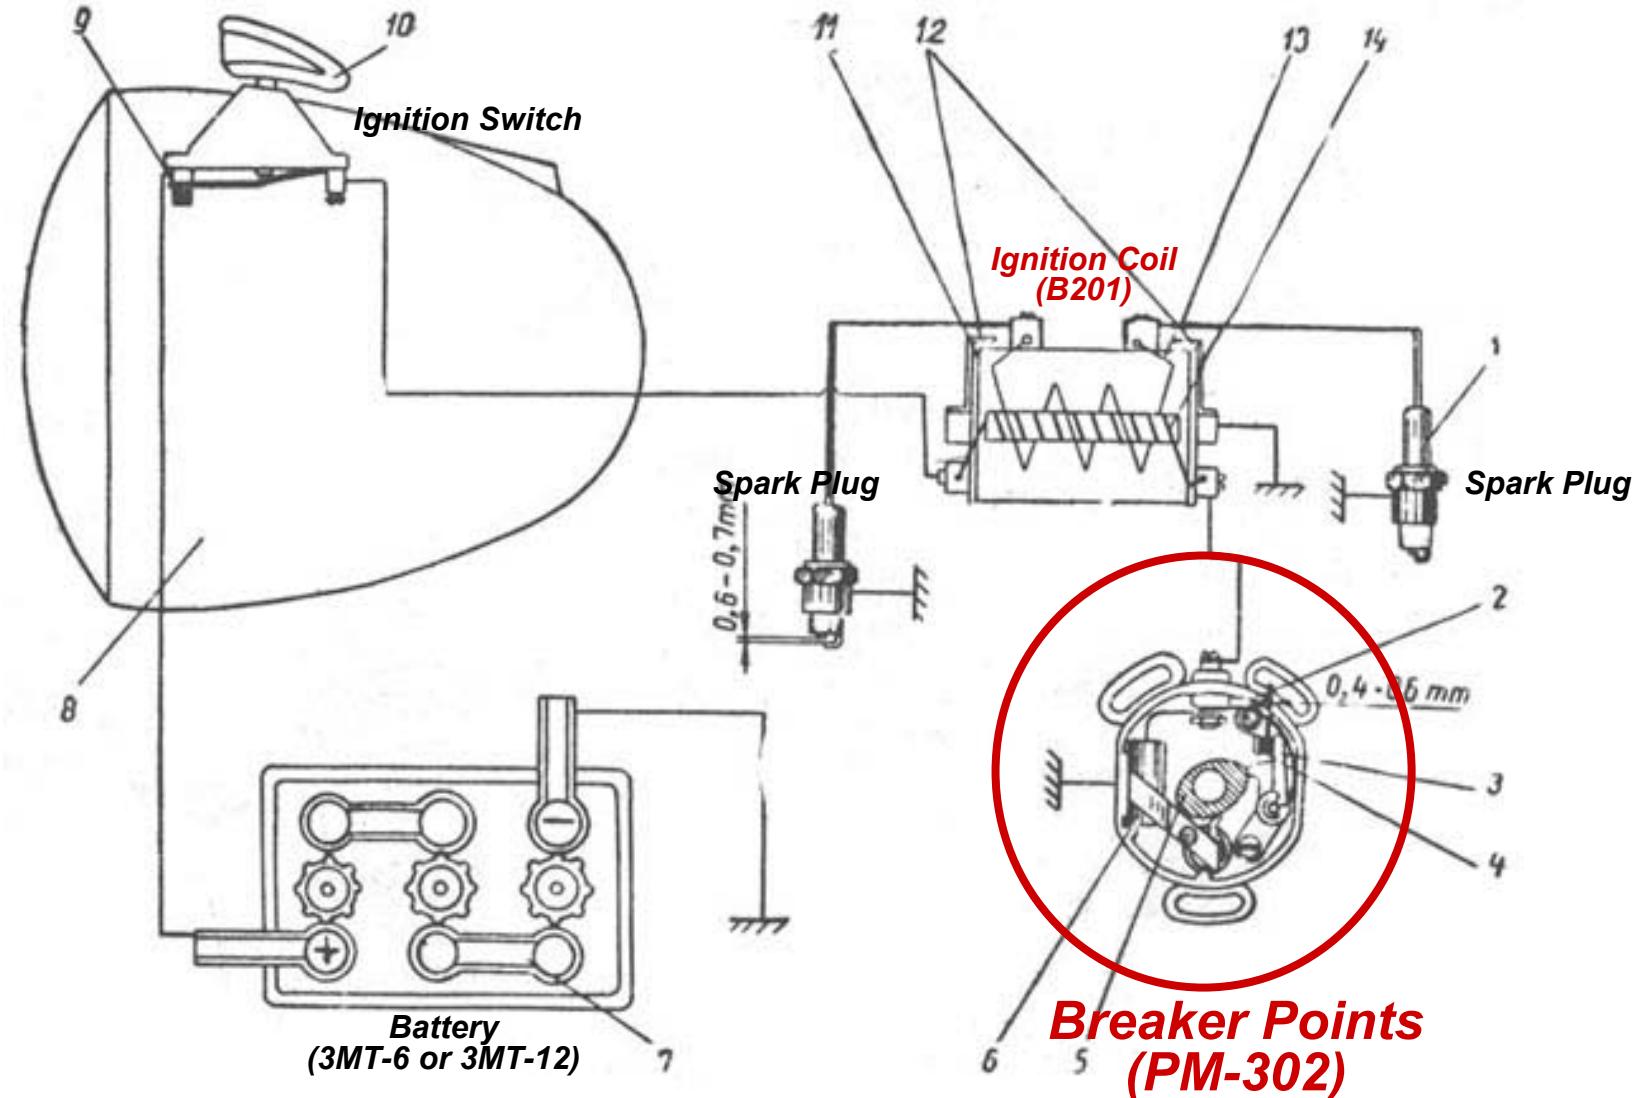

**1 - sparkplug, 2 - circuit breaker, 3 - hammer breaker, 4 - anvil breaker, 5 - cam plugs,
6 - condenser, 7 - battery, 8 – headlight, 9 - ignition contact, 10 - ignition key,
11 - ignition coil, 12 – spark gap, 13 - secondary winding, 14 - primary winding**


Ural (Урал) M-62, M-63 (Ural-2) and M-66 (Ural-3)

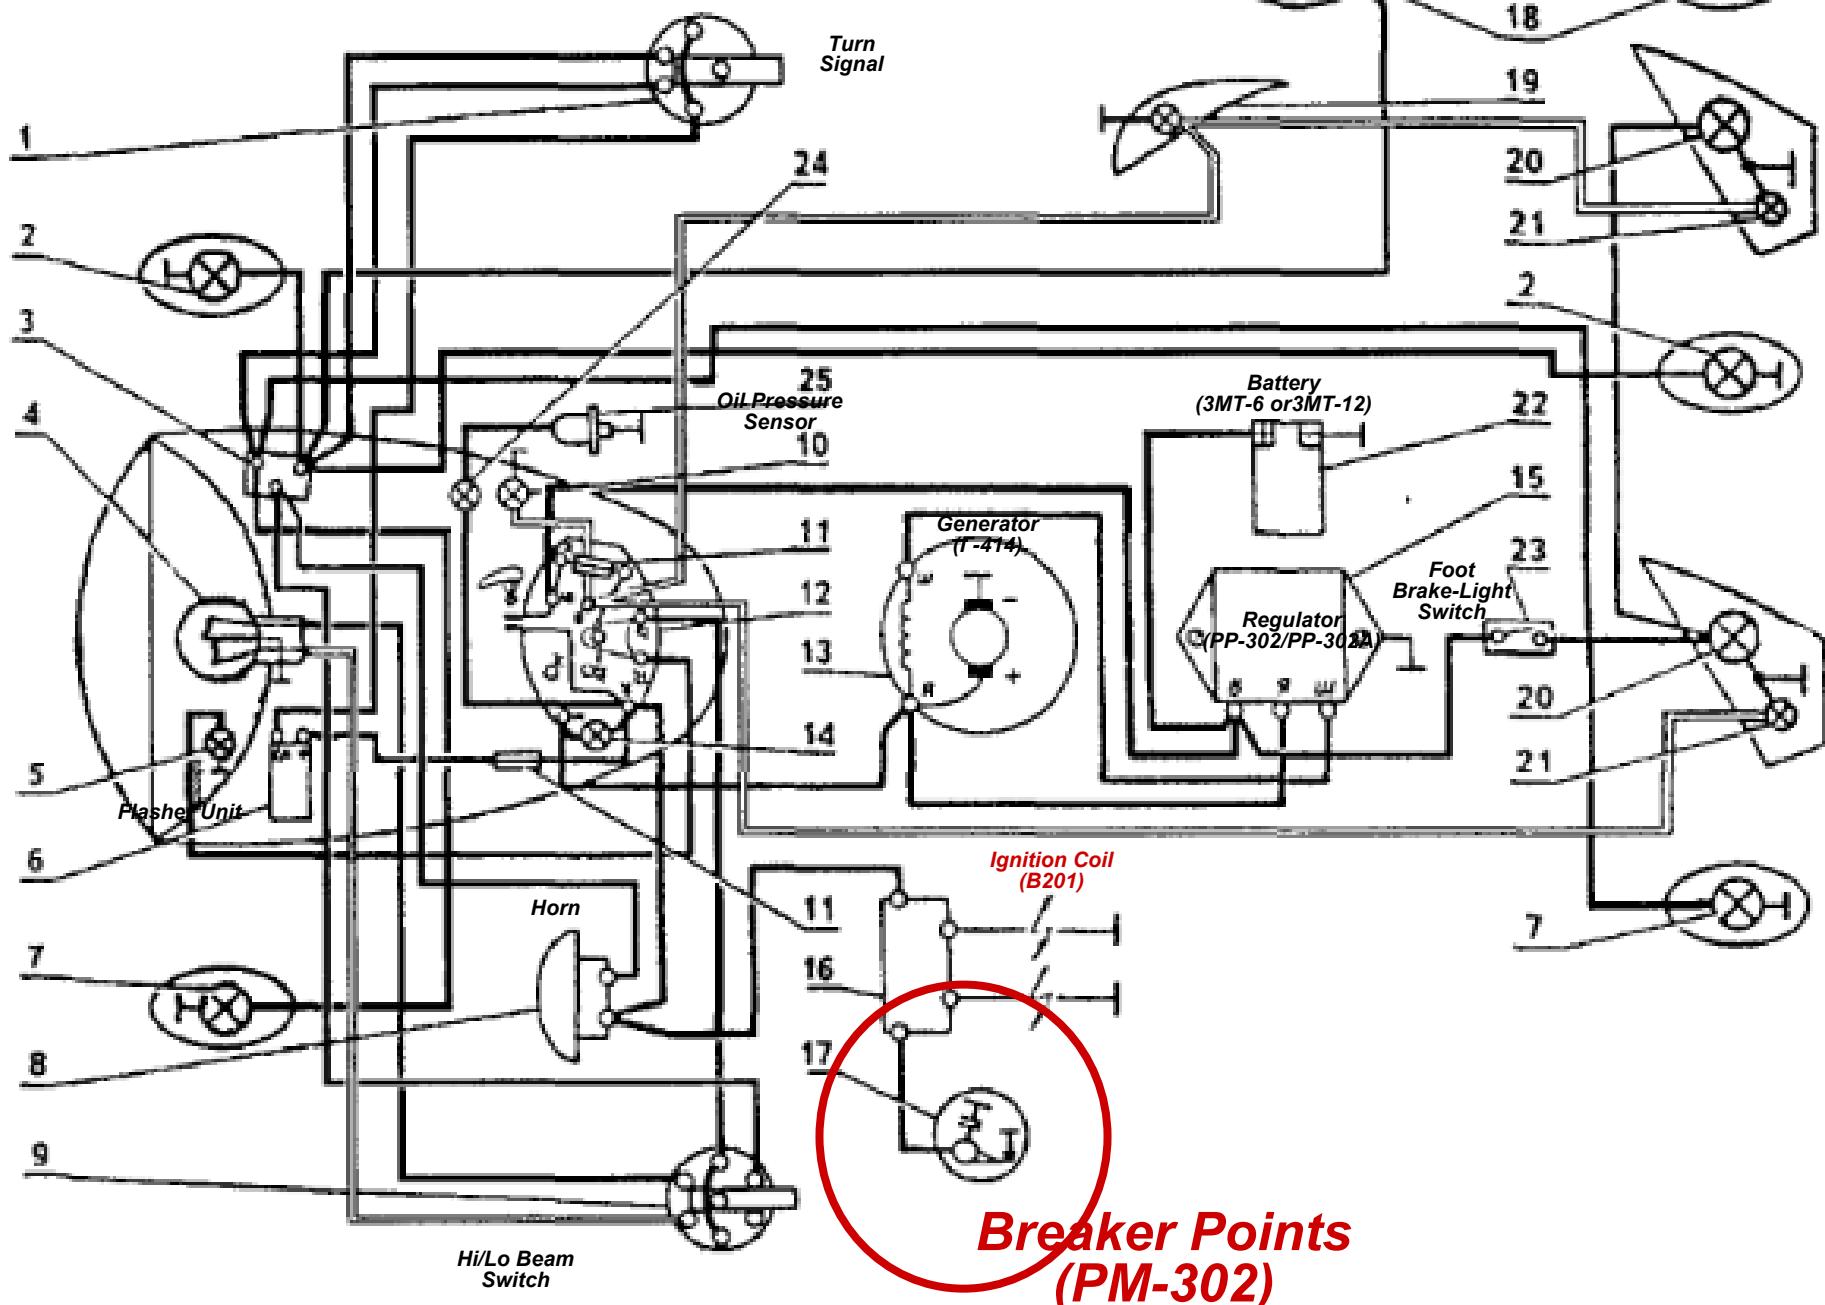

Ural (Урал) M-62, M-63 (Ural-2) and M-66 (Ural-3)


1. Переключатель указателей поворотов П-201
- 2.Правые указатели поворотов с лампами А6-15 на мотоцикле одиночке
- 3.Соединительная колодка
- 4.Лампа головного света фары А6-32+32
- 5.Лампа стояночного света фары А6-2
- 6 Реле-прерыватель указателей поворотов
- 7 Левые указатели поворотов с лампами сА6-15
- 8.Звуковой сигнал С-37А
- 9.Переключатель света с кнопкой звукового сигнала П-200
- Ю.Лампа подсвета шкалы спидометра А6-2
- 11.Предохранители 15А
- 12.Центральный переключатель
- 13.Генератор Г-414
- 14.Контрольная лампа работы генератора А6-0,25
- 15.Реле-регулятор РР-302А
- 16.Катушка зажигания Б-201
- 17.Прерыватель ПМ-302
- 18.Правые указатели поворотов с лампами А6-15 (на коляске)
- 19.Передний габаритный фонарь на коляске с лампой А6-2
- 20.Лампы стоп-сигнала А6-15
- 21.Задние габаритные лампы А6-2
- 22.Аккумулятор ЗМТ-6
- 23.Включатель стоп-сигнала
- 24.Контрольная лампа аварийного давления масла А6-2
- 25.Датчик давления масла.

Детали поз. 24 и 25 - только на мотоциклах "Днепр", Указателями поворотов оснащены только "Урал" М-66 и "Днепр" МТ-9.

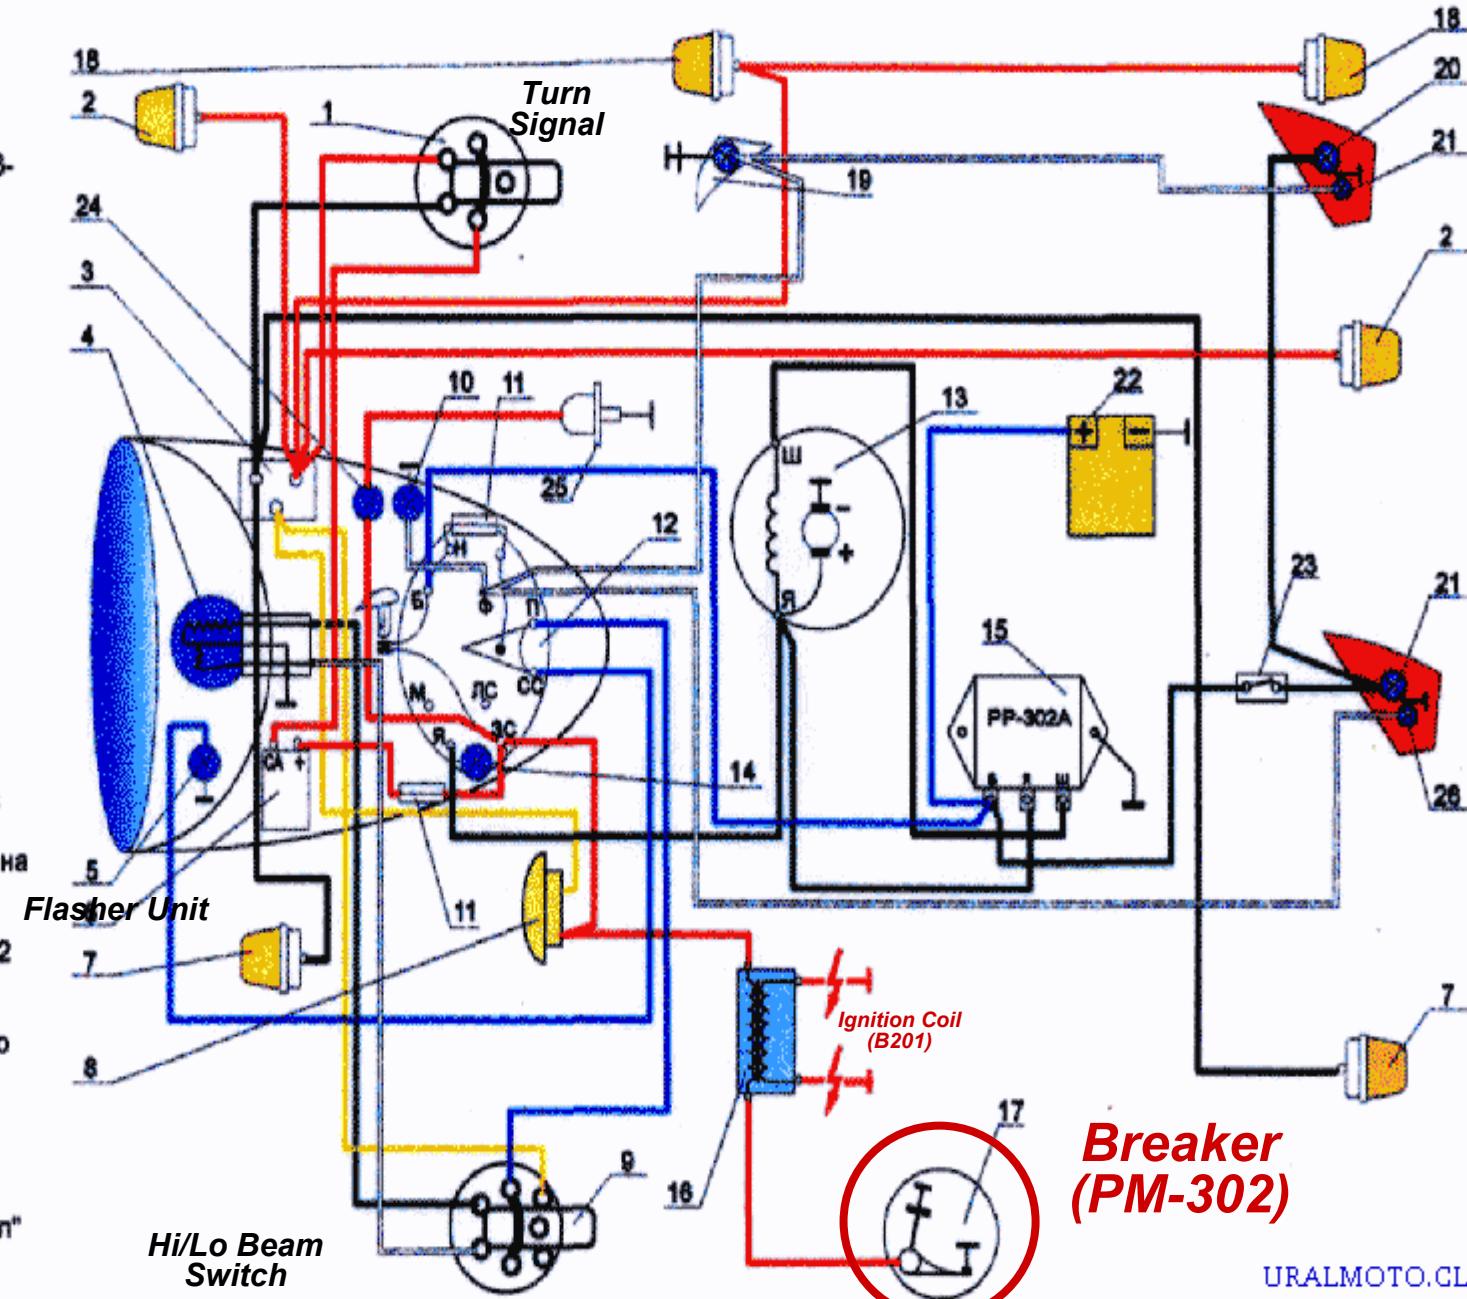

**Breaker
(PM-302)**

Ural (Урал) M-63 (Ural-2) and M-66 (Ural-3)

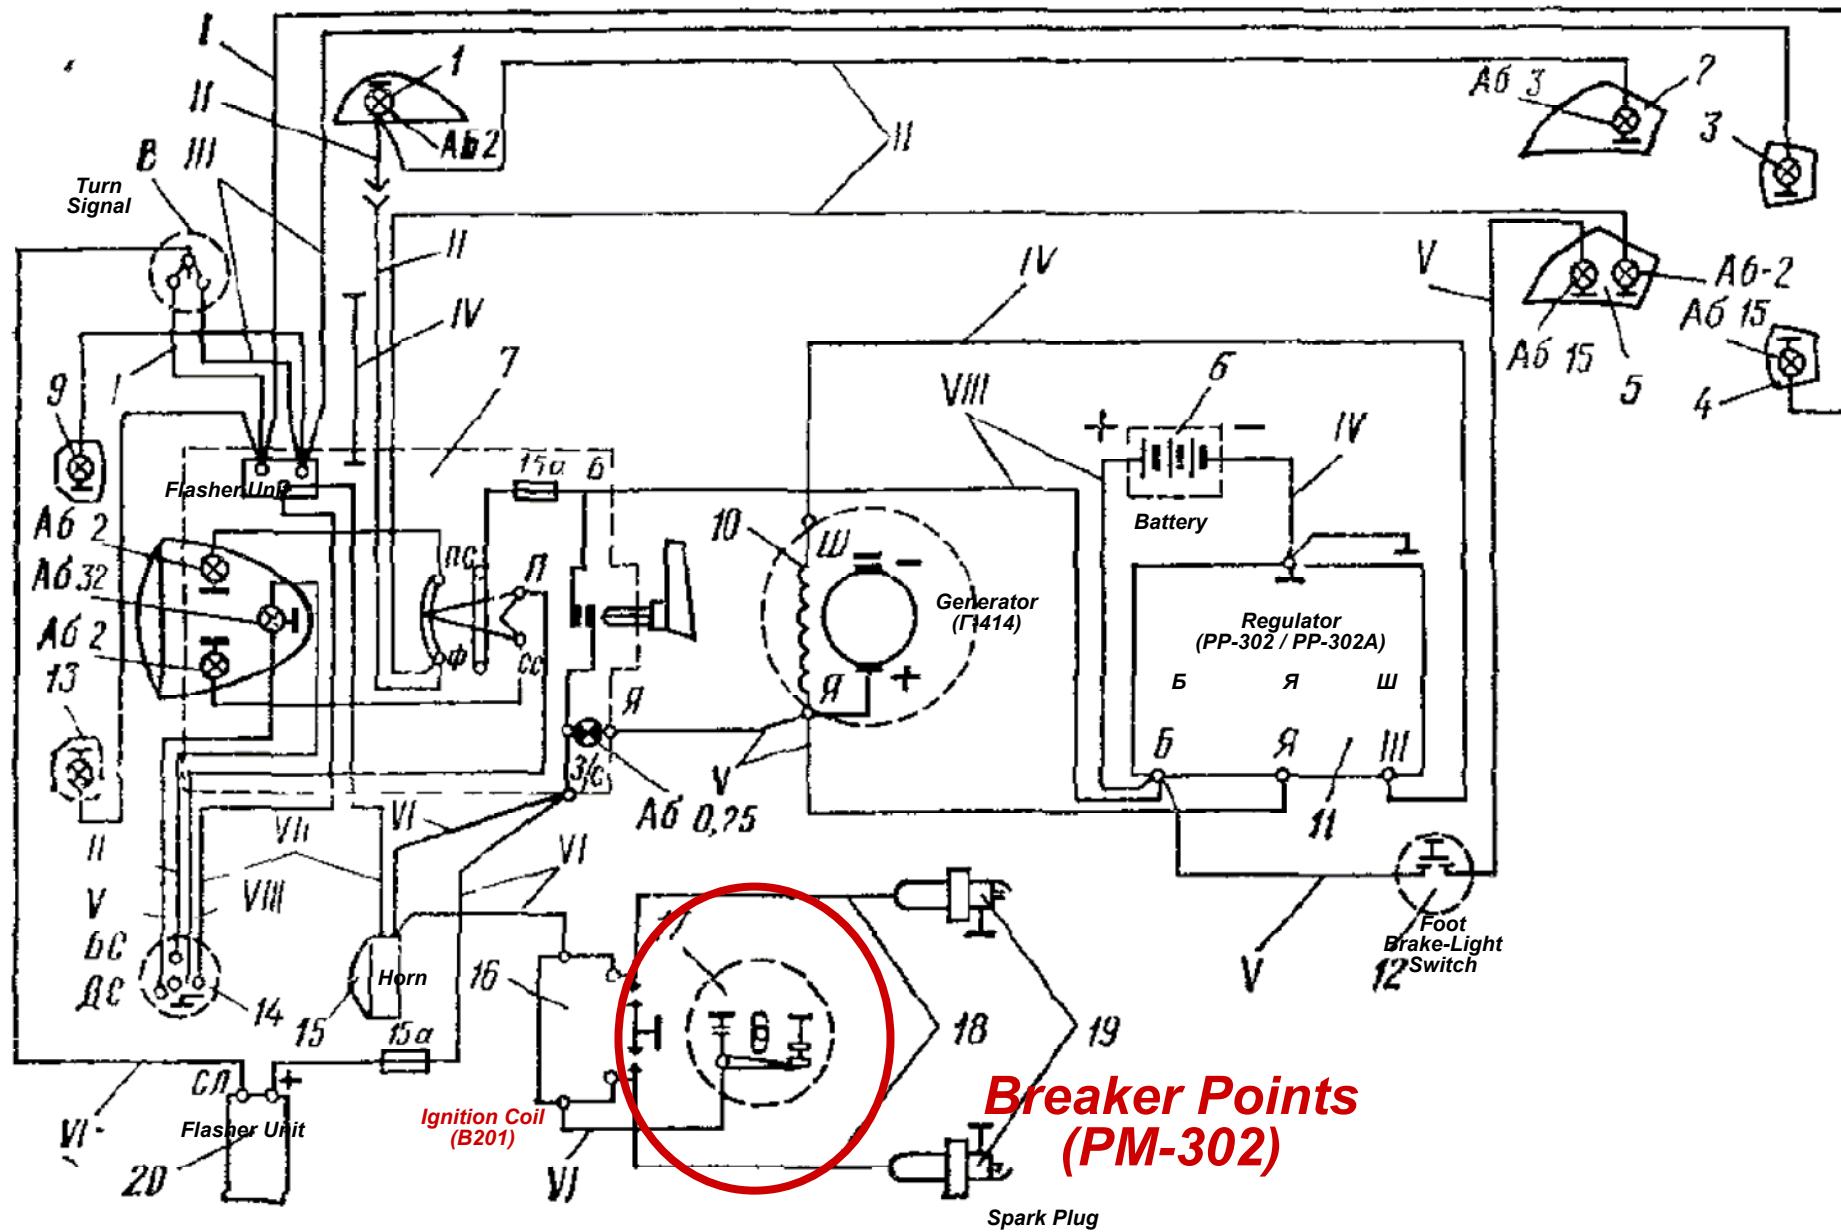

Ural (Урал) M-62, M-63 (Ural-2) and M-66 (Ural-3)


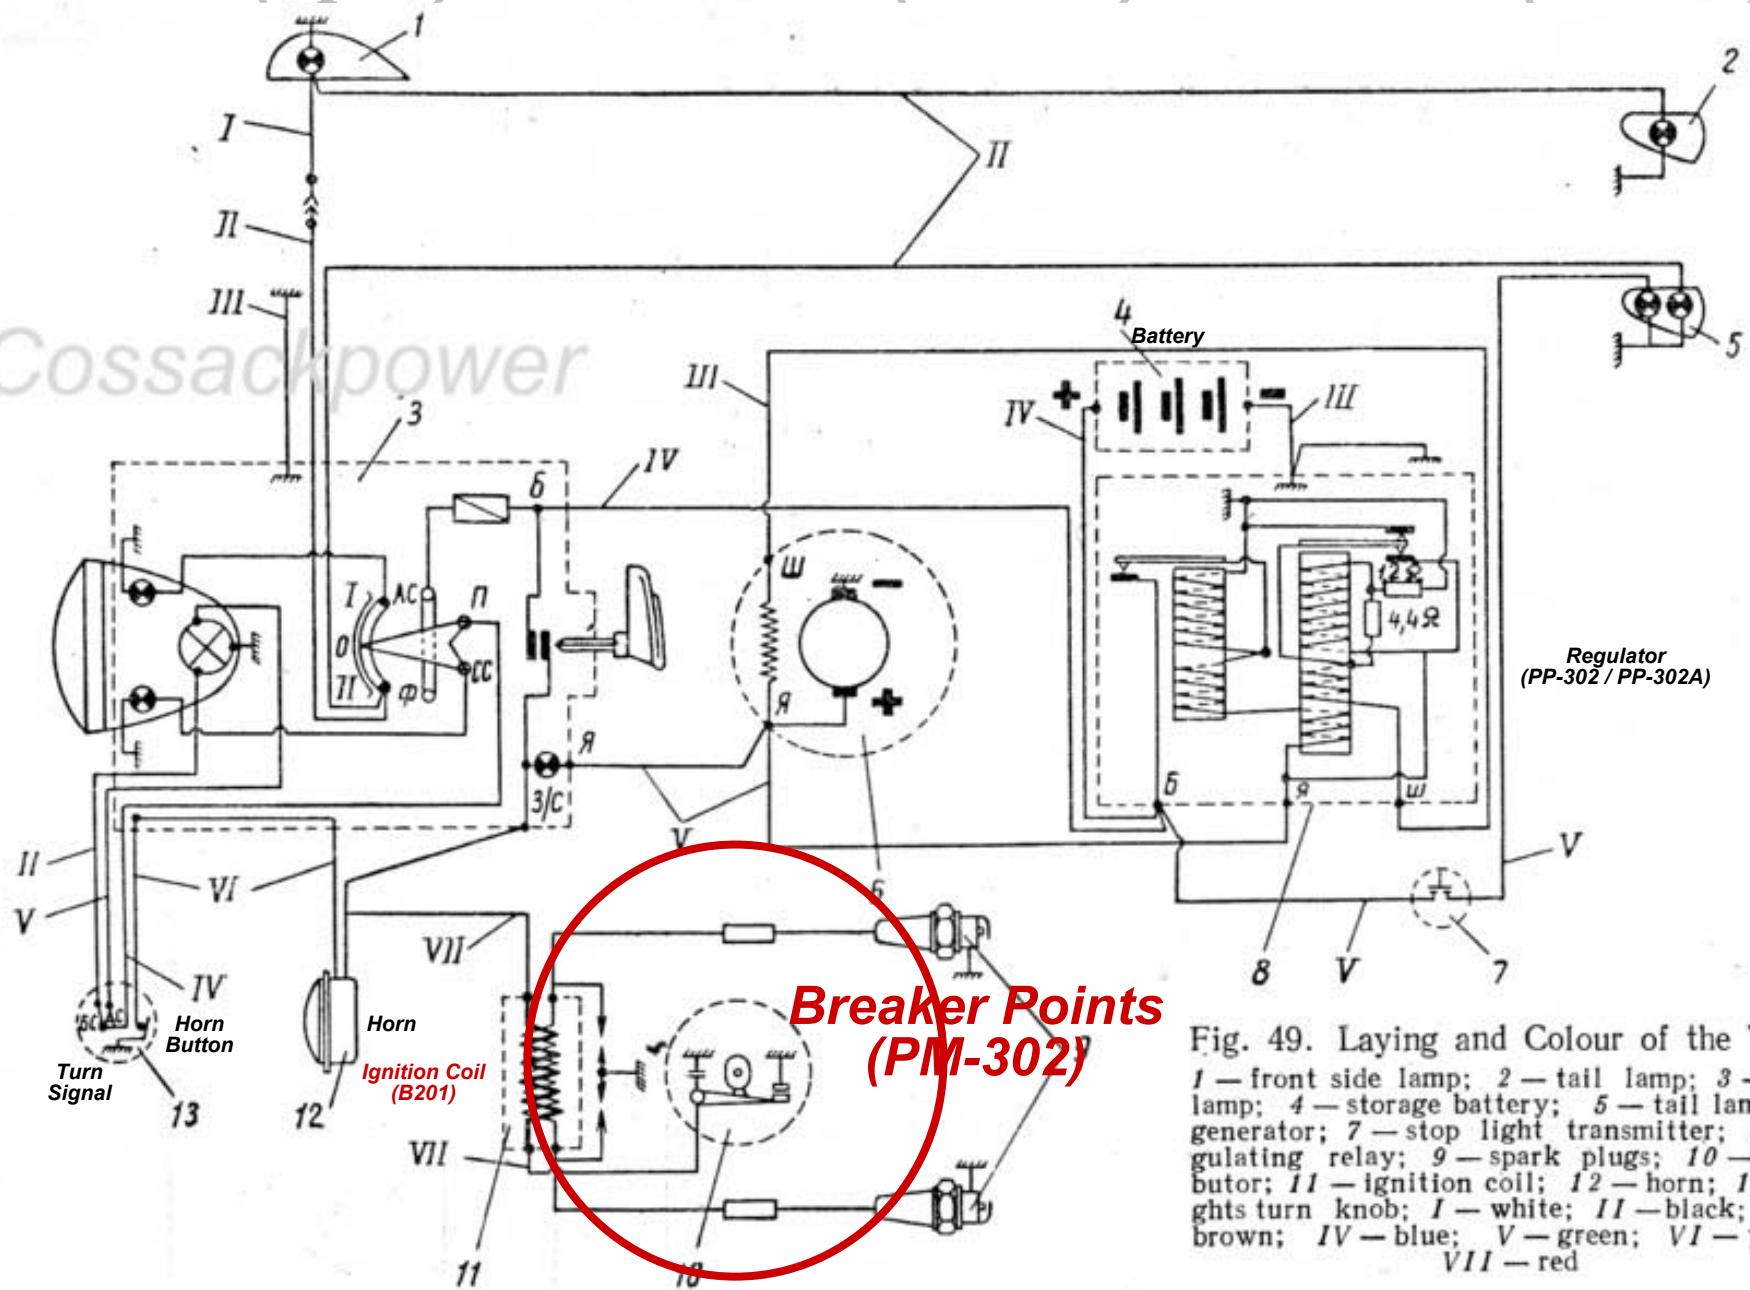



Fig. 49. Laying and Colour of the Wires:

Ural (Урал) M-66 (Ural-3)

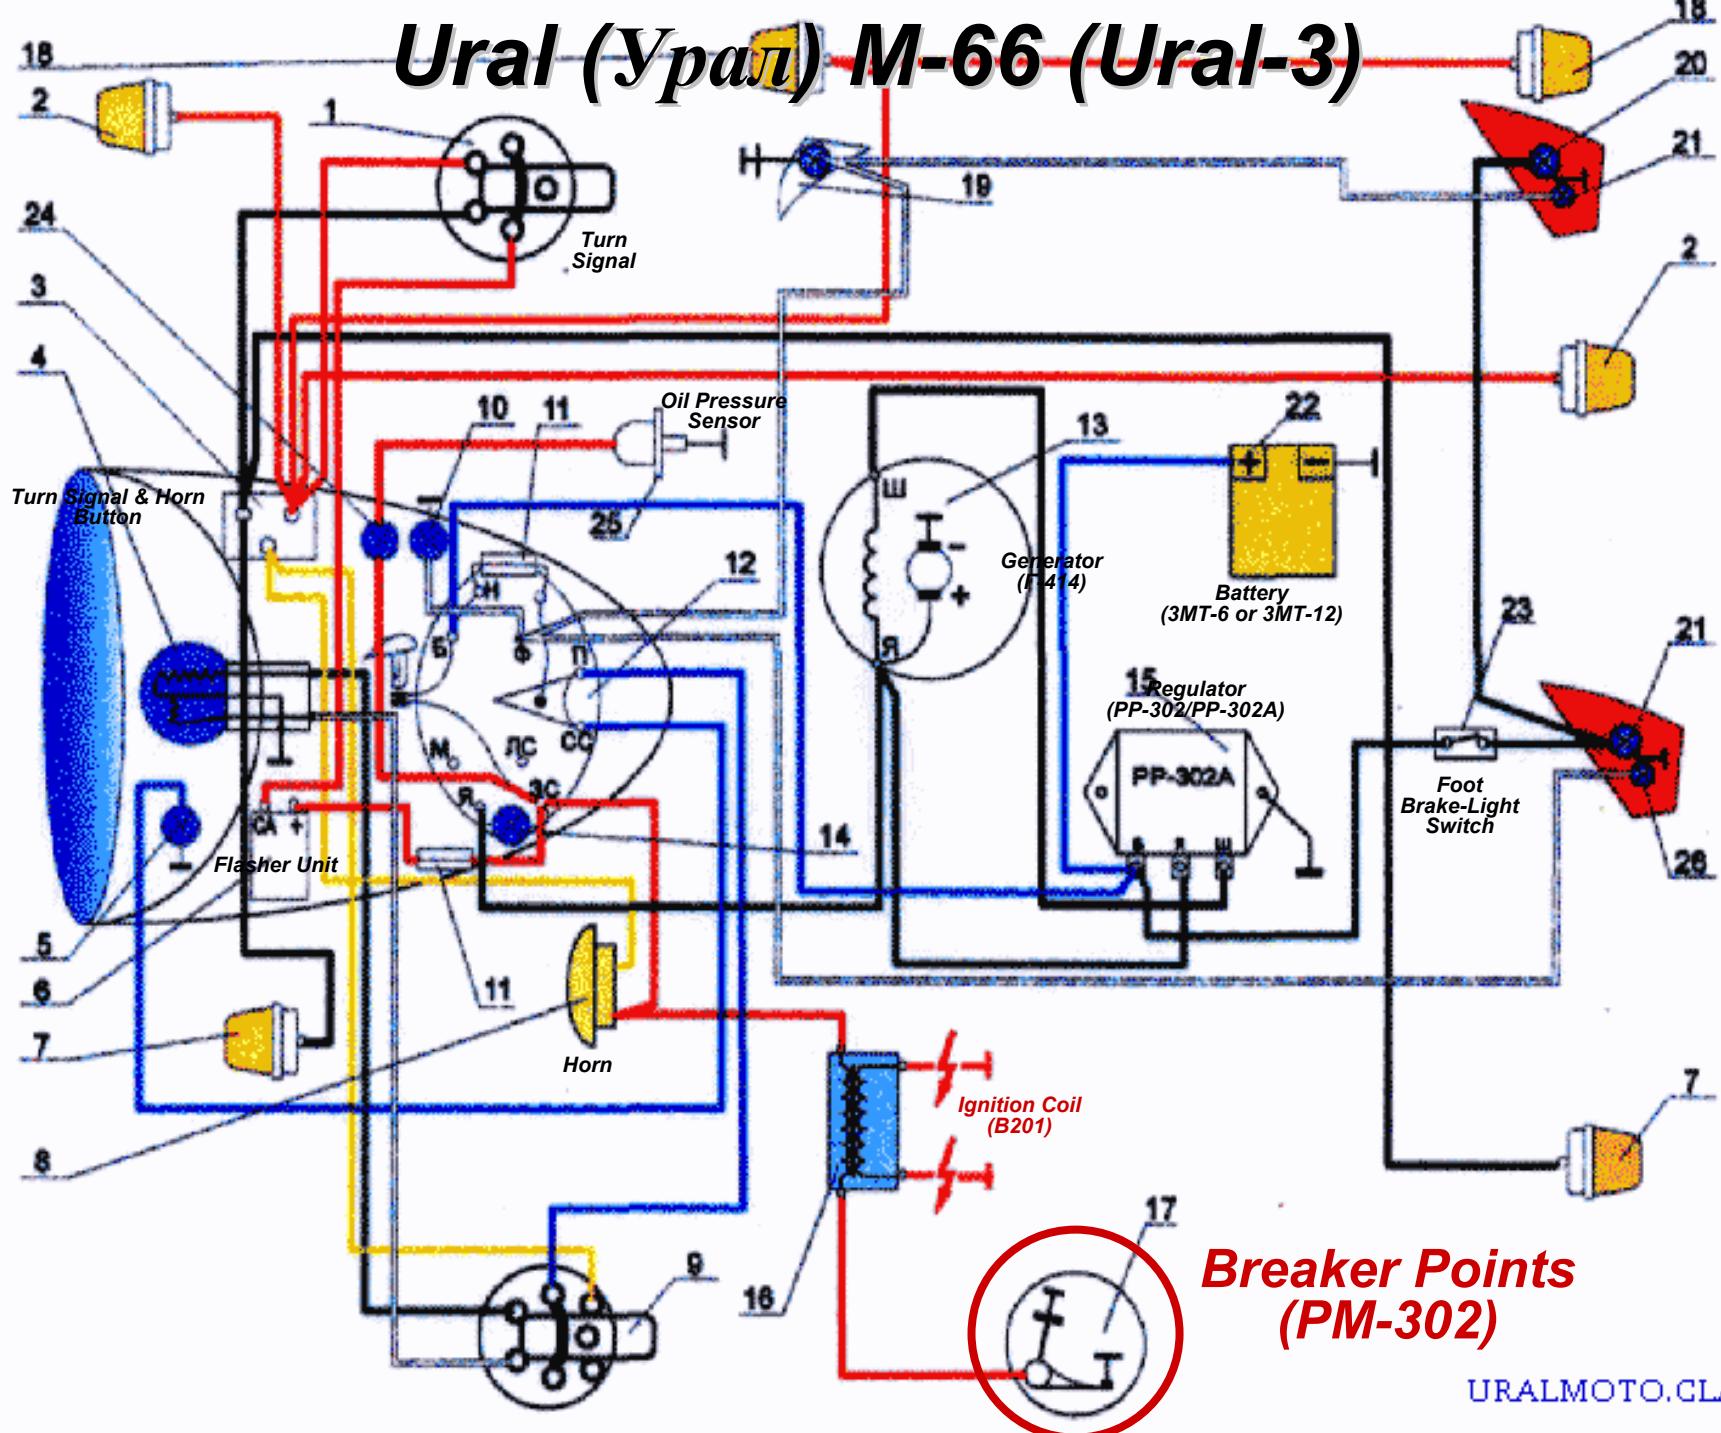

**Breaker Points
(PM-302)**

Ural (Урал) M-66 (Ural-3)

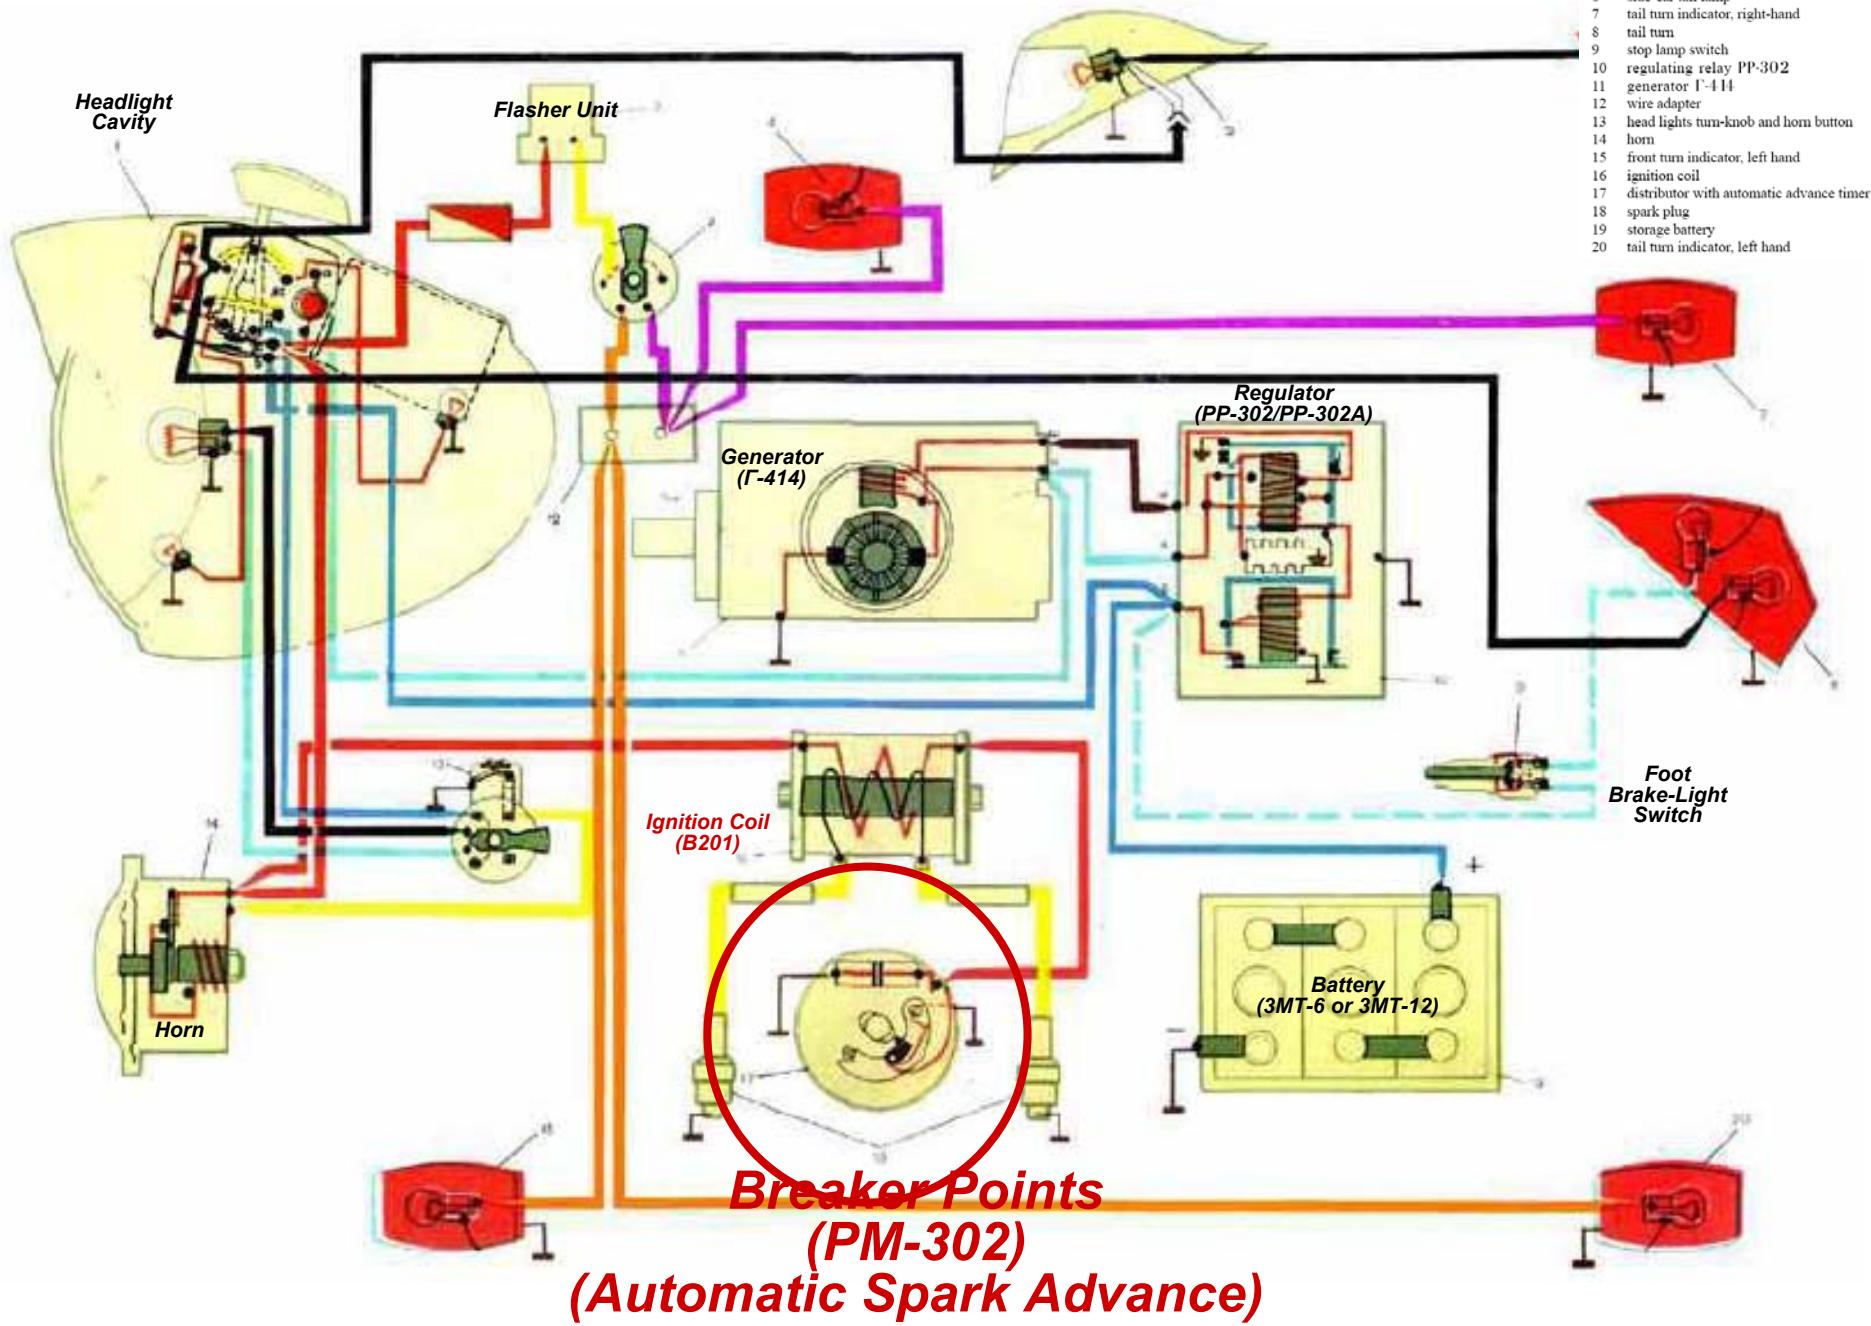

Ural (Урал) M-67 and M-67.36


(www.shematic.net/images/pages/MOTO/M67.jpg)

13. Neutral transmission indicator




6. Right Illuminated Direction Indicator

9. Turn-signal Indicator

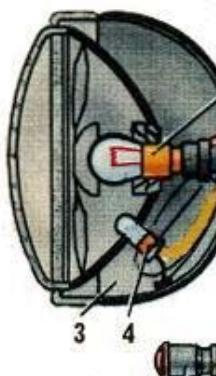

12. Generator Indicator 12

15. Central Switch

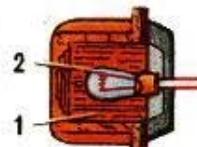

1. Left direction indicator

16. Direction Switch

Turn Signal

17. Flasher Unit

26. Regulator

8. Speedometer Light

23. Fuse Block

15. Ignition Switch

25. Horn



20
Horn Button

27. Foot Brake-Light Switch

24. Alternator

29. Battery
2 Y 3MT-6
3-MT-6

**30. Breaker Points
(PM-302/PM-302A)**

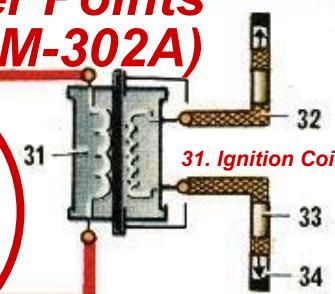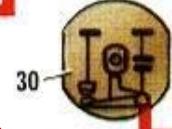


1. Left direction indicator

31. Ignition Coil

34. Spark-plugs

Ural (Урал) M-67 and M-67.36

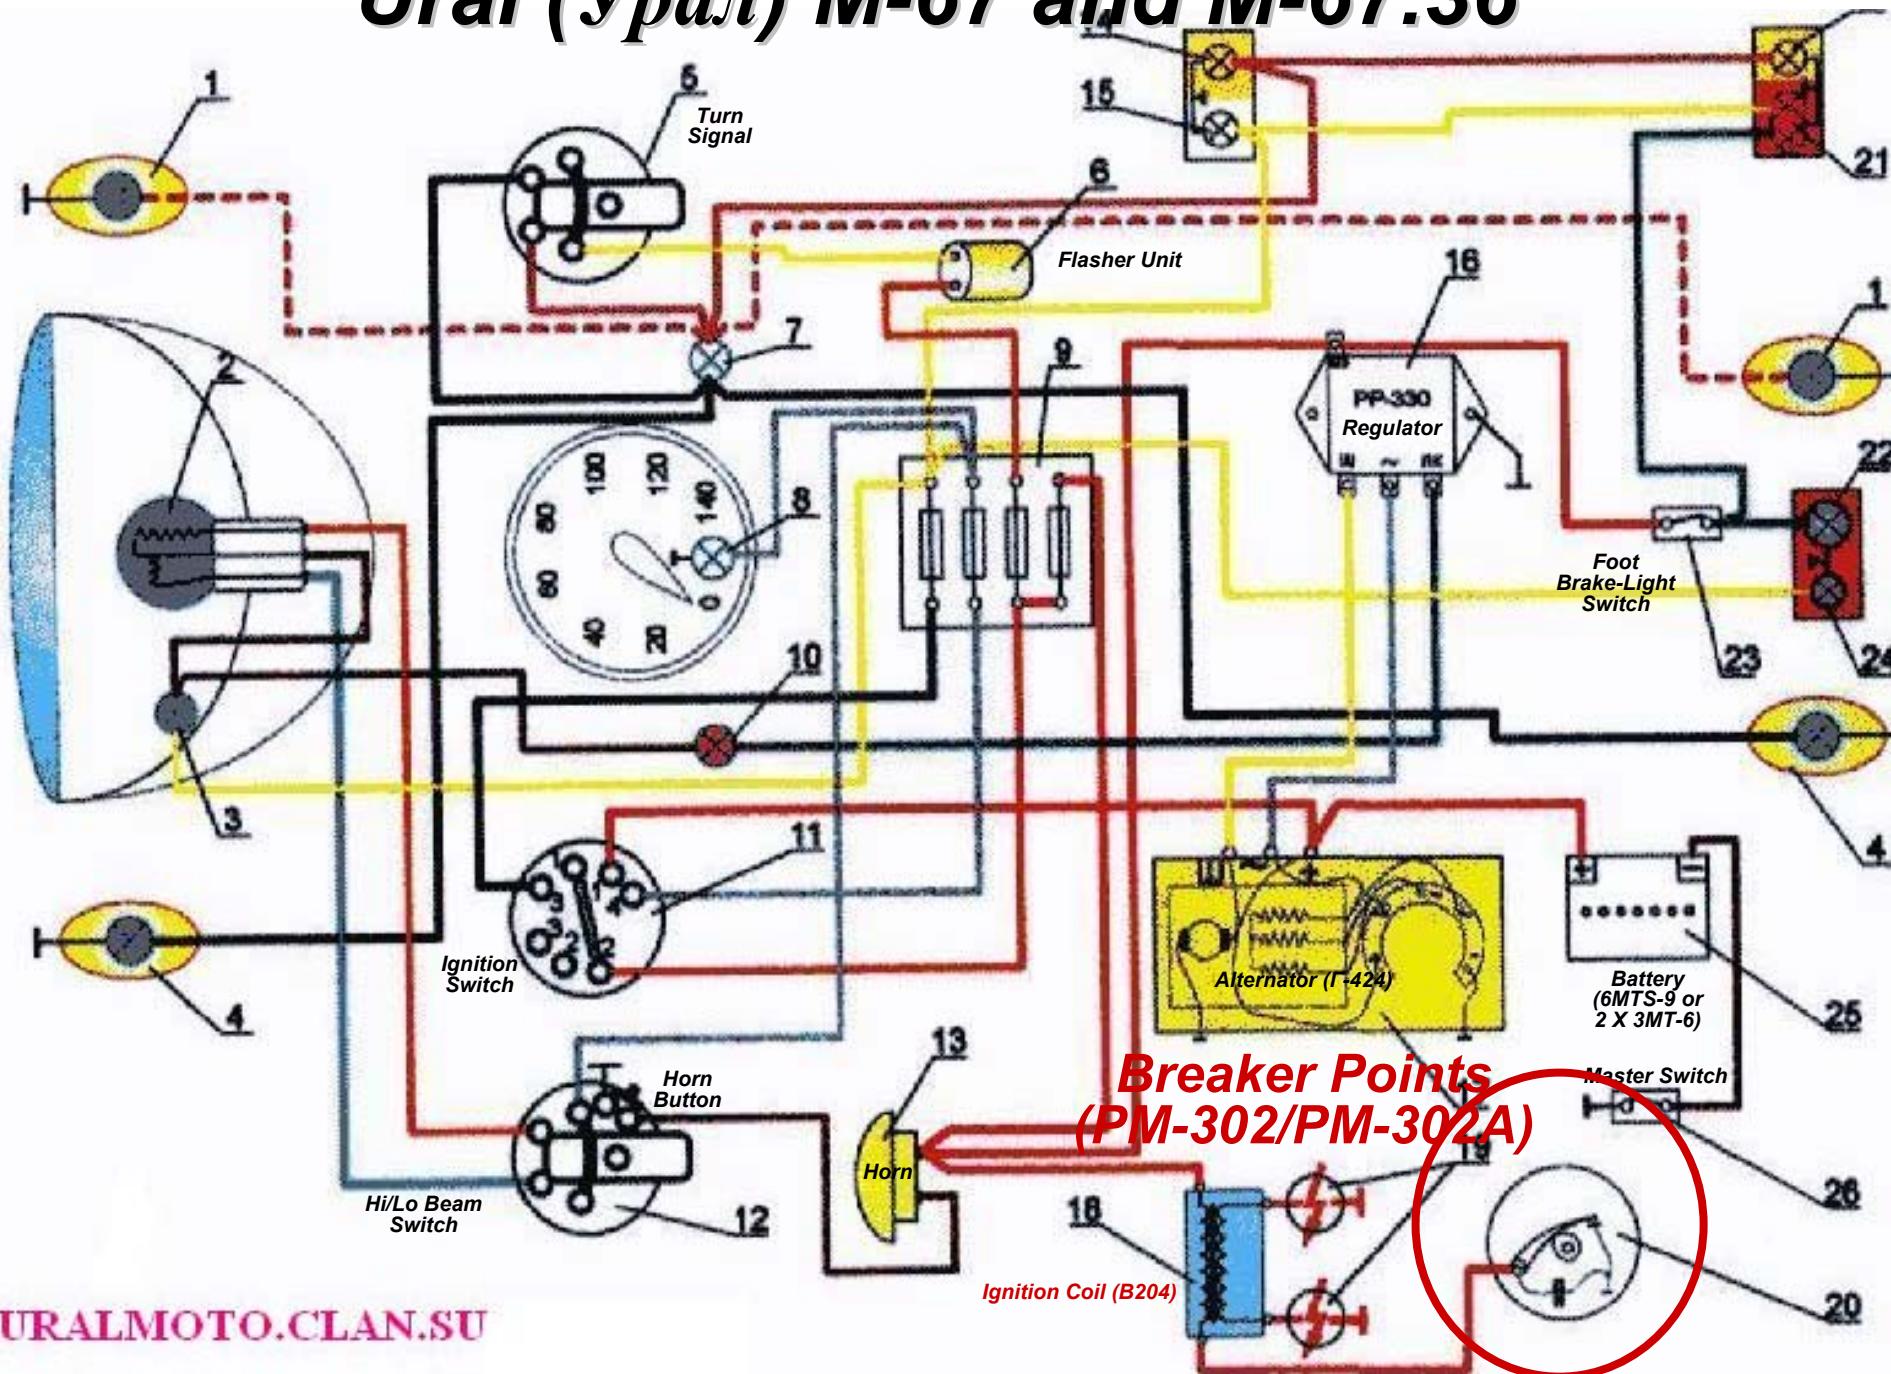


Breaker Points (PM-302/PM-302A)

1974 M67-36
17 October 2006

Carl Allison


Absolutely no guarantee that wire colors are correct.

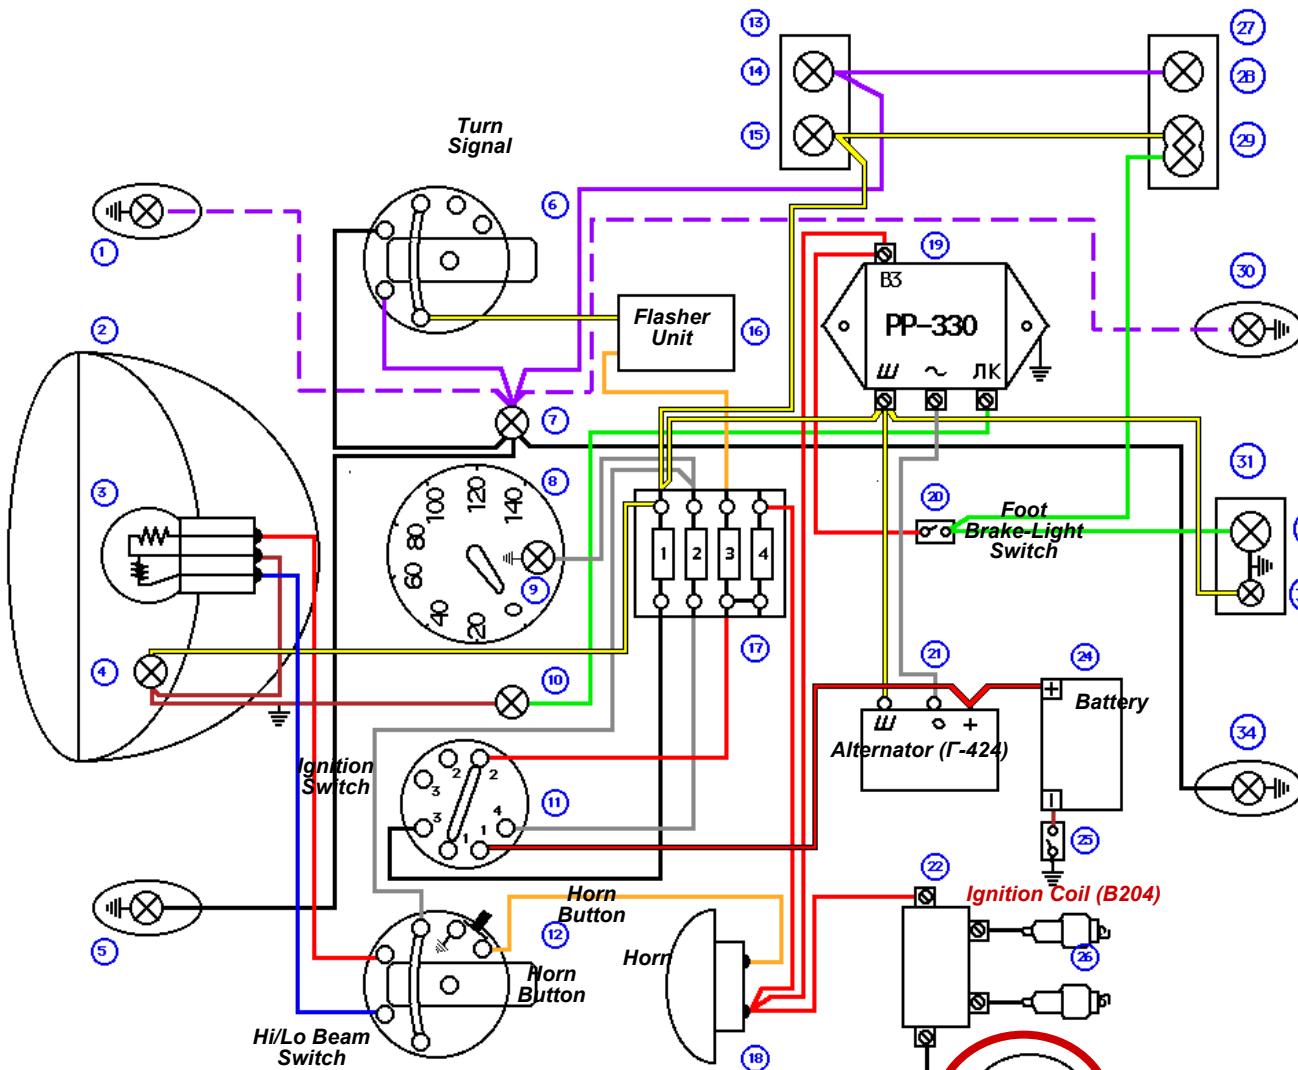

**Breaker Points
(PM-302/PM-302A)**

1. Right front turn indicator (sidecar not attached)
2. Headlight
3. Hi/Lo headlamp bulb
4. Parking lightbulb
5. Left front turn indicator
6. "Day/night" switch, Run/Stop switch
7. Highbeam ON indicator bulb of lamp
8. Speedometer
9. Speedometer light
10. Alternator warning light
11. Ignition switch
12. Light and turn indicator switch, horn button
13. Sidecar front light
14. Sidecar front side and parking light
15. Sidecar front running light
16. Flasher
17. Fuse block
18. Horn
19. Regulator
20. Rear brake light switch
21. Alternator
22. Ignition module
23. Points
24. Battery
25. Master Battery Switch*
26. Spark plugs
27. Sidecar rear light
28. Sidecar rear side and parking light
29. Sidecar brake and taillight
30. Rear right turn indicator (sidecar not attached)
31. Motorcycle rear light
32. Motorcycle brake light
33. Motorcycle tail light
34. Rear left turn indicator

* Deleted on electric start


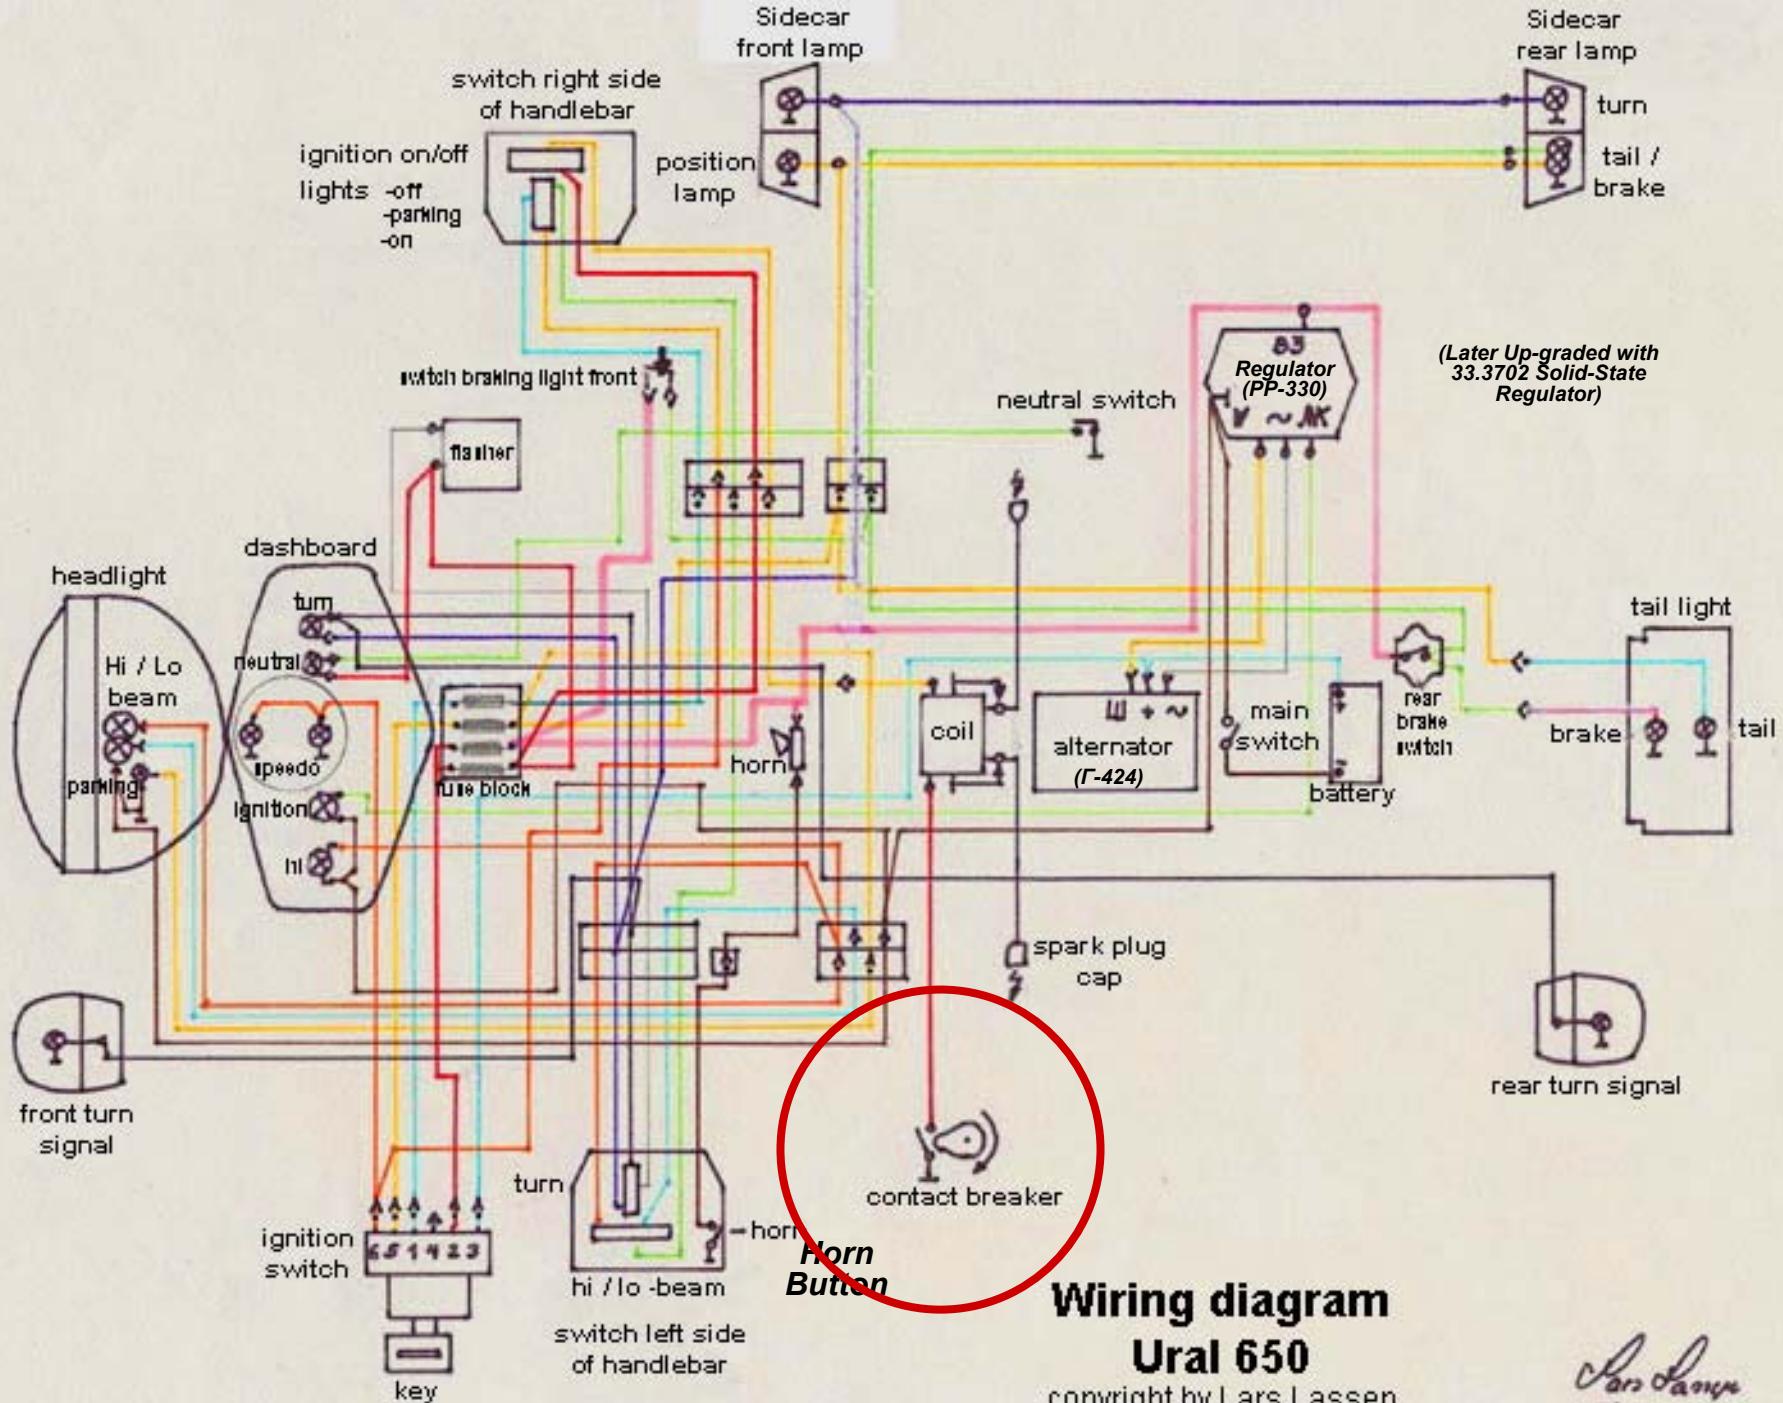


Wiring diagram
Ural 650

copyright by Lars Lassen

Lars Lassen
29.12.93

МВ-650М

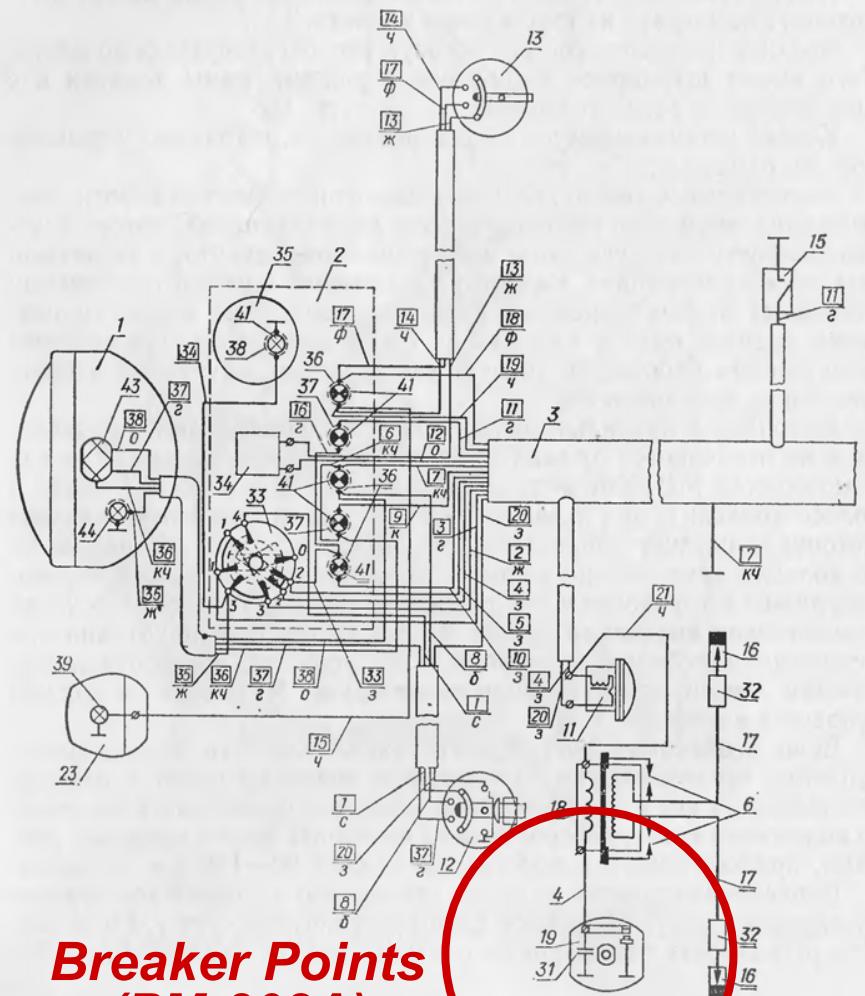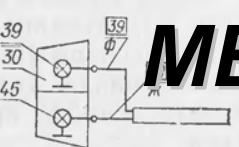

Breaker Points (PM-302A)

Рис. 35. Схема

1 — фара ФГ137; 2 — панель приборов; 3 — пучок проводов мотоцикла; 4 — провод предохранителей ПР11-В; 6 — разрядники катушки зажигания; 7 — провод «массы» аккумулятора; 9 — провод аккумулятора; 10 — генератор 1424; 11 — сигнал 304; 12 — переключатель торможения ВК854; 15 — датчик аварийного давления масла ММ126; 16 — свеча 19 — прерыватель ПМ302А; 20 — аккумуляторная батарея ЗМТ6; 21 — реле-регулятор мотоцикла задний ФП246; 25 — блок предохранителей ПР11-В; 26 — пучок проводов мотоцикла задний ФП246; 30 — фонарь передней коляски ФП232Б; 31 — конденсатор прерывательного переключателя ВК857; 34 — реле-прерыватель РС427; 35 — спидометр СП102; 36 — переключатель А12-21 + 6; 41 — лампа А12-21 + 6; 41 — лампа А12-8; 46 — штекерное соединение

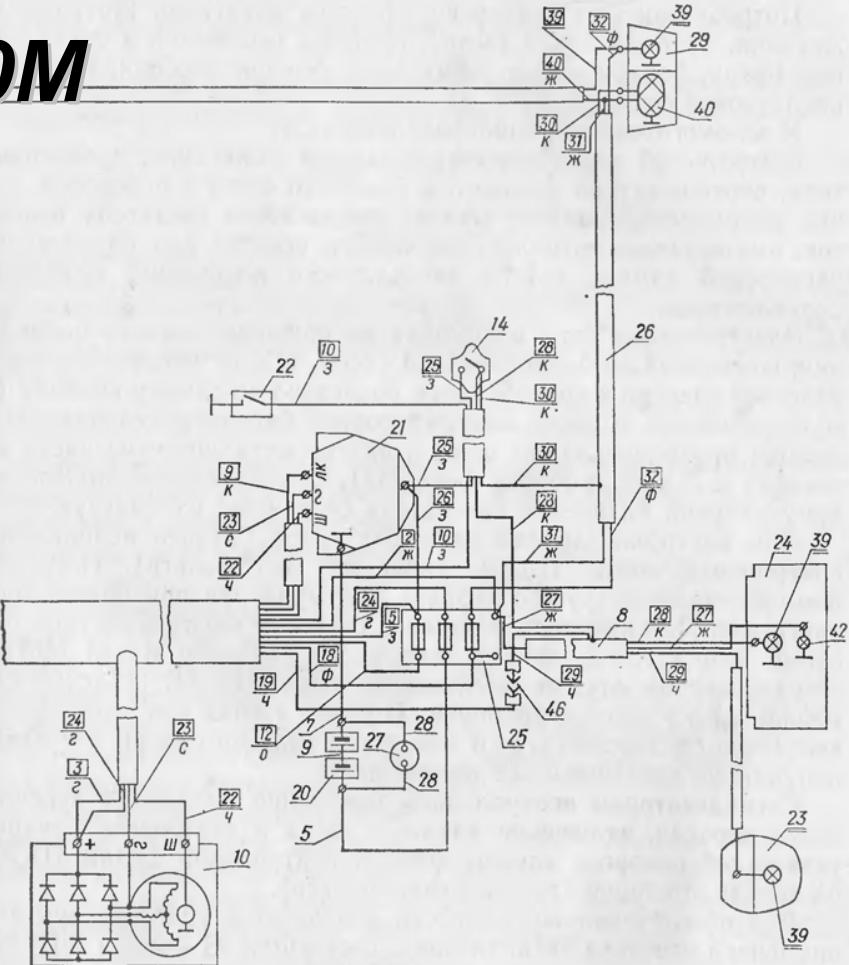


Схема коммутации центрального переключателя ВК857

Положение ключа

Зажигание \varnothing

Фара \varnothing

Габаритные огни \varnothing	III			0			I			II		
	+	-	+	-	+	-	+	-	+	-	+	-
“+” источника питания	+				+		+		+		+	
“-” источника питания		+		+		+		+		+		+

Обозначение клемм	Наименование клемм
1-1	„+“ источника питания
2-2	Зажигание
3-3	Габаритные огни
4	Фара


электрооборудования:

бобина-прерыватель; 5 — провод аккумуляторная батарея ЗМТ6 — блок предохранителей; 6 — реле РР330; 8 — пучок проводов выключателя сигнала торможения и задних фонарей света П25; 13 — переключатель поворотов П201; 14 — выключатель сигнализации зажигания А14В; 17 — провод высокого напряжения; 18 — катушка зажигания Б204; РР330; 22 — пробка контакта; 23 — фонарь указателя поворота УП223Б; 24 — фонарь фонарей коляски; 27 — розетка; 28 — провод аккумулятора — розетка; 29 — фонарь задний телевизора; 32 — наконечник свечи с помехоподавительным сопротивлением; 33 — центральный фонарь контрольной лампы ПД20Д; 37 — фонарь контрольной лампы ПД20Е; 38 — фонарь А12-3; 42 — лампа А12-45 + 140; 43 — лампа А12-45


1. Left indicator lamp
2. Right direction indicator
3. Lamp indicators A12-21-3
6. Regulator
7. The switch controls the lamp Neutral
8. Switch "day-night" with the ignition safety switch
9. Switch signal inhibition handbrake
10. Relay turns
11. Lamp control indicators A12-1
12. Farah
13. Lamp control inclusion of neutral
14. Lamp driving-beam headlights
15. Speedometer
16. Lamp illuminated
17. Fuse Block
18. Horn

Early Ural 8.103-10 (40), 8.123-10

19. Ignition coil
 20. Switch signal braking foot brake
 21. Rear
 22. Lamp braking signal A12-21-3
 23. Lamp marker light and license plate illumination A12-5
 24. Rechargeable Battery
 25. Switch mass
 26. Generator G-424
 27. Lamp control of the generator A12-1
 28. Lamp marker and parking light in the headlamp A12-4
 29. Lamp control beam headlights A12-1
 31. Ignition
 32. Switch light and direction indicators, horn button
 33. Breaker
 34. Sparkplug
- (Later Up-graded with 33.3702 Solid-State Regulator)

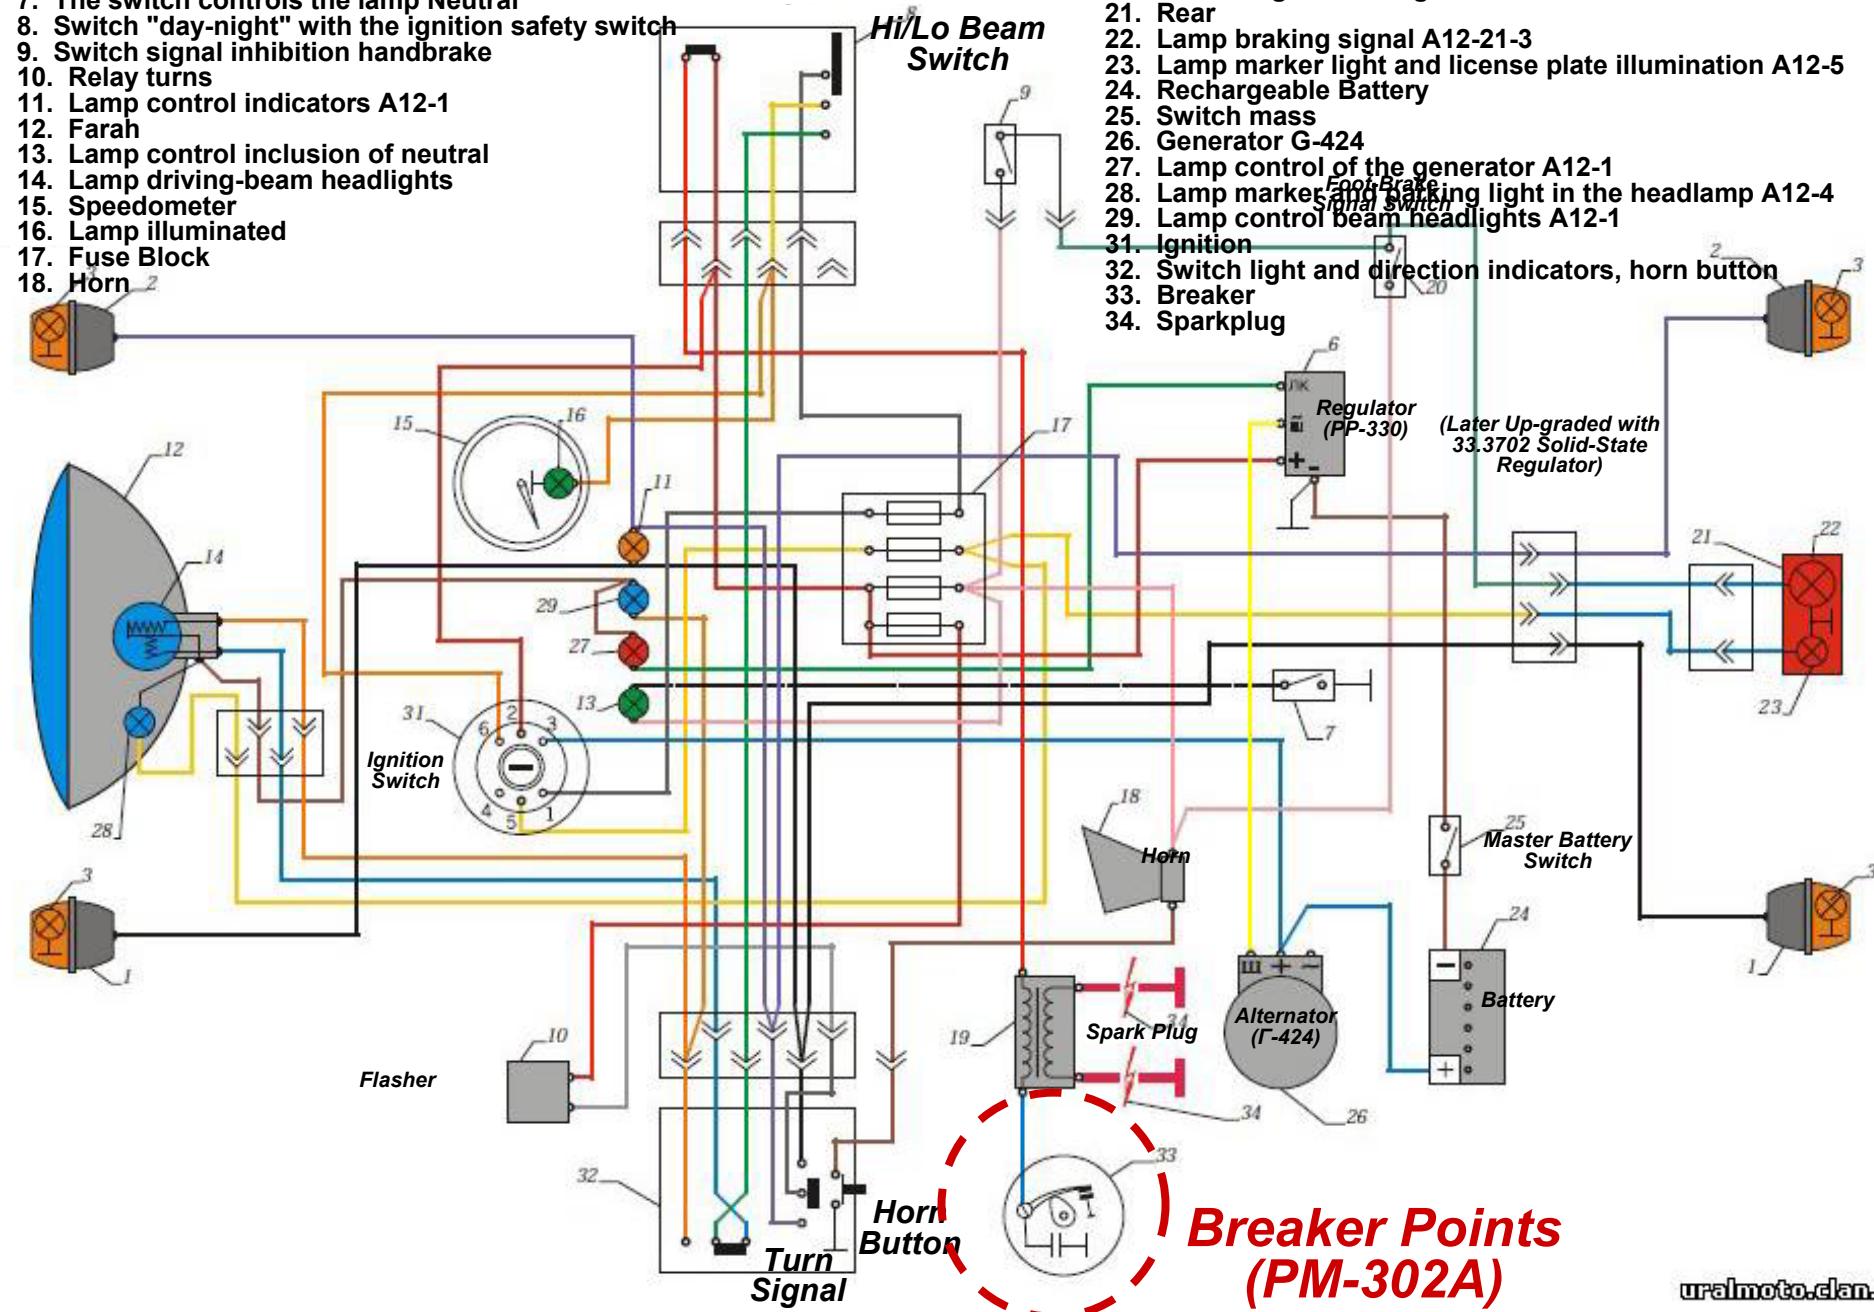


Early Ural (Урал) IMZ-8.103-10, 40

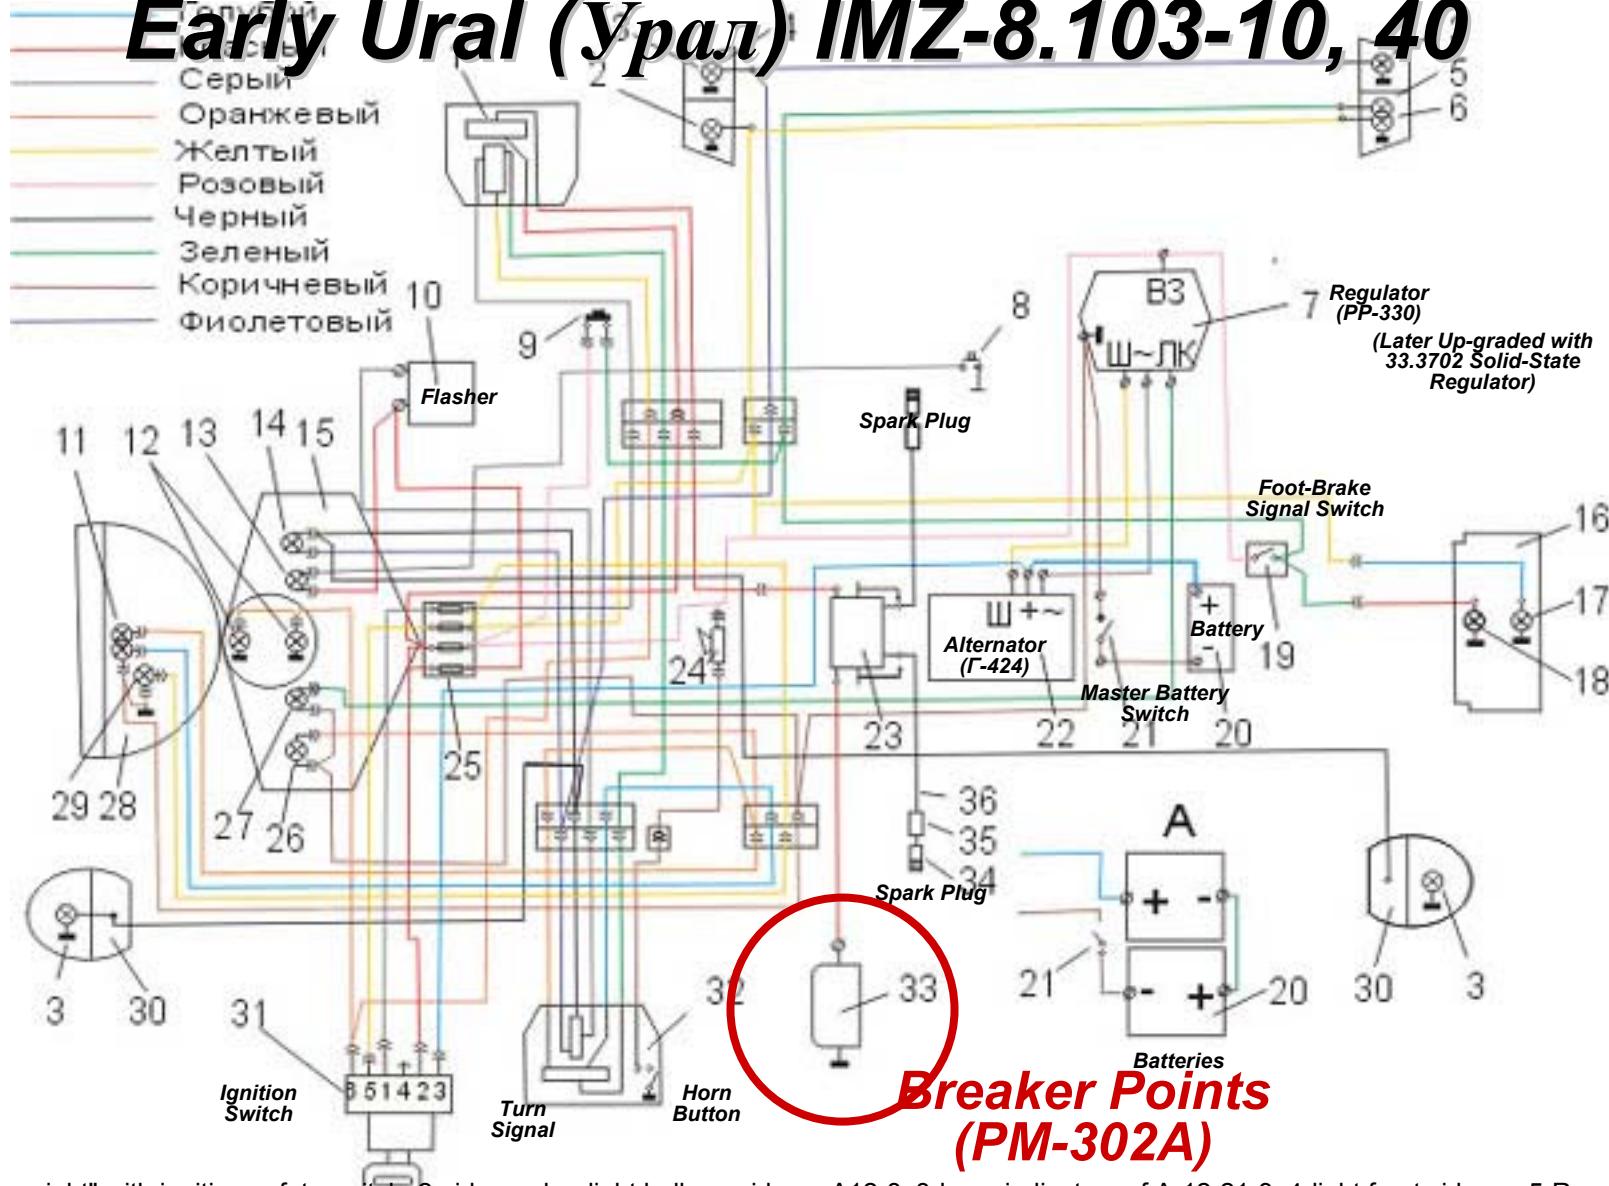

Breaker Points (PM-302A)

1-select "day-night" with ignition safety switch, 2-side marker light bulb on sidecar A12-8, 3-lamp indicators of A-12-21-3, 4-light front sidecar, 5-Rear sidecar, 6-bulb marker light and a braking signal in a wheelchair A12-212 5, 7-relays, lights, 8-contact (switch controls lamp neutral) 9-switch braking signal handbrake, 10-flashes, 11-driving lamp and low beam headlights A12-45 +40, 12-illumination speedometer A12-1, 13-light control switch neutral A12-1: 14-lamp control indicators A12-1, 15-dashboard; 16-Rear, 17-bulb marker light and license plate illumination A12-5, 18-brake signal A12-21-3, 19-switch braking signal; 20-rechargeable battery; 21-ground switch; 22-generator; 23-ignition coil, 24-horn; 25-fuse box, 26-light beam control A12-1, 27-generator lamp A12-1, 28-headlight; 29-side marker lamp and parking lamp SWERA in A12-4, 30-Index left turn; 31-ignition switch; 32-light switch and indicator lamps; 33-chopper; 34-spark plug; 35-tip of plug; 3 -high voltage wire, and A -option to connect two batteries 3MT6.


Early Ural (Урал) 8.103

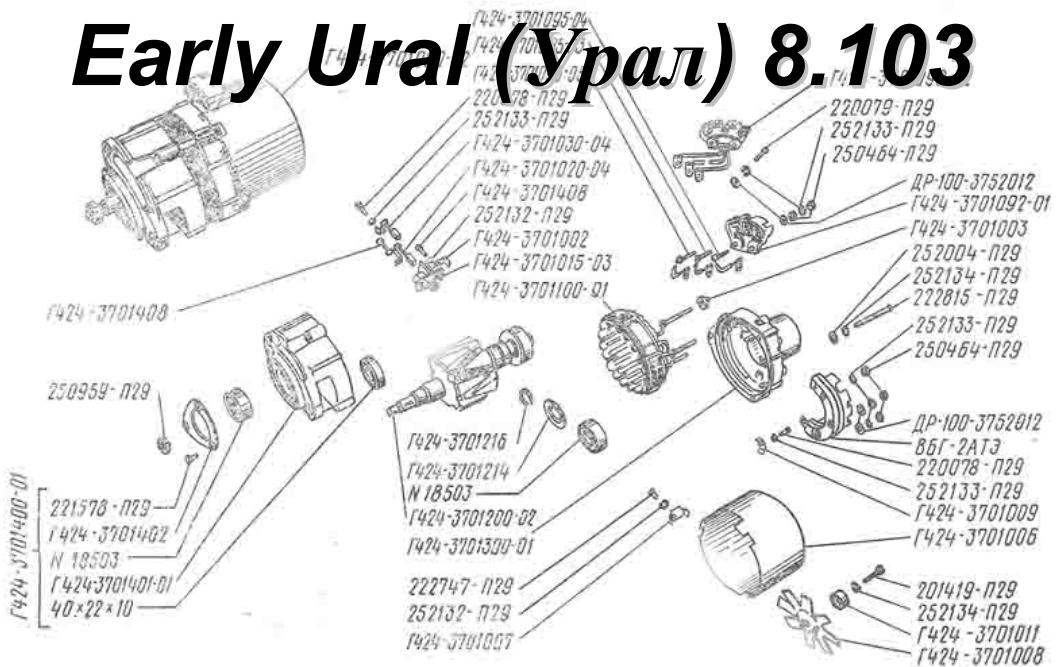


Breaker Points (PM-302)



Breaker Points (PM-302A)

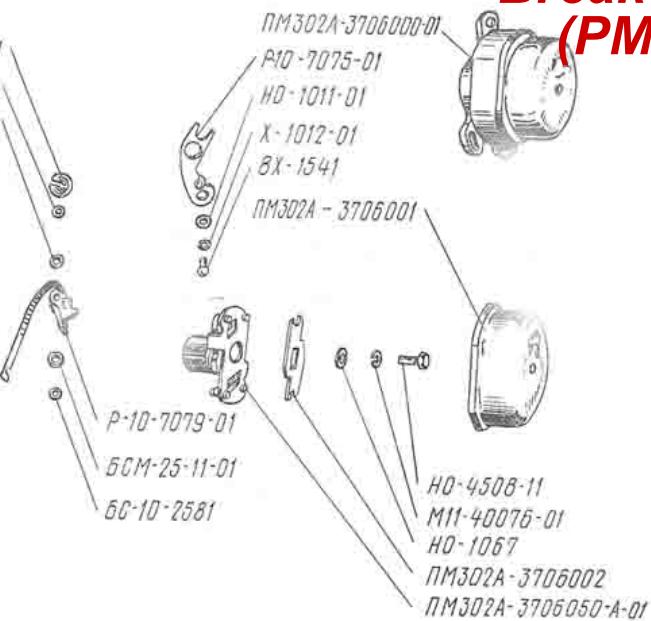


Early Ural 650 Parts

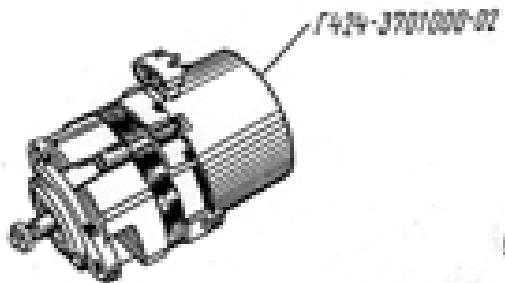

54

**Breaker Points
(PM-302A)**

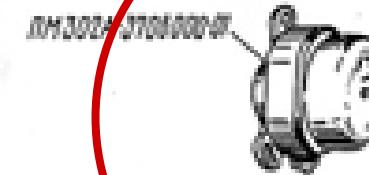

55



56



58